


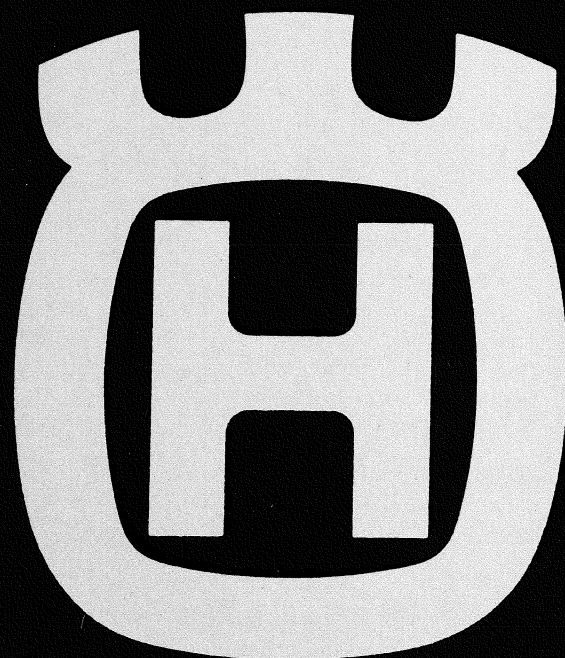

**Husqvarna
motorcycles**


*FOR
WR model
use 84 Book*

HUSQVARNA Spare Parts


1985 CR/XC Models

Valid from frame number:


CP 01000
XP 01000
WP 01000

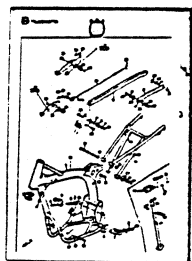

B-3

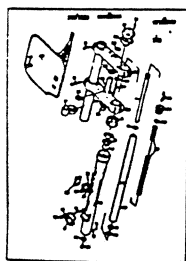


B-5

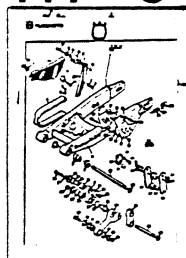


B-7




F-2

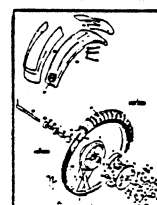

F-6

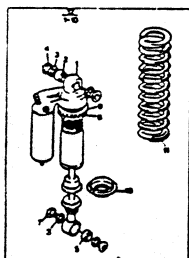

B-9

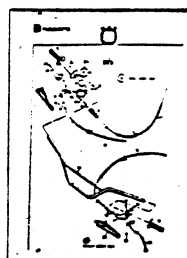


B-11



B-13




B-15

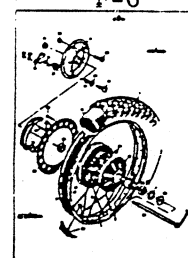


XC.....B-17
CR.....C-2




C-6

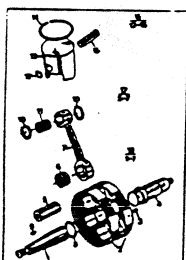


C-8

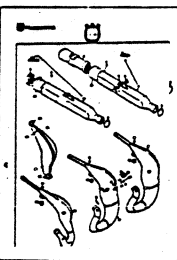


C-10

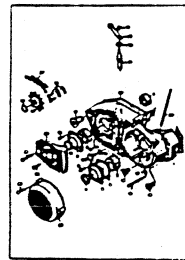


125.....C-12
250; 500...C-16

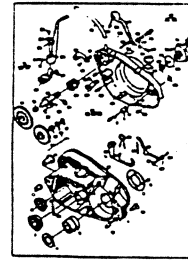


125.....D-2
250, 500...D-6

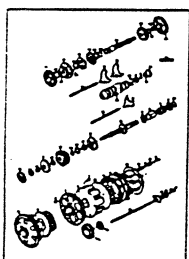


125.....D-10
250XC, 500XC..D-14
250CR.....D-18
500CR (4-SPEED)...D-20

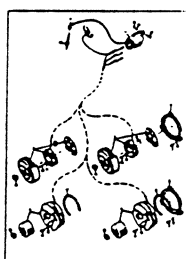


E-2

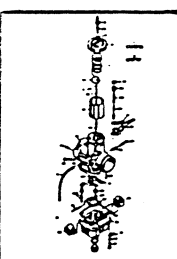


125.....E-4
250.....E-8
500.....E-12

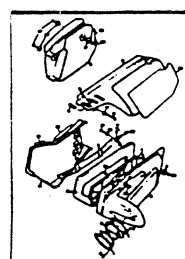

E-16

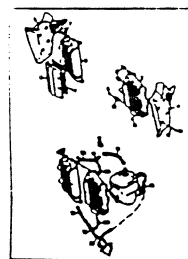

E-18

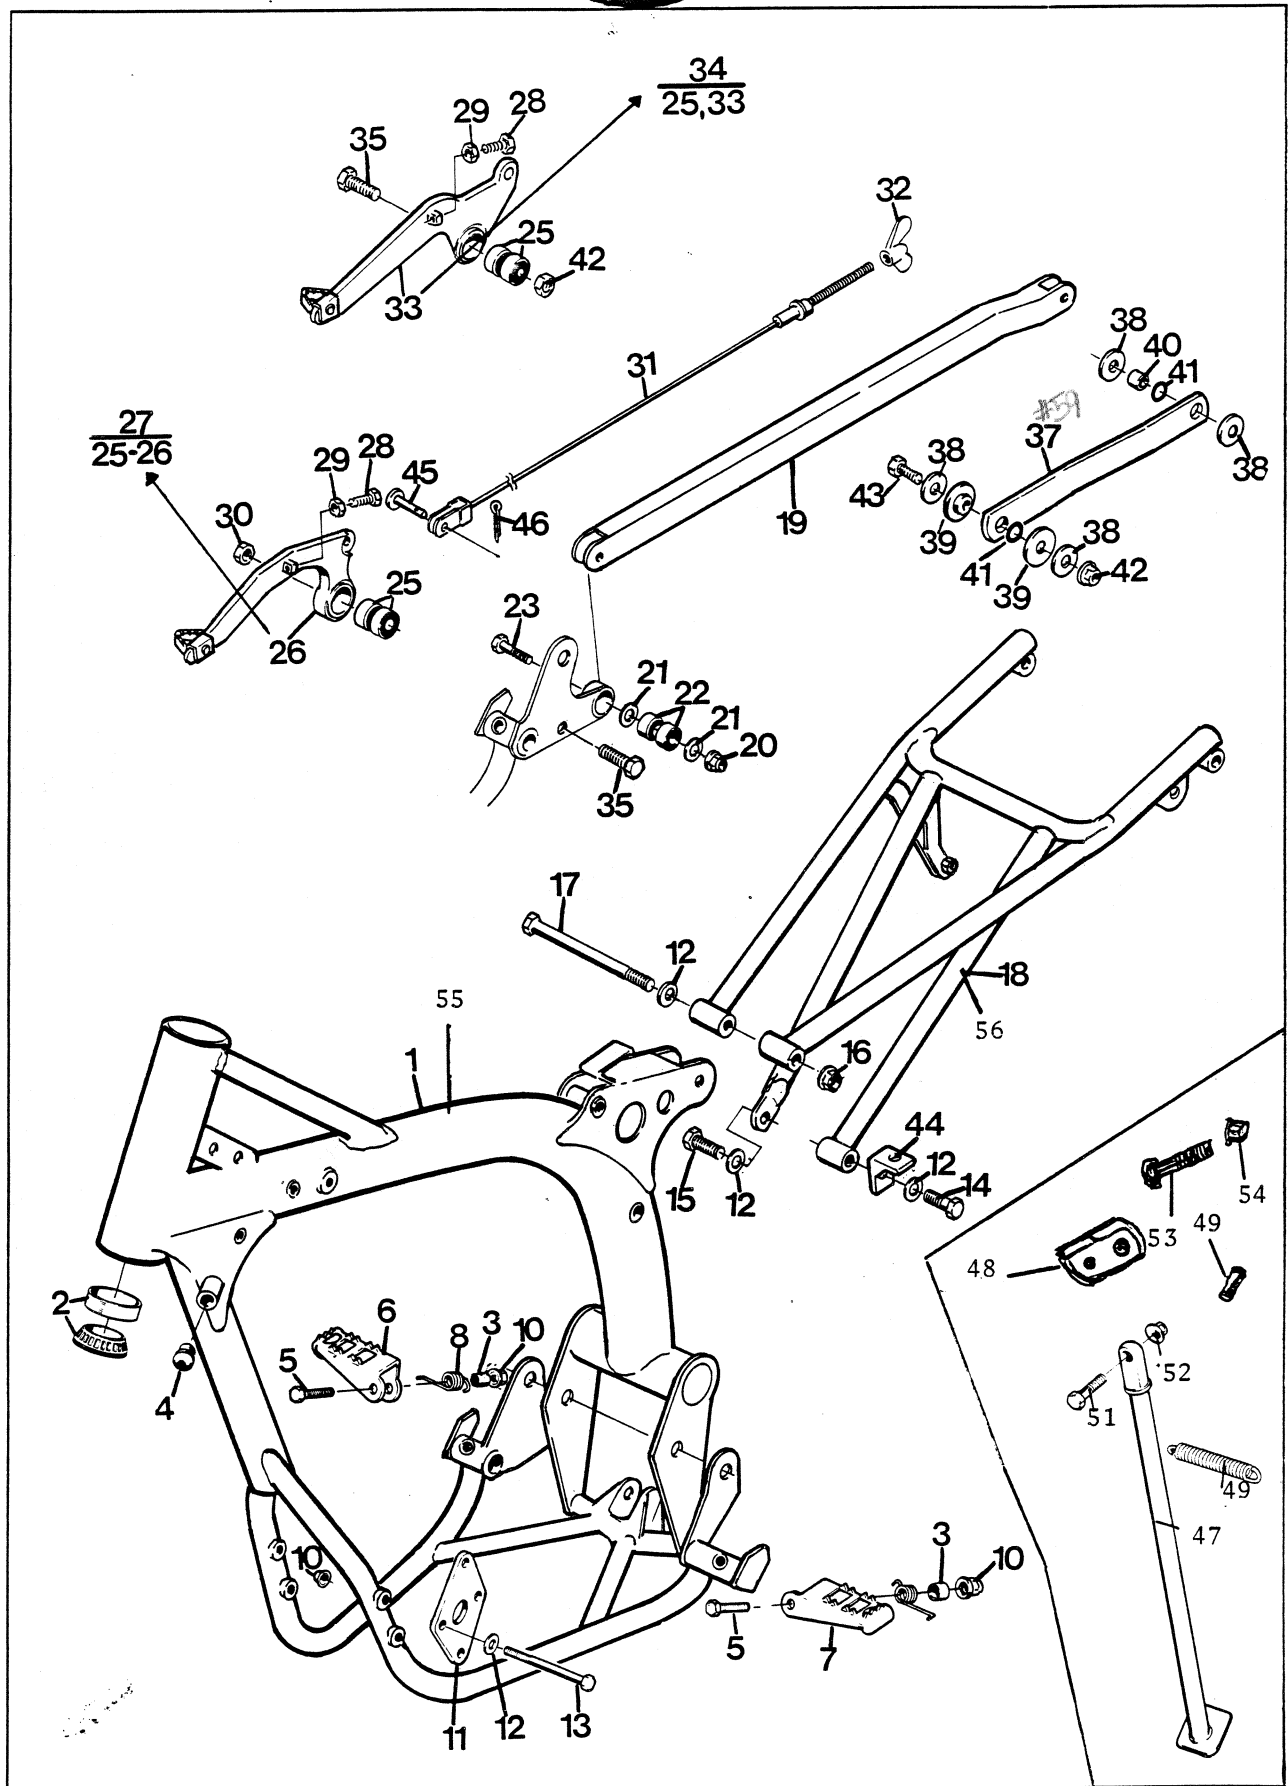

		Reservdelsnummer	Antal - Quantity										Benämning, Description	
			125			250			400		500			
Fig.	Sparepart number	CR		XC		CR	WRX	XC		WRX	CR	XC		
V	1	15 11 196-01	1			1					1		Ram. Frame	
		15 11 196-02												Ram. Frame
V		15 11 340-01							1				1	Ram. Frame
V		15 11 340-02												Ram. Frame
	2	15 13 070-01	2		1		2	2	2	2	2	2	Styrlager. Bearing	
V	3	15 19 736-01	2		2		2	2	2	2	2	2	Distans. Spacer	
	4	15 19 537-01	4		4		4	4	4	4	4	4	Propp. Plug	
	5	72 52 462-51	2		2		2	2	2	2		2	Bult. Bolt M8 x 55	
	6	15 13 051-01	1		1		1	1	1	1	1	1	Fotpinne, höger. Foot peg, right	
	7	15 13 053-01	1		1		1	1	1	1	1	1	Fotpinne, vänster. Foot peg, left	
V	8	15 13 615-01	1		1		1	1	1	1	1	1	Fjäder, höger. Spring left	
V	9	15 13 616-01	1		1		1	1	1	1	1	1	Fjäder, vänster. Spring, left	
	10	15 13 707-01	2		2		2	2	2	2	2	2	Mutter M8. Nut	
V	11	15 11 276-01	2		2								Motorfästplåt	
V		15 11 253-01				2	2			2	2	2	Engine mounting plate	
													Motorfästplåt	
													Engine mounting plate	
	12	73 41 164-01	9		9		9	9	9	9	9	9	Bricka. Washer	
	13	72 52 472-81	2		2		2	2	2	2	2	2	Bult M8 x 105. Bolt	
		72 52 461-81	4		4		4	4	4	4	4	4	Bult M8 x 50. Bolt	
	14	72 52 461-81	1		1		1	1	1	1	1	1	Bult M8 x 50. Bolt	
	15	72 52 451-51	1		1		1	1	1	1	1	1	Bult M8 x 20. Bolt	
	16	15 13 707-01	1		1		1	1	1	1	1	1	Mutter M8. Nut	
N	17	72 52 477-81	1		1		1	1	1	1	1	1	Bult M8 x 130. Bolt	
N	18	15 11 225-01	1				1				1		Sadelbrygga. Rearframe	
N		15 11 225-02			1				1			1	Sadelbrygga. Rearframe	
N	19	15 15 511-01	1				1				1		Bromslänk. Brake stay arm	
	20	73 22 116-01	1				1				1		Mutter M6. Nut	
	21	73 41 153-41	4				4				4		Bricka. Washer	
	22	73 82 302-34	2				2				2		Lager. Bearing	
	23	72 52 374-51	2				2				2		Bult M6 x 30. Bolt	
	25	73 82 198-04	2				2				2		Lager. Bearing	
N	27	15 15 510-01	1				1				1		Bromspedal kpl. med lager	
													Brake lever compl. with bearing	
	28	72 52 371-51	1				1				1		Skruv M6 x 22. Screw	
	29	73 22 116-01	1				1				1		Mutter M6. Nut	
	30	73 22 118-01	1				1						Mutter M8. Nut	
N	31	15 11 303-01	1				1				1		Bromswire. Brake cable	
		15 11 303-02			1			1	1		1	1	Bromswire	
													Brake cable	
	32	15 15 173-01	1		1		1	1	1	1	1	1	Vingmutter. Wingnut	
N	34	15 15 528-01			1				1			1	Bromspedal kpl.	
		15 15 550-01						1		1			Brake lever compl.	
	35	72 52 455-51	1		1		1	1	1	1	1	1	Skruv M8 x 30. Screw	
N	37	15 15 503-01			1		X	1	X			1	Bromslänk. Brake stay arm	
	38	50 32 300-07			4		4	4	4	4	4	4	Bricka. Washer	
N	39	15 15 508-01			2		2	2	2	2	2	2	Distans. Spacer	
	40	15 15 504-01			1		1	1	1	1	1	1	Distans. Spacer	
	41	74 04 211-00			2		2	2	2	2	2	2	O-ring	
	42	73 22 118-01			1		1	1	1	1	1	1	Mutter M8. Nut	
	43	72 52 455-51			1		1	1	1	1	1	1	Skruv M8 x 30. Screw	
N	44	15 13 319-01	1		1		1	1	1	1	1	1	Fäste	
													Attachment	
	45	15 16 289-01	1		1		1	1	1	1	1	1	Bult	
													Bolt	
	46	72 16 150-01	1		1		1	1	1	1	1	1	Pinne	
													Pin	
	47	15 10 604-03			1		1	1		1		1	Kick stand	
	48	15 15 530-01			1		1	1		1		1	Attachment	
	49	15 15 542-01			1		1	1		1		1	Spacer	
	50	15 10 442-01			1		1	1		1		1	Spring	
	51	72 52 455-51			1		1	1		1		1	Screw	
	52	73 22 118-01			1			1		1		1	Nut M8	
	53	15 13 744-01			1		1	1		1		1	Screw	
	54	73 22 120-01			1		1	1		1		1	Nut M10	
	55	15 11 319-03					1			1			Frame	
	56	15 11 341-01					1			1			Rear frame	
	59	15 15 545-01											Brake stay arm	

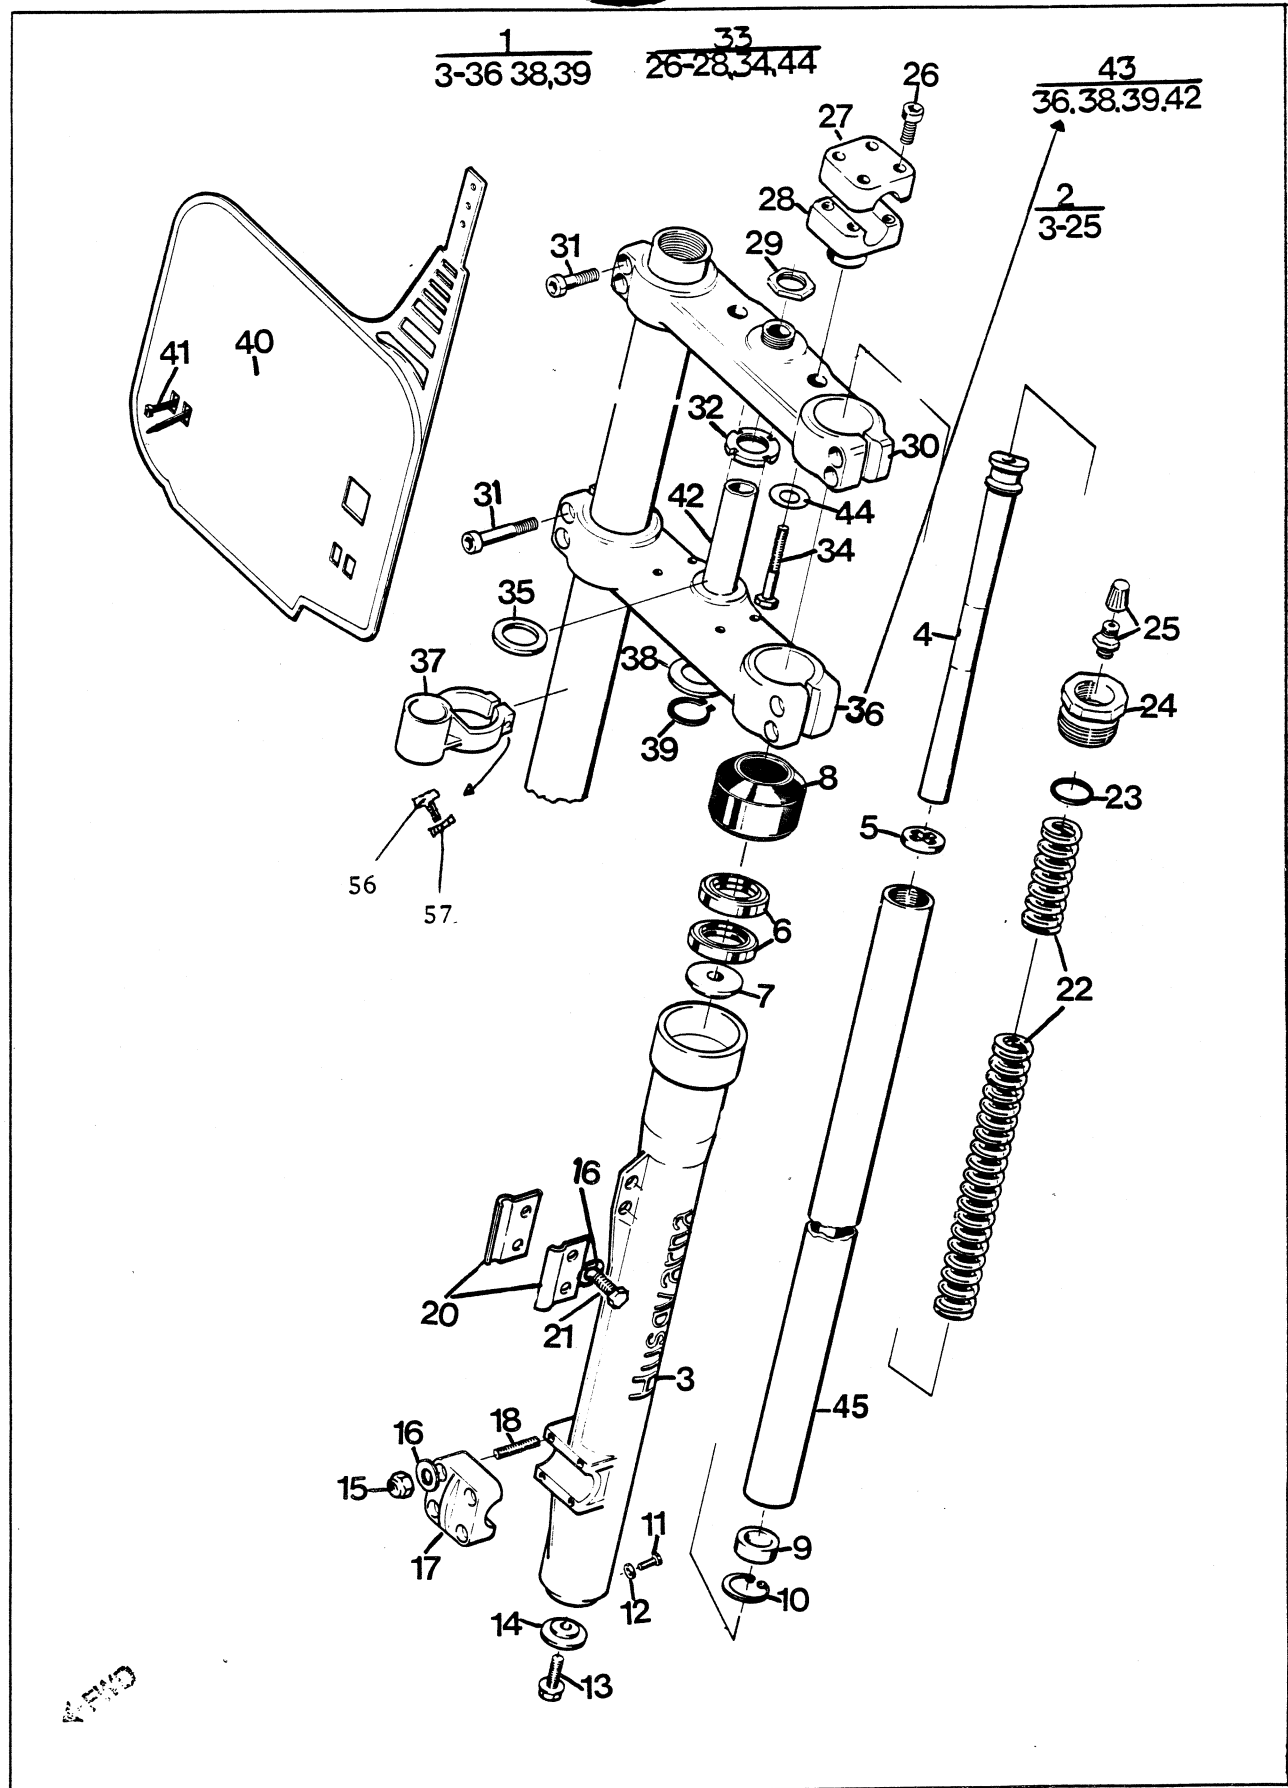


Fig.	Reservdelnummer Sparepart number	Antal - Quantity										Benämning, Description	
		125				250			400		500		
		CR	XC			CR	WRX	XC	WRX	CR	XC		
N	1	15 12 406-01	1	1		1	1	1	1	1	1	Framgaffel kpl. Front fork compl.	
N	2	15 12 408-01	2	2		2	2	2	2	2	2	Gaffelben kpl. Fork leg compl.	
N	3	15 12 405-01	2	2		2	2	2	2	2	2	Gaffelben, undre. Fork leg lower	
	4	15 12 399-01	2	2		2	2	2	2	2	2	Dämpspindel. Damping spindel	
	5	15 12 373-01	2	2		2	2	2	2	2	2	Tättningsbricka. Seal washer	
	6	15 12 402-01	4	4		4	4	4	4	4	4	Tättningsring. Seal	
	7	15 12 376-01	2	2		2	2	2	2	2	2	Stödblicka. Support washer	
	8	15 12 372-01	2	2		2	2	2	2	2	2	Avstrykare. Scraper	
	9	15 12 398-01	2	2		2	2	2	2	2	2	Bottenventil. Valve ring	
	10	73 53 133-10	2	2		2	2	2	2	2	2	Spårring. Circlip	
	11	72 31 362-01	2	2		2	2	2	2	2	2	Skruv M6 x 8. Screw	
	12	16 10 823-01	2	2		2	2	2	2	2	2	Bricka. Washer	
	13	72 52 457-51	2	2		2	2	2	2	2	2	Skruv M8 x 35. Screw	
	14	15 12 161-01	2	2		2	2	2	2	2	2	Bricka. Washer	
	15	73 22 116-51	8	8		8	8	8	8	8	8	Mutter M6. Nut	
	16	73 41 153-01	8	8		8	8	8	8	8	8	Bricka. Washer	
	17	15 12 379-01	2	2		2	2	2	2	2	2	Överfall. Clamp	
	18	15 12 371-01	8	8		8	8	8	8	8	8	Pinnskruv. Stud	
	20	15 16 348-01	2	2		2	2	2	2	1	1	Slanghållare inre. Hose holder	
	21	72 52 368-53	2	2		2	2	2	2	2	2	Skruv M6 x 16. Screw	
N	22	15 12 378-02	2	2		2	2	2	2	2	2	Fjäder. Spring	
	23	15 13 719-01	2	2		2	2	2	2	2	2	O-ring	
N	24	15 12 410-01	2	2		2	2	2	2	2	2	Toppskruv. Top screw	
	25	15 12 356-01	2	2		2	2	2	2	2	2	Ventil. Valve	
	26	72 55 374-01	8	8		8	8	8	8	8	8	Skruv M6 x 30. Screw	
	27	15 13 059-01	2	2		2	2	2	2	2	2	Överfall. Clamp	
	29	15 12 329-01	1	1		1	1	1	1	1	1	Mutter. Nut	
N	30	15 12 404-01	1	1		1	1	1	1	1	1	Gaffelkrona övre Upper triple clamp	
	31	72 55 457-01	8	8		8	8	8	8	8	8	Skruv M8 x 35. Screw	
	32	15 12 327-01	1	1		1	1	1	1	1	1	Mutter. Nut	
	33	15 13 141-01	2	2		2	2	2	2	2	2	Styrhållare kpl. Handle bar retainer compl	
	34	72 52 497-81	2	2		2	2	2	2	2	2	Skruv M10 x 35. Screw	
	35	15 12 328-01	1	1		1	1	1	1	1	1	Distans. Spacer	
	37	15 12 391-01	2	2		2	2	2	2	2	2	Wirestyrare. Cable guide	
	38	15 12 325-01	1	1		1	1	1	1	1	1	Bricka. Washer	
	39	73 53 126-00	1	1		1	1	1	1	1	1	Spårring. Circlip	
	40	15 19 751-03	1	1		1	1	1	1	1	1	Nummerskylt gul. Number plate yellow	
		15 19 751-01										Nummerskylt vit. Number plate white	
		15 19 751-02										Nummerskylt grön. Number plate green	
	41	15 19 532-06	2	2		2	2	2	2	2	2	Buntband. Zipties	
N	43	15 12 409-01	1	1		1	1	1	1	1	1	Gaffelkrona kpl. Lower triple clamp	
	44	73 41 173-01	2	2		2	2	2	2	2	2	Bricka. Washer	
	45	15 12 382-01	2	2		2	2	2	2	2	2	Gaffelben övre. Fork leg upper	
	56	72 55 332-55	2	2		2	2	2	2	2	2	Screw	
	57	25 81 131-52	2	2		2	2	2	2	2	2	Nut	

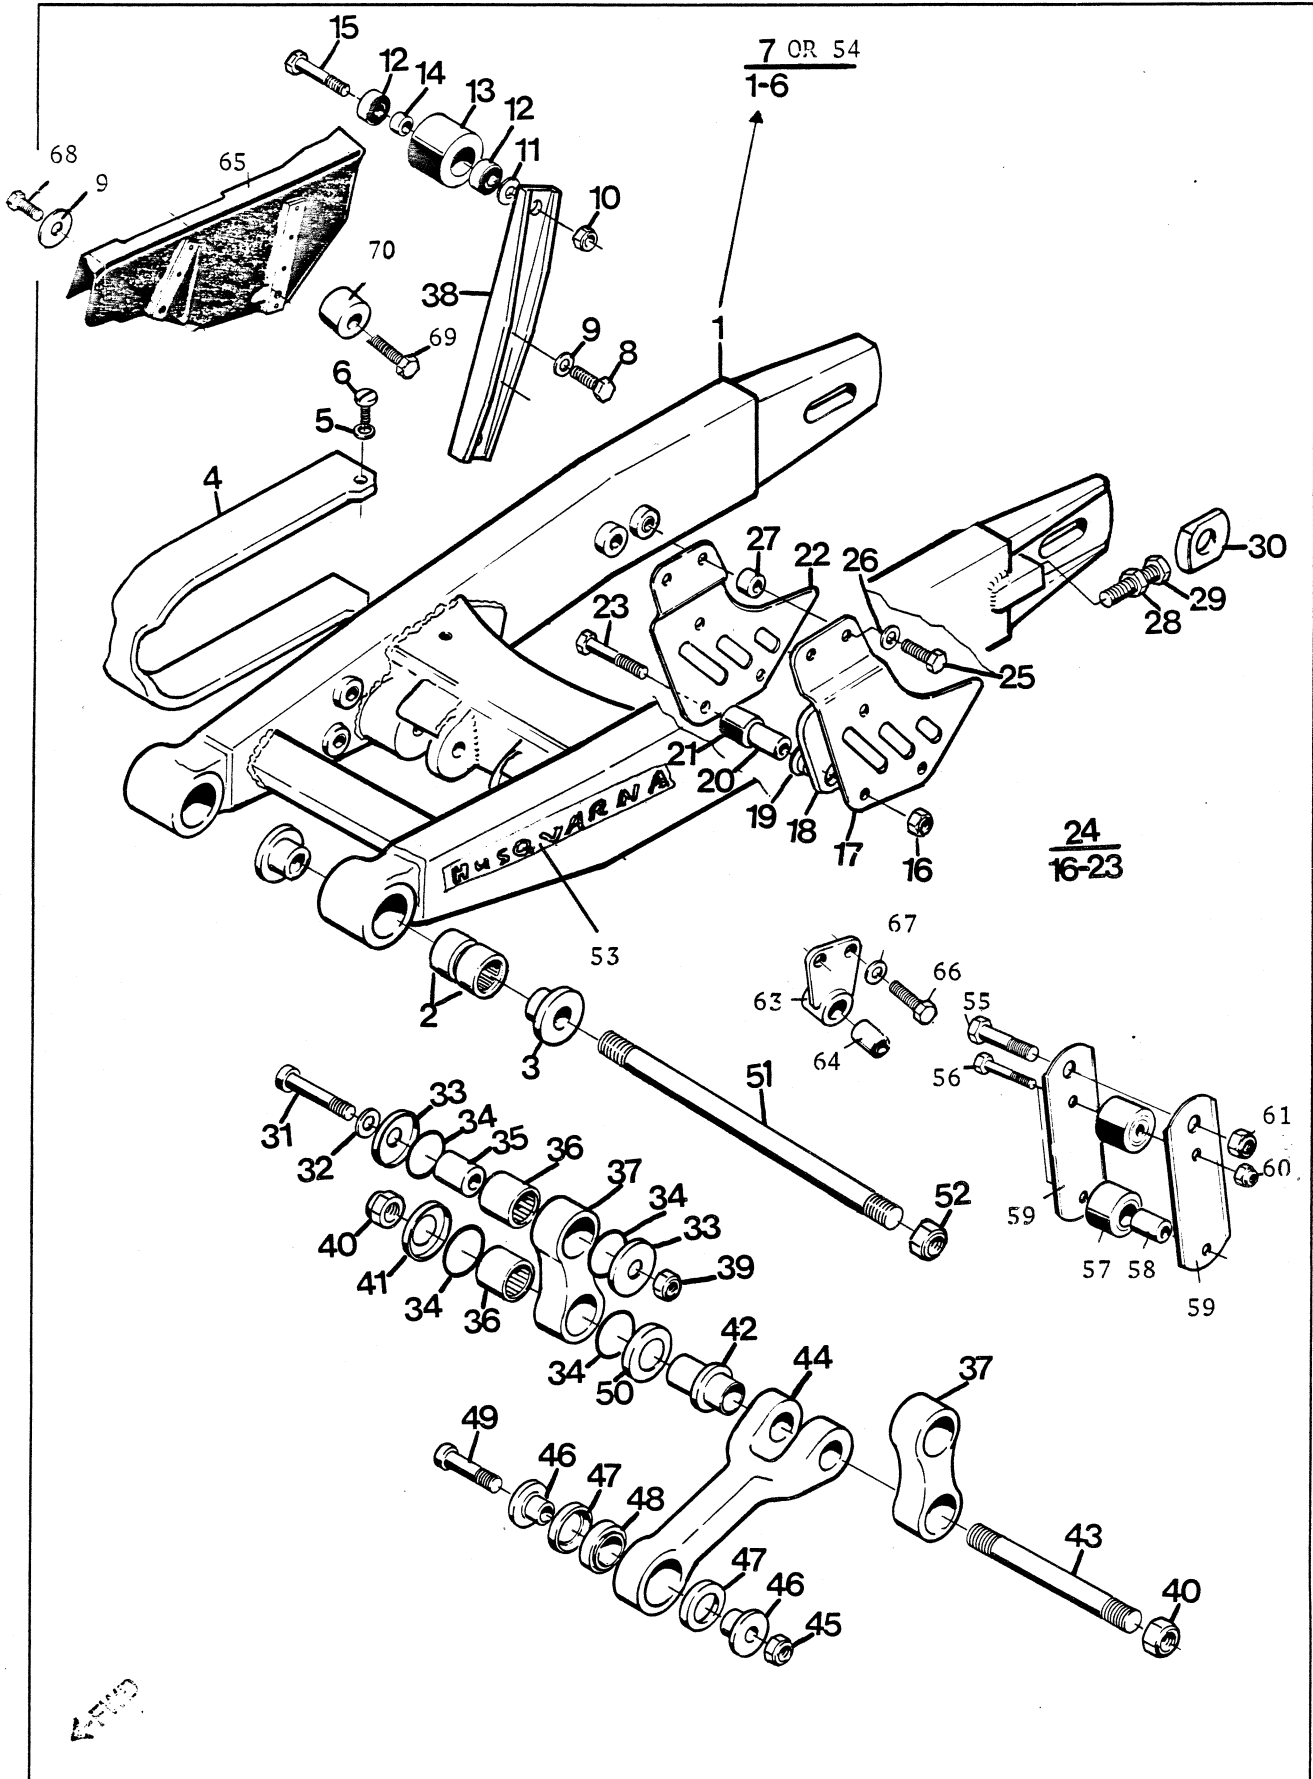
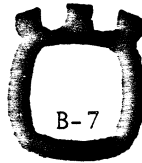
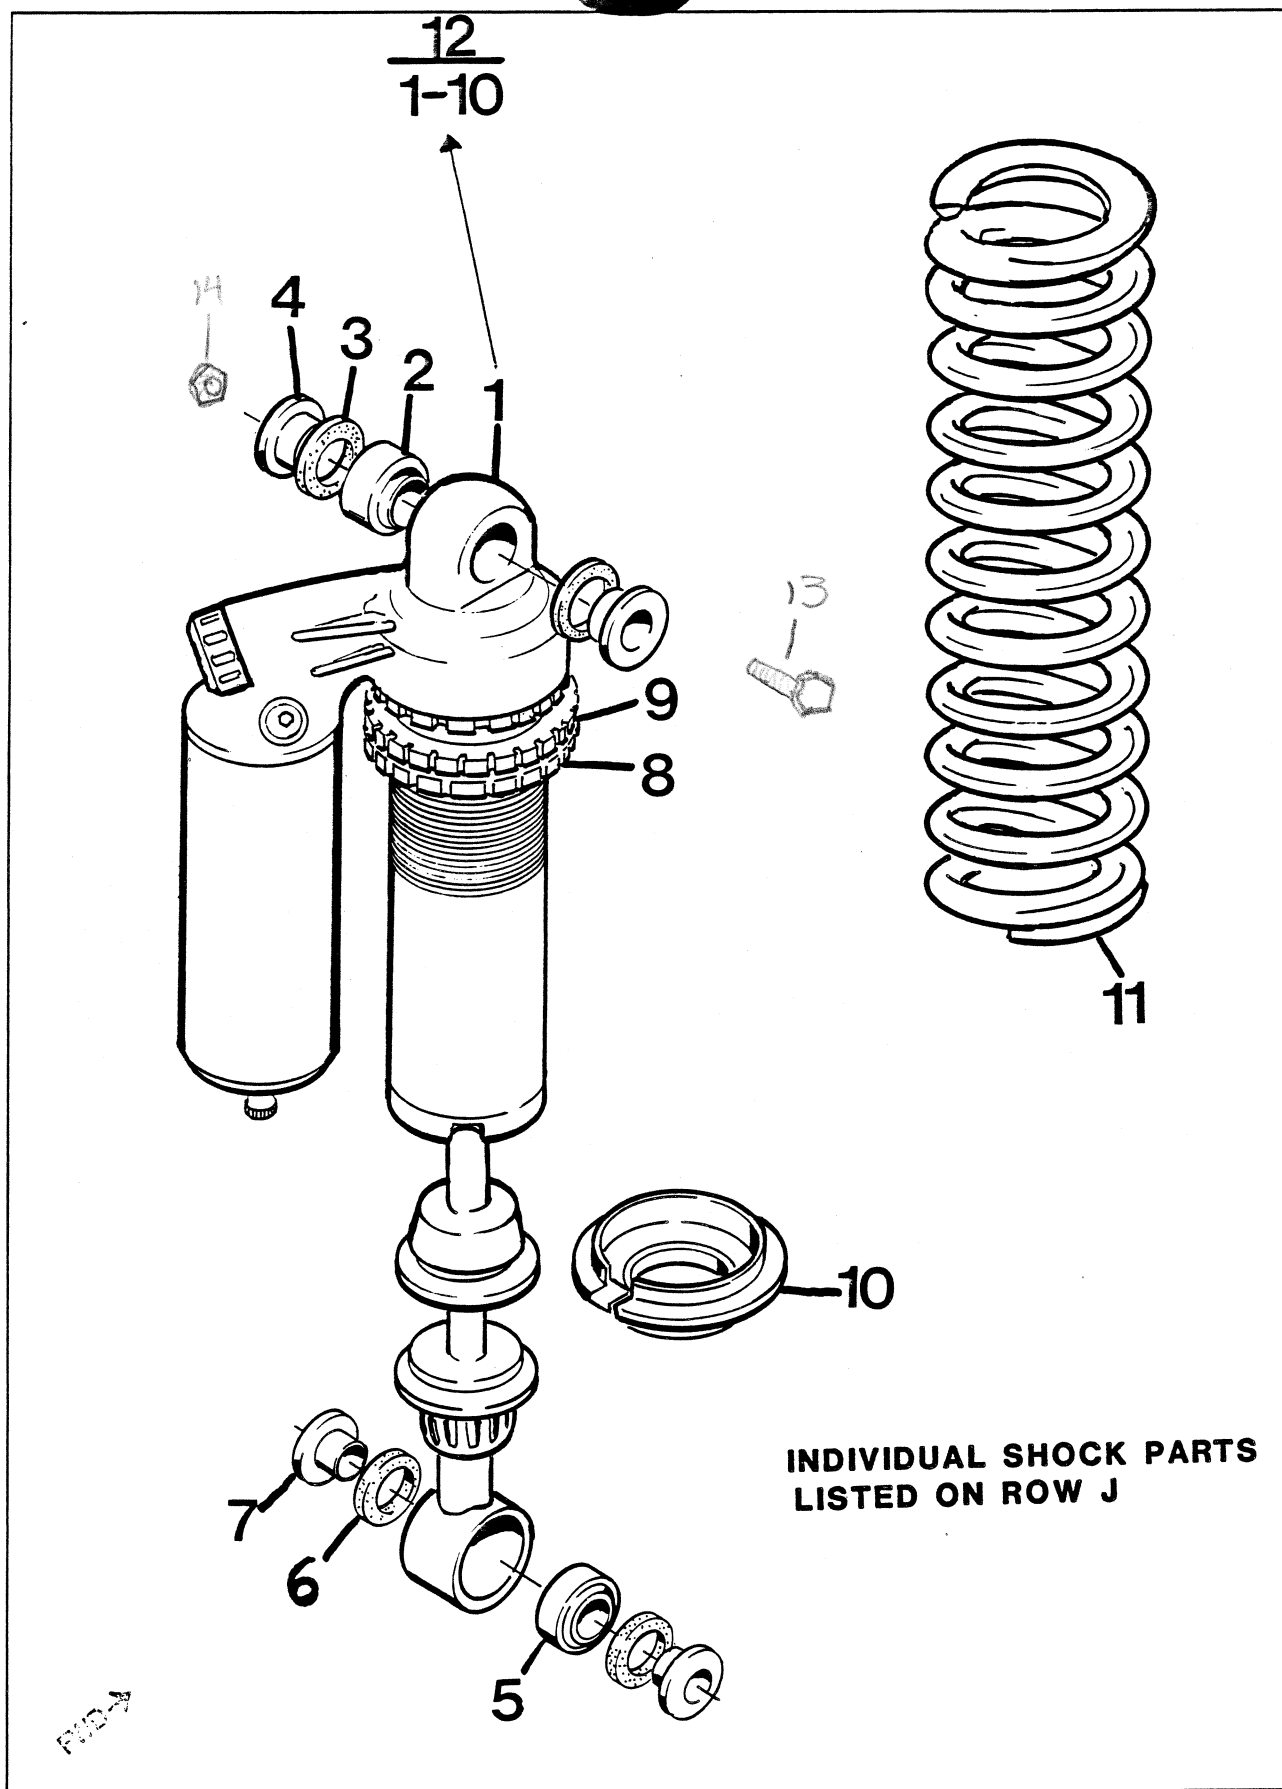


Fig.	Reservdelnummer Sparepart number	Antal - Quantity												Benämning, Description
		125		250			400		500					
		CR	XC			CR	WRX	XC		WRX	CR	XC		
N	2	15 11 277-01	4	4			4	4	4		4	4	4	Nållager. Needle bearing
N	3	15 11 278-01	4	4			4	4	4		4	4	4	Distans. Spacer
N	4	15 11 289-01	1	1			1	1	1		1	1	1	Slitskydd. Wear cover
	5	73 44 926-01	2	2			2	2	2		2	2	2	Bricka. Washer
	6	72 31 366-01	2	2			2	2	2		2	2	2	Skruv M6 x 12. Screw
N	7	15 11 233-01	1				1				1			Bakgaffel kpl. Swing arm compl.
N		15 11 233-02		1					1			1		Bakgaffel kpl. Swing arm compl.
	8	72 52 368-51	2	2			2		2		2	2		Skruv M6 x 16. Screw
	9	15 13 734-01	2	2			2	1	2		1	2	2	Bricka. Washer
	10	73 22 118-01	2	2			2		2		2	2	2	Mutter M8. Nut
	11	73 44 966-03	2	2			2		2		2	2	2	Bricka. Washer
	12	73 82 198-04	4	4			4		4		4	4		Lager. Bearing
N	13	15 11 310-01	2	2			2		2		2	2		Rulle. Roller
N	14	15 11 311-01	2	2			2		2		2	2		Distans. Spacer
	15	72 52 457-51	2	2			2		2		2	2		Skruv M8 x 36. Screw
	16	15 13 706-01	3	3			3		3		3	3	3	Mutter M6. Nut
N	18	15 11 288-01	2	2			2		2		2	2		Slitskydd. Wear plate
N	19	15 11 313-01	6	6			6		6		6	6		Distans. Spacer
N	20	15 11 286-01	3	3			3		3		3	3		Distans. Spacer
N	21	15 11 317-01	3	3			3		3		3	3		Rulle. Roller
	23	72 52 380-51	3	3			3		3		3	3		Skruv M6 x 50. Screw
N	24	15 11 284-01	1	1			1		1		1	1		Kedjestyrare kpl. Chain guide compl.
	25	72 52 455-51	2	2			2		2		2	2		Skruv M8 x 30. Screw
	26	73 41 164-01	2	2			2		2		2	2		Bricka. Washer
N	27	15 11 287-01	2	2			2		2		2	2		Distans. Spacer
	28	73 14 318-01	2	2			2	2	2		2	2	2	Mutter M8. Nut
	29	72 52 463-71	2	2			2	2	2		2	2	2	Skruv M8 x 60. Screw
N	30	15 16 867-01	2	2			2	2	2		2	2	2	Spännbricka. Washer
N	31	72 55 503-55	2	1			2	1	1		1	2	1	Skruv M10 x 60. Screw
N		72 52 509-81		1				1	1		1		1	Skruv M10 x 90. Screw
	32	73 41 171-01	2	1			2	2	1		2	2	1	Bricka. Washer
N	33	15 11 241-01	4	4			4	4	4		4	4	4	Skyddsbricka. Washer
N	34	15 11 242-01	8	8			8	8	8		8	8	8	X-ring
N	35	15 11 240-01	2	2			2	2	2		2	2	2	Distans. Spacer
N	36	15 11 239-01	4	4			4	4	4		4	4	4	Nållager. Needle bearing
N	37	15 11 255-01	2	2			2	2	2		2	2	2	Länk. Link
N	38	15 11 312-01	1	1			1		1		1	1	1	Fästplåt. Mounting plate
	39	73 22 120-01	2	2			2	2	2		2	2	2	Mutter M10. Nut
N	40	15 11 249-01	2	2			2	2	2		2	2	2	Mutter M14 x 1.25. Nut
N	41	15 11 241-02	2	2			2	2	2		2	2	2	Skyddsbricka. Washer
N	42	15 11 243-01	2	2			2	2	2		2	2	2	Distans. Spacer
N	43	15 11 248-02	1	1			1	1	1		1	1	1	Axel. Shaft
N	44	15 11 254-01	1	1			1	1	1		1	1	1	Länk. Link
	45	15 13 705-01	1	1			1	1	1		1	1	1	Mutter M12. Nut
N	46	15 11 258-01	2	2			2	2	2		2	2	2	Distans. Spacer
N	47	15 11 257-01	2	2			2	2	2		2	2	2	Tätning. Seal
N	48	15 11 256-01	1	1			1	1	1		1	1	1	Kulled. Ball Joint
N	49	15 11 244-01	1	1			1	1	1		1	1	1	Skruv M12 x 1. Screw
N	50	15 11 241-03	2	2			2	2	2		2	2	2	Skyddsbricka. Washer
N	51	15 11 248-01	1	1			1	1	1		1	1	1	Axel. Shaft
N	52	15 11 249-01	2	2			2	2	2		2	2	2	Mutter. Nut
	53	15 17 509-01	2	2			2	2	2		2	2	2	Decal
	54	15 11 362-01						1			1			Swing arm
	55	72 52 457-51						1			1			Screw
	56	72 52 376-51						2			2			Screw
	57	15 15 412-01						2			2			Roller
	58	15 15 413-01						2			2			Spacer
	60	73 22 116-01						2			2			Nut
	61	73 22 118-01						2			2			Nut
	62	15 15 505-60						1			1			Chain Guide Compl
	63	15 15 500-01						1			1			Attachment
	64	15 15 506-01						1			1			Bushing
	65	15 18 227-01						1			1			Chain Guard
	66	72 52 451-51						2			2			Screw
	67	73 41 164-01						2			2			Washer
	68	72 52 364-51						1			1			Screw
	69	72 52 460-71						1			1			Screw
	70	15 15 457-01						1			1			Spacer



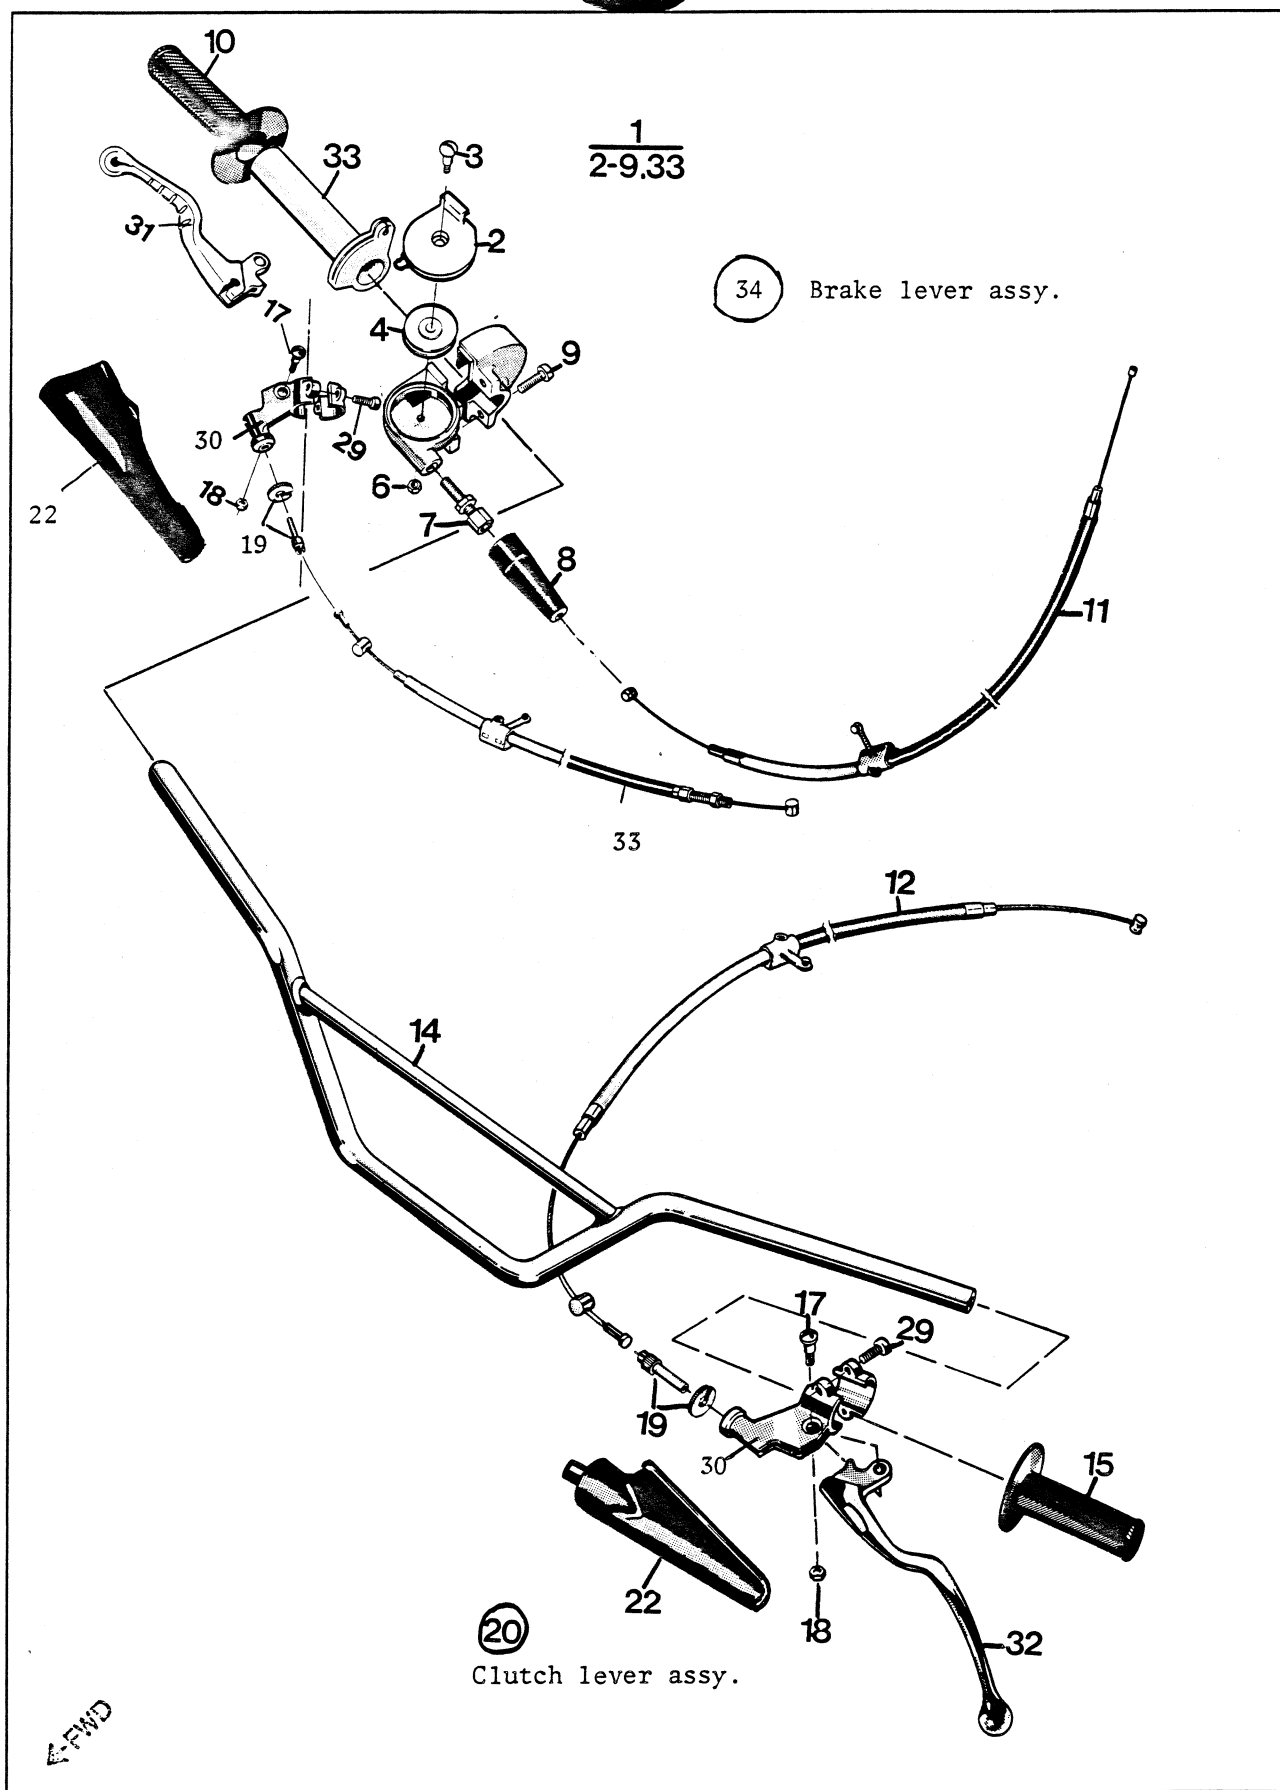


Fig.	Reservdelnummer Sparepart number	Antal - Quantity										Benämning, Description	
		125				250			400		500		
		CR		XC		CR	WRX	XC		WRX	CR	XC	
1	15 15 325-01	1		1		1	1	1		1			Gashandtag, kpl. Throttle handle compl.
	15 15 325-02										1	1	Gashandtag, kpl. Throttle handle compl.
2	15 15 326-01	1		1		1	1	1		1	1	1	Skyddslock Protect washer
3	15 15 322-01	1		1		1	1	1		1	1	1	Skruv Screw
4	15 15 283-01	1		1		1	1	1		1	1	1	Brytrulle Plastic roller
6	73 22 112-01	1		1		1	1	1		1	1	1	Låsmutter M4 Nut
7	15 15 261-01	1		1		1	1	1		1	1	1	Justernippel Nipple
8	15 15 262-01	1		1		1	1	1		1	1	1	Skyddshylsa Protecting sleeve
9	72 31 329-51	2		2		2	2	2		2	2	2	Skruv M5 x 16 Screw
10	15 15 266-01	1		1		1	1	1		1	1	1	Gummihandtag, höger Rubber handle right
11	15 15 277-01 15 15 277-02	1		1		1	1	1		1	1	1	Gaswire, kpl. Throttle wire
12	15 15 308-03 15 15 308-02	1		1		1	1	1		1	1	1	Frikopplingswire, kpl. Declutching wire
14	15 13 148-01	1		1		1	1	1		1	1	1	Styrstång Handle bar
15	15 15 265-01	1		1		1	1	1		1	1	1	Gummihandtag, vänster Rubber handle left
17	12 13 810-01	1		1		1	2	1		2	1	1	Ansattsskruv Screw
18	73 14 316-01	1		1		1	2	1		2	1	1	Mutter Nut
19	12 13 821-01	1		1		1	2	1		2	1	1	Kabelspännskruv Cable adjusting screw
20	15 15 314-01 15 15 314-03	1		1		1	1	1		1	1	1	Kopplingshandtag, kpl. Declutching handle compl. "New pull"
22	15 13 074-01	1		1		1	2	1		2	1	1	Handtagsskydd Handle protector
29	72 31 368-01	2		2		2	4	2		4	2	2	Skruv Screw
30	15 13 030-01 15 13 030-03 15 13 033-01 15 13 033-03	One piece perch One piece perch One piece perch One piece perch											Perch, brake (polished) Perch, brake (black) Perch, clutch (polished) Perch, clutch (black)
31	15 13 031-03 15 13 031-01												Brake blade (shorty) Brake blade (long)
32	15 13 034-01												Clutch blade (long)
33	15 15 022-04						1			1			Brake cable
34	15 15 323-01 15 15 310-03						1			1			Brake lever assy. Brake lever assy. (new pull)


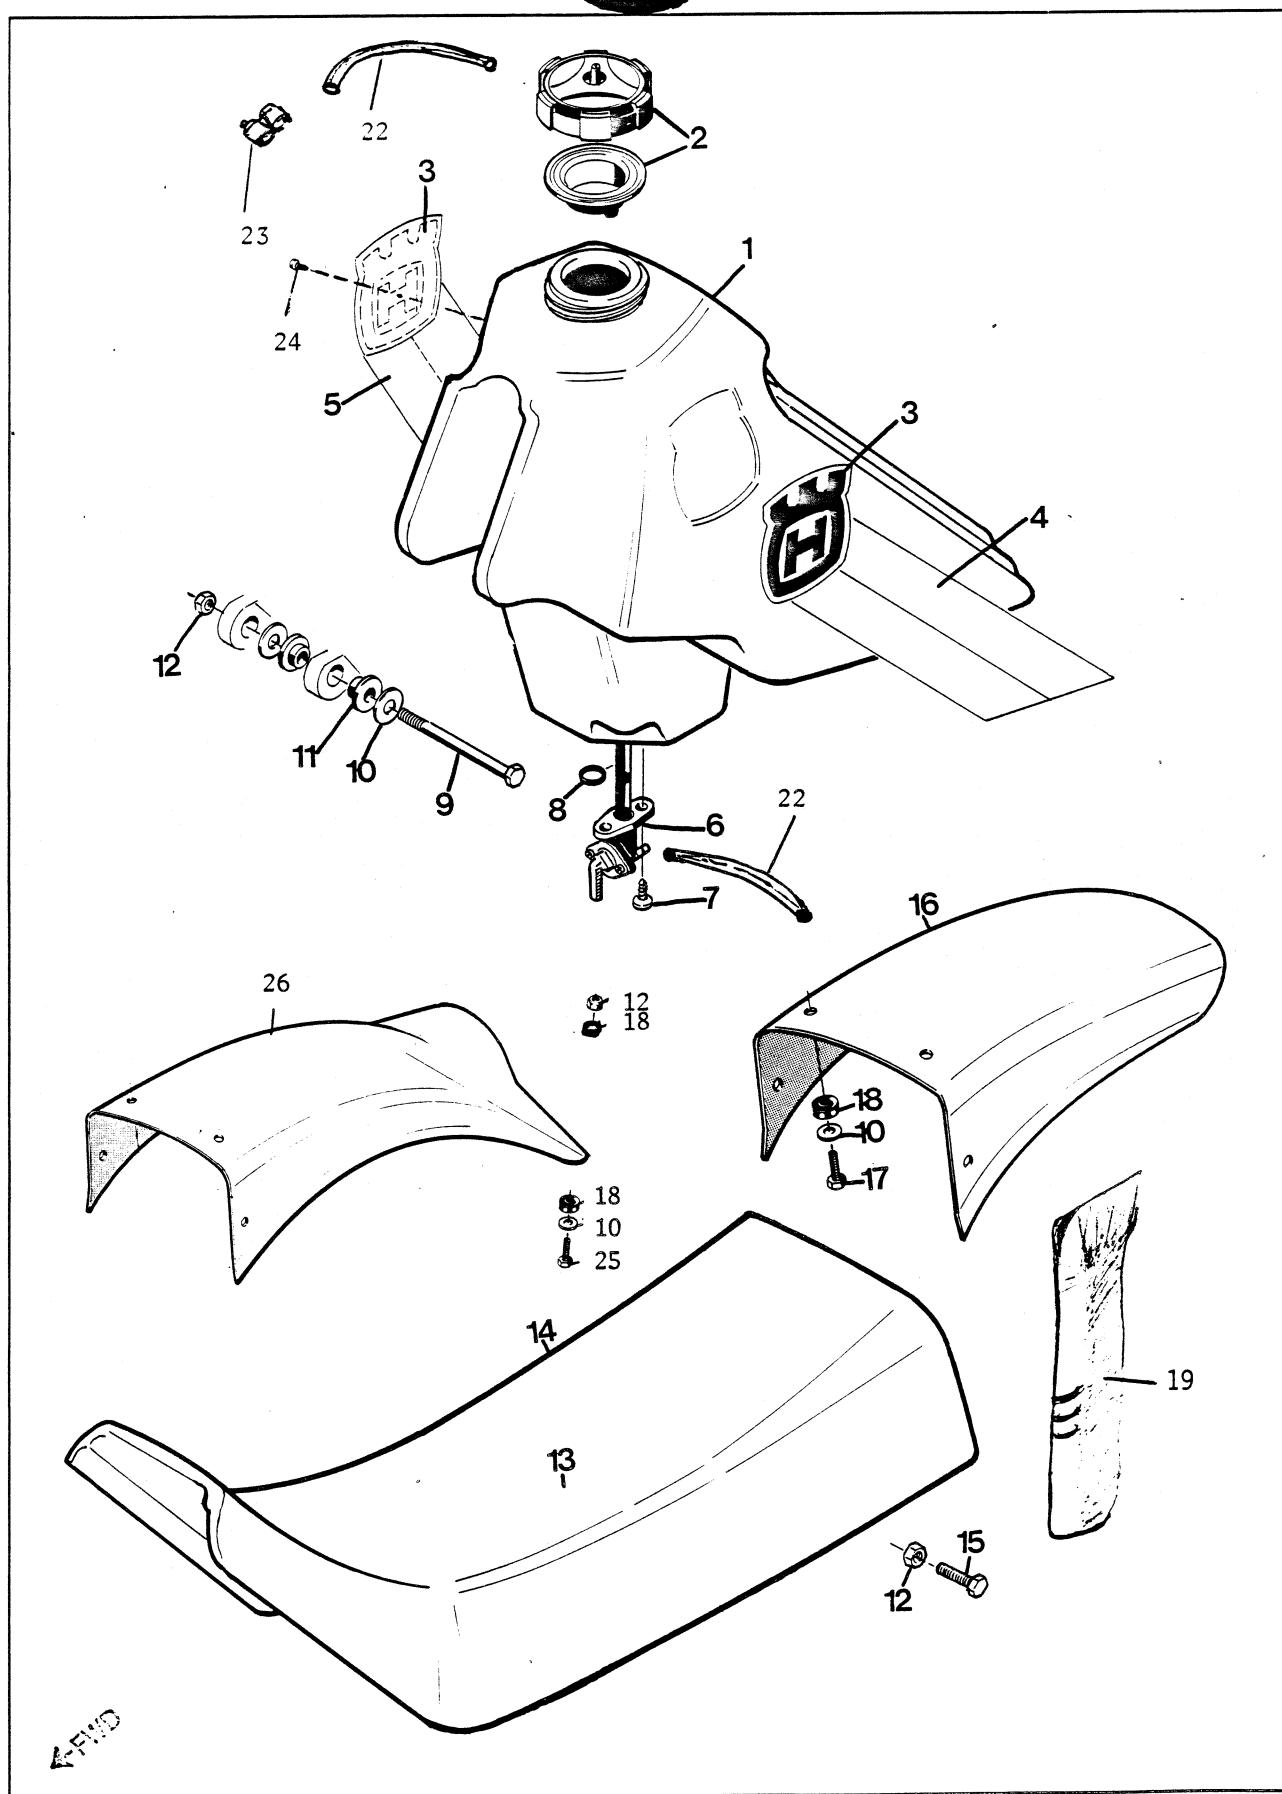


Fig.	Reservdelsnummer Sparepart number	Antal - Quantity										Benämning, Description		
		125				250		400		500				
		CR	XC			CR	WRX	XC		WRX	CR			XC
N N	1	15 14 170-01 15 14 170-02	1	1			1	1	1	1	1	1	Bensintank. Petrol tank Bensintank. Petrol tank	
	2	15 14 108-01	1	1			1	1	1	1	1	1	Tanklock. Cap	
N N	3	15 14 120-01 15 14 120-02	2	2			2	2	2		2	2	Dekal. Decal Logo (screw attached)	
	4	15 15 811-01 15 15 812-01	1	1			1			2	1		Dekal. Decal Dekal. Decal	
N N	5	15 15 813-01 15 15 814-01	1	1				1	1		1	1	Dekal. Decal Dekal. Decal	
	6	15 14 109-01	1	1			1	1	1	1	1	1	Bensinkran. Petlock	
N N	7	15 14 110-01	2	2			2	2	2	2	2	2	Skruv. Screw	
	8	74 04 811-02	1	1			1	1	1	1	1	1	O-ring	
N N	9	72 55 394-01	1	1			1	1	1	1	1	1	Skruv M6 x 160. Screw	
	10	15 13 709-01	4	4			4	6	4	6	4	4	Bricka. Washer	
N N	11	15 14 107-01	4	4			4	4	4	4	4	4	Bussning. Bushing	
	12	15 13 706-01	3	3			3	5	3	5	3	3	Mutter. Nut	
N N	13	15 13 581-01	1	1			1	1	1	1	1	1	Sadel. Seat	
	14	15 13 582-01											Sadelöverdrag. Seat cover	
N N	15	72 52 374-51	2	2			2	2	2	2	2	2	Skruv M6 x 30. Screw	
	16	15 13 587-01	1	1			1	1	1	1	1	1	Bakskärm. Fender	
N N	17	72 52 370-53	4	4			4	4	4	4	4	4	Skruv M6 x 20. Screw	
	18	15 18 121-01	4	4			4	8	4	8	4	4	Gummibricka. Rubber washer	
N N	19	15 13 588-01 15 18 183-01	1	1			1		1		1	1	Splash guard Splash guard	
	22	15 14 057-80	2	2			2	2	2	2	2	2	Fuel line/vent hose	
N N	23	15 15 809-01	1	1			1	1	1	1	1	1	Breather clip	
	24	15 13 929-01	2	2			2	2	2	2	2	2	Screw	
N N	25	72 52 372-51						2		2			Screw	
	26	15 18 192-01						1		1			Fender	

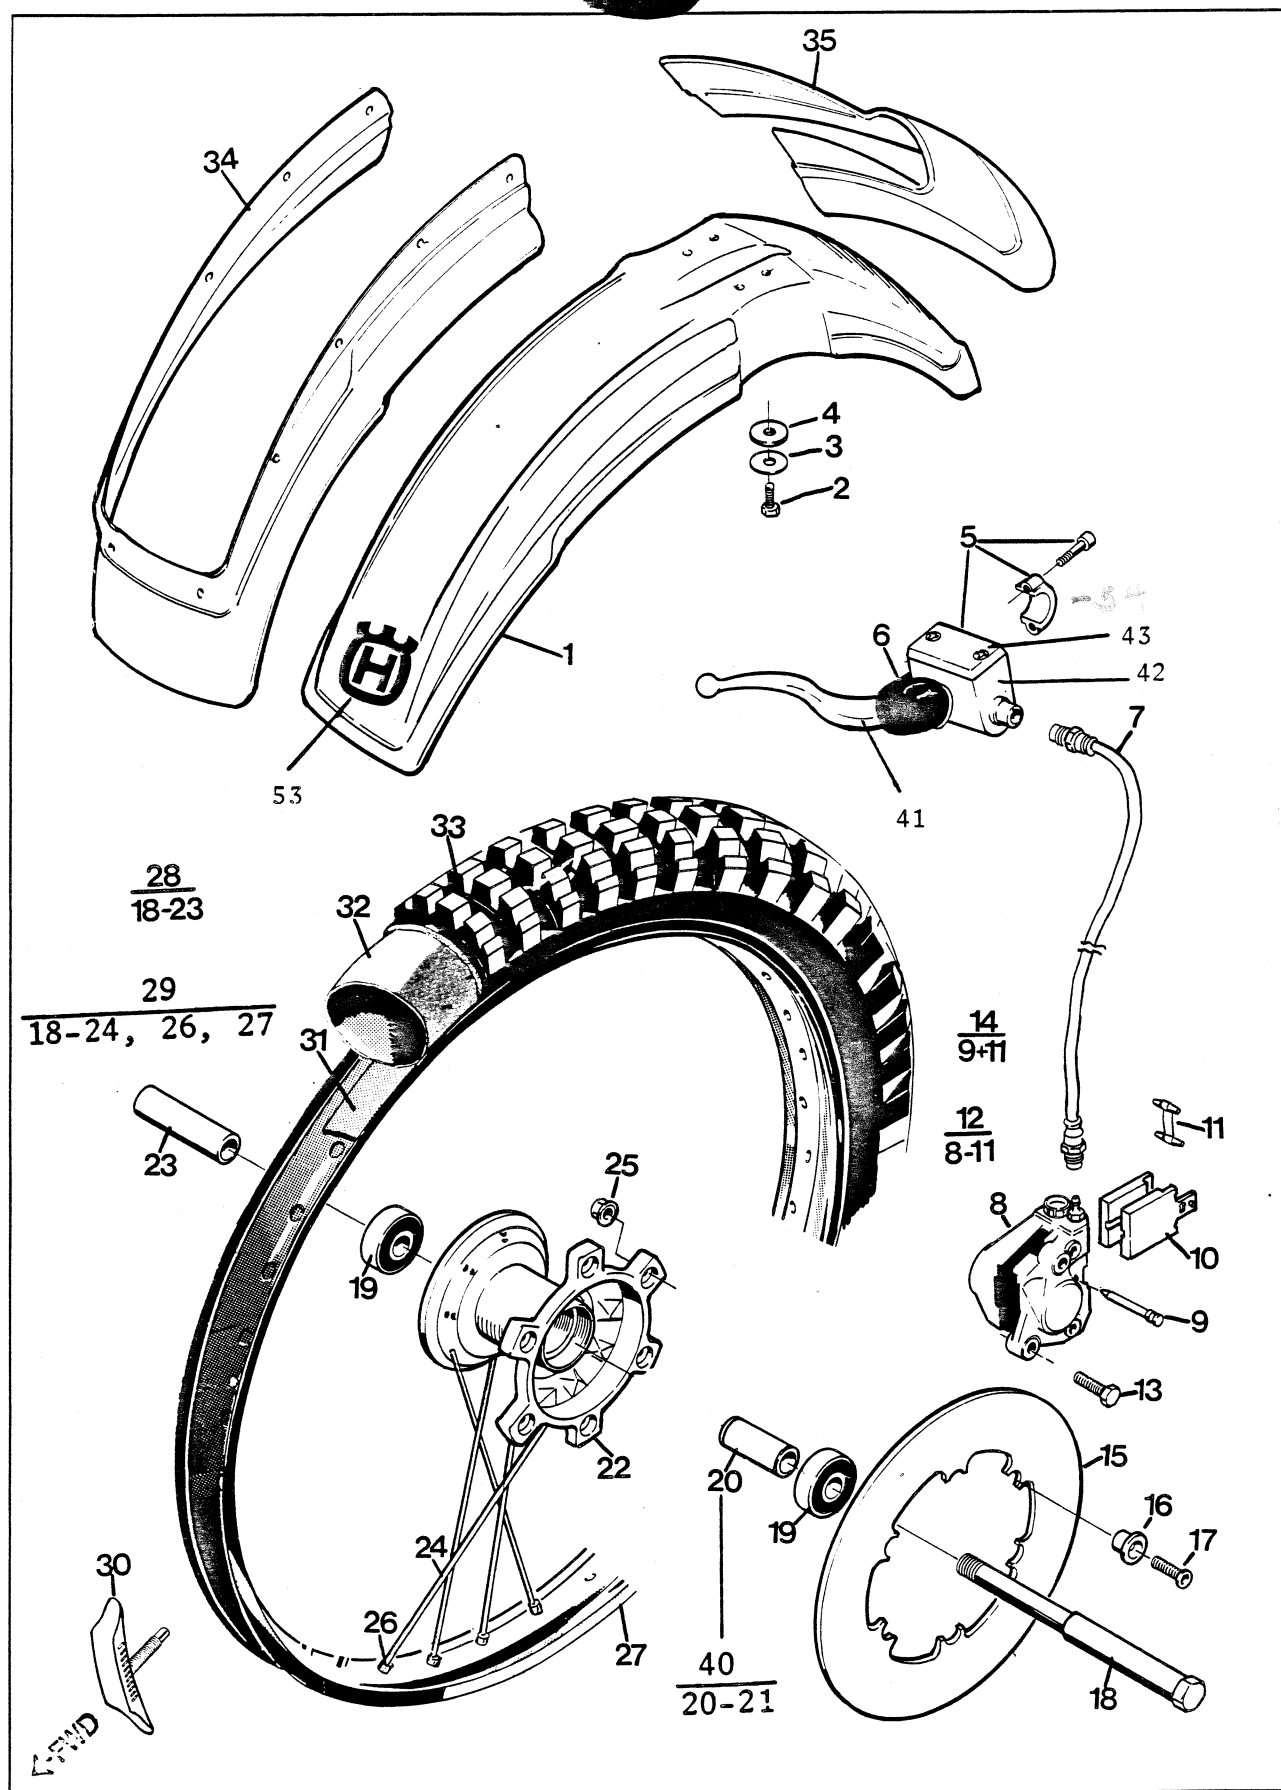

		Antal - Quantity												Benämning, Description		
Reservdelsnummer		125						250			400		500			
Fig.	Sparepart number	CR		XC			CR	WRX	XC		WRX	CR	XC			
N	1	15 18 047-02	1		1		1		1			1	1	Skärm, Fender		
	2	72 55 372-01	4		4		4		4			4	4	Skruv M6 x 25, Screw		
	3	15 13 709-01	8		8		8		8			8	8	Bricka, Washer		
	4	15 18 121-01	8		8		8		8			8	8	Gummibricka, Rubber washer		
N	5	15 16 343-01	1		1		1		1			1	1	Huvudcylinder, Master cylinder		
N	6	15 16 345-01	1		1		1		1			1	1	Bälg, Cover		
N	7	15 16 332-01	1		1		1		1			1	1	Bromsslang, Brake hose		
N	10	15 16 328-02	2		2		2		2			2	2	Bromsbelägg, Brake pads		
N	12	15 16 327-01	1		1		1		1			1	1	Bromscylinder KPL, Brake cylinder compl.		
	13	15 13 741-01	2		2		2		2			2	2	Skruv M8 x 25, Screw		
N	14	15 17 791-01	1		1		1		1			1	1	Låspinnesats, Lockpin kit		
N	15	15 16 325-01	1		1		1		1			1	1	Bromsskiva, Disc		
N	16	15 16 326-01	6		6		6		6			6	6	Distans, Spacer		
N	17	72 56 374-55	6		6		6		6			6	6	Skruv M6 x 30, Screw		
N	18	15 16 338-01	1		1		1		1			1	1	Axel, Shaft		
	19	73 82 302-34	2		2		2		2			2	2	Lager, Bearing		
N	20	15 16 336-01	1		1		1		1			1	1	Distans, Spacer		
N	21	15 16 337-01	2		2		2		2			2	2	distans, Spacer		
N	22	15 16 324-01	1		1		1		1			1	1	Navhylsa, Hub sleeve		
N	23	15 16 342-01	1		1		1		1			1	1	Mutter, Nut		
N	24	15 16 321-01	36		36		36		36			36	36	Eker, Spoke		
	25	15 13 706-01	6		6		6		6			6	6	Mutter M6, Nut		
	26	15 16 219-01	36		36		36		36			36	36	Nippel		
N	27	15 16 320-01	1		1		1		1			1	1	Fälg 1.60 x 21, Rim		
N	28	15 16 323-01	1		1		1		1			1	1	Framnav KPL, Front hub compl.		
N	29	15 16 319-01	1		1		1		1			1	1	Framhjül KPL, Front wheel compl.		
	30	15 16 144-01	1		1		1		1			1	1	Däcklås, Rimlock		
	31	15 16 029-01	1		1		1		1			1	1	Fälgband, Rimband		
	32	15 16 028-01	1		1		1		1			1	1	Innerslang, Tube		
N	33	15 16 879-01	1				1					1		Däck 3.00 x 21 Metzeler		
		15 16 257-01			1				1				1	Däck 3.00 x 21 Trelleborg Deep grip		
	34	15 18 050-01												Skärmbreddare, Widener		
	35	15 18 049-01												Skärmlängare, Lengthener		
N	36	15 17 780-01												Ekersats, Spoke kit		
	37	15 19 902-01												Nipplesats, Nipple kit		
	40	15 16 350-01												Spacer compl.		
	38	15 16 347-01	1		1		1		1			1		1	Protector (disc brake)	
	41	15 16 346-01												Lever - rectangular cyl.		
		15 16 346-11												Lever - round cyl.		
	42	15 16 343-41												Tank--round (w/O-ring)		
		15 16 343-46												Tank--rectangular N/A		
	43	15 16 343-51												Cap--round		
		15 16 343-56												Cap--rectangular		
	53	15 14 117-01	1		1		1	1	1		1	1		1	Decal	
54	15 16 343-71	343-													CLAMP HALF	

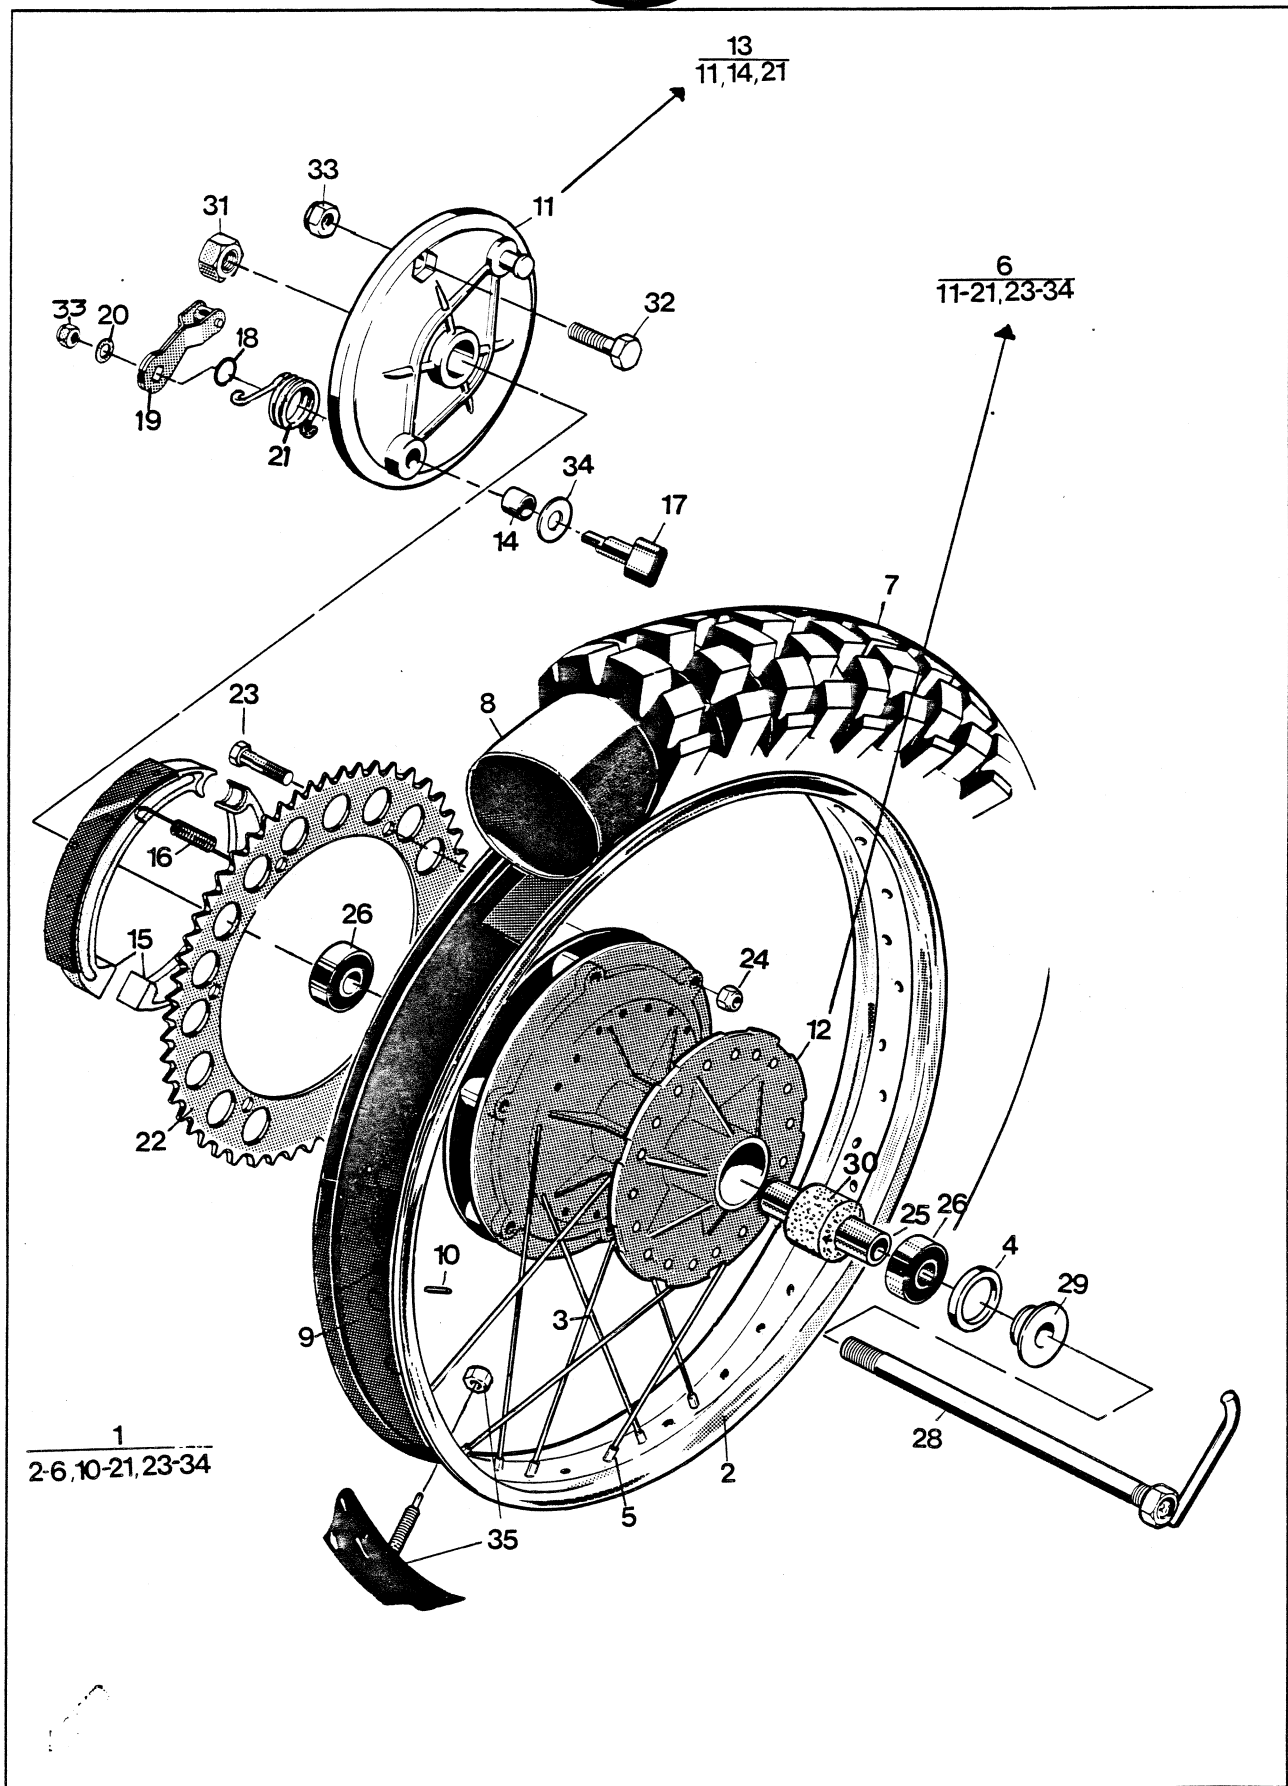


Fig.	Reservdelnummer Sparepart number	Antal - Quantity											Benämning, Description	
		125			250			400		500				
		CR		XC			CR	WRX	XC		WRX	CR		XC
N	1	15 16 842-03 15 16 842-04 15 16 842-05 15 16 827-01		1				1 1	1		1 1		1 1	Hjul, kpl. exkl gummi Wheel compl. excl. rubber Fälg, 2,5 x 18" Rim
N	2	15 16 872-01		1					1					
N	3	15 16 828-02 15 16 218-06		36				36 36		36		36		Eker Spoke
	4	15 13 718-01		1				1	1		1		1	Tättring Seal
	5	15 16 829-01 15 16 219-01		36				36 36		36		36		Ekernippel Spoke nipple
N	6	15 16 875-01 15 16 875-02		1				1	1		1		1	Baknav, kpl. Rear hub compl.
	7	15 16 839-01 15 16 848-01		1				 1		 1		 1		Däck 4.50 x 18" Trelleborg ten master Tyre Däck 5.00 x 18" Trelleborg Tyre
	8	15 16 508-01		1				1	1		1		1	Innerslang 18" Innertyre
	9	15 16 029-01		1				1	1		1		1	Fälgband Rimband
	12	15 16 854-01		1				1	1		1		1	Navhylsa Hub sleeve
N	13	15 15 539-01		1				1	1		1		1	Bromssköld, kpl. Brake plate compl.
	14	15 16 859-01		1				1	1		1		1	Bussning Bushing
	15	15 16 543-01		2				2	2		2		2	Bromsback, kpl. Brake shoe
	16	15 16 547-01		2				2	2		2		2	Fjäder Spring
	17	15 15 536-01		1				1	1		1		1	Bromsexcenter Brake cam
	18	15 16 299-01		1				1	1		1		1	O-ring
	19	15 16 723-01		1				1	1		1		1	Hävarm Lever
	20	73 41 164-01		1				1	1		1		1	Bricka 8.4 x 17 Washer
N	21	15 15 535-01		1					1		1		1	Fjäder, Spring
	22	15 16 852-03		1					1		1		1	Kedjekrans Z = 52 Sprocket
	23	72 52 460-51		6				6	6		6		6	Skruv M8 x 45 Screw
	24	73 22 118-01		6				6	6		6		6	Låsmutter Nut
	25	15 16 752-01		1				1	1		1		1	Distanshylsa Distance sleeve
	26	73 82 302-34		2				2	2		2		2	Kullager 6302 2RS Ball bearing
N	28	15 15 540-01 15 15 540-02		1					1				1	Bakaxel, kpl. Shaft
N	29	15 16 866-01 15 16 536-03		1				1 1	1		1 1		1	Distans Distance
	30	15 16 300-01		1				1	1		1		1	Distanshållare Spacer holder
	31	15 16 598-01		1				1	1		1		1	Mutter Nut
	32	15 16 813-01		1				1	1		1		1	Skruv Screw
	33	73 22 118-01		2				2	2		2		2	Låsmutter M8 Nut
	34	15 16 836-01		1				1	1		1		1	Bricka Washer
	35	15 16 874-01		2				2	2		2		2	Däcklås Tyre lock
N		15 17 810-01 15 19 952-01		1					1		1		1	Ekersats Spoke unit Nipple kit 36 pcs

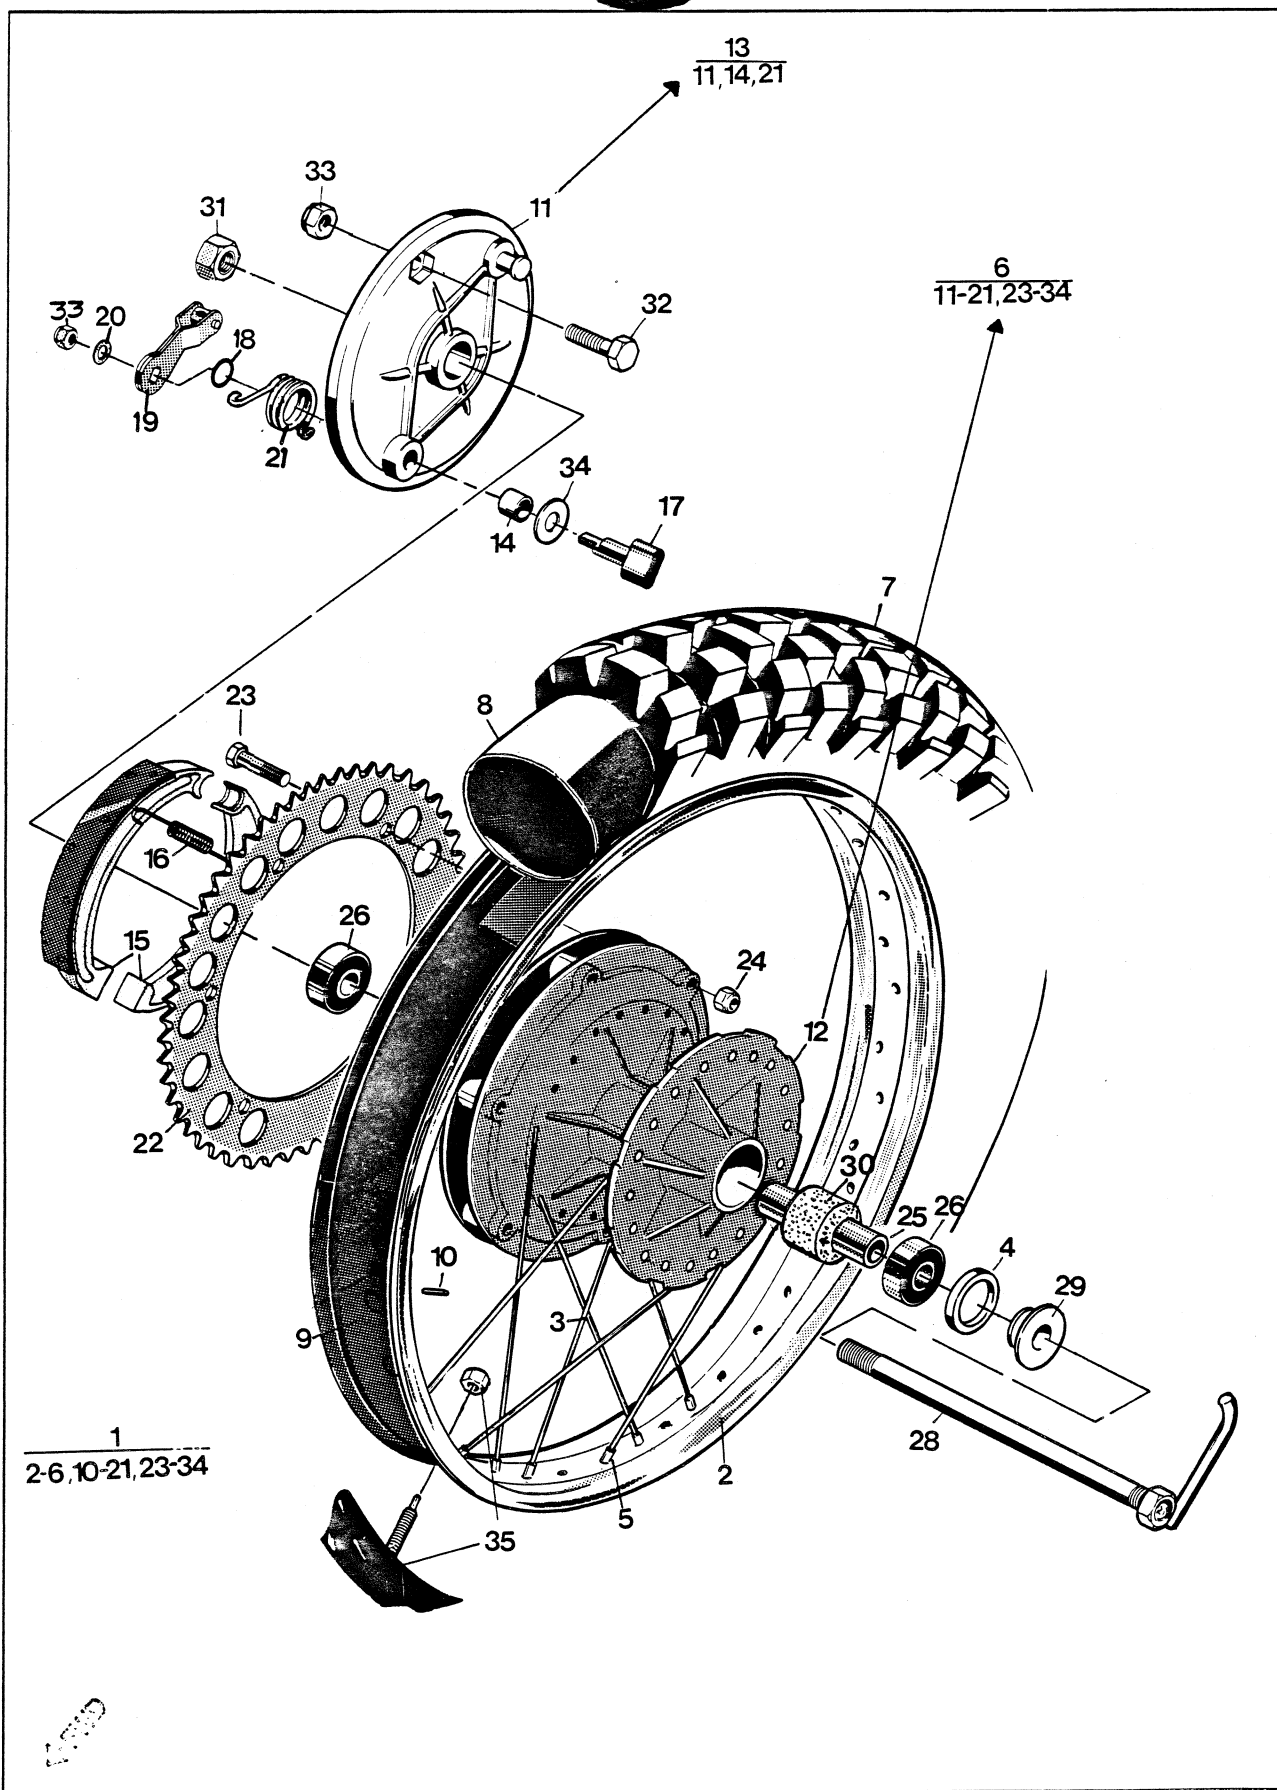


Fig.	Reservdelsnummer Sparepart number	Antal - Quantity												Benämning, Description	
		125			250			500							
		CR		XC			CR		XC			CR	XC		
	15 19 938-01 15 19 902-01			1				1					1	Nippelsats 36 st Nipple kit 36 pcs	

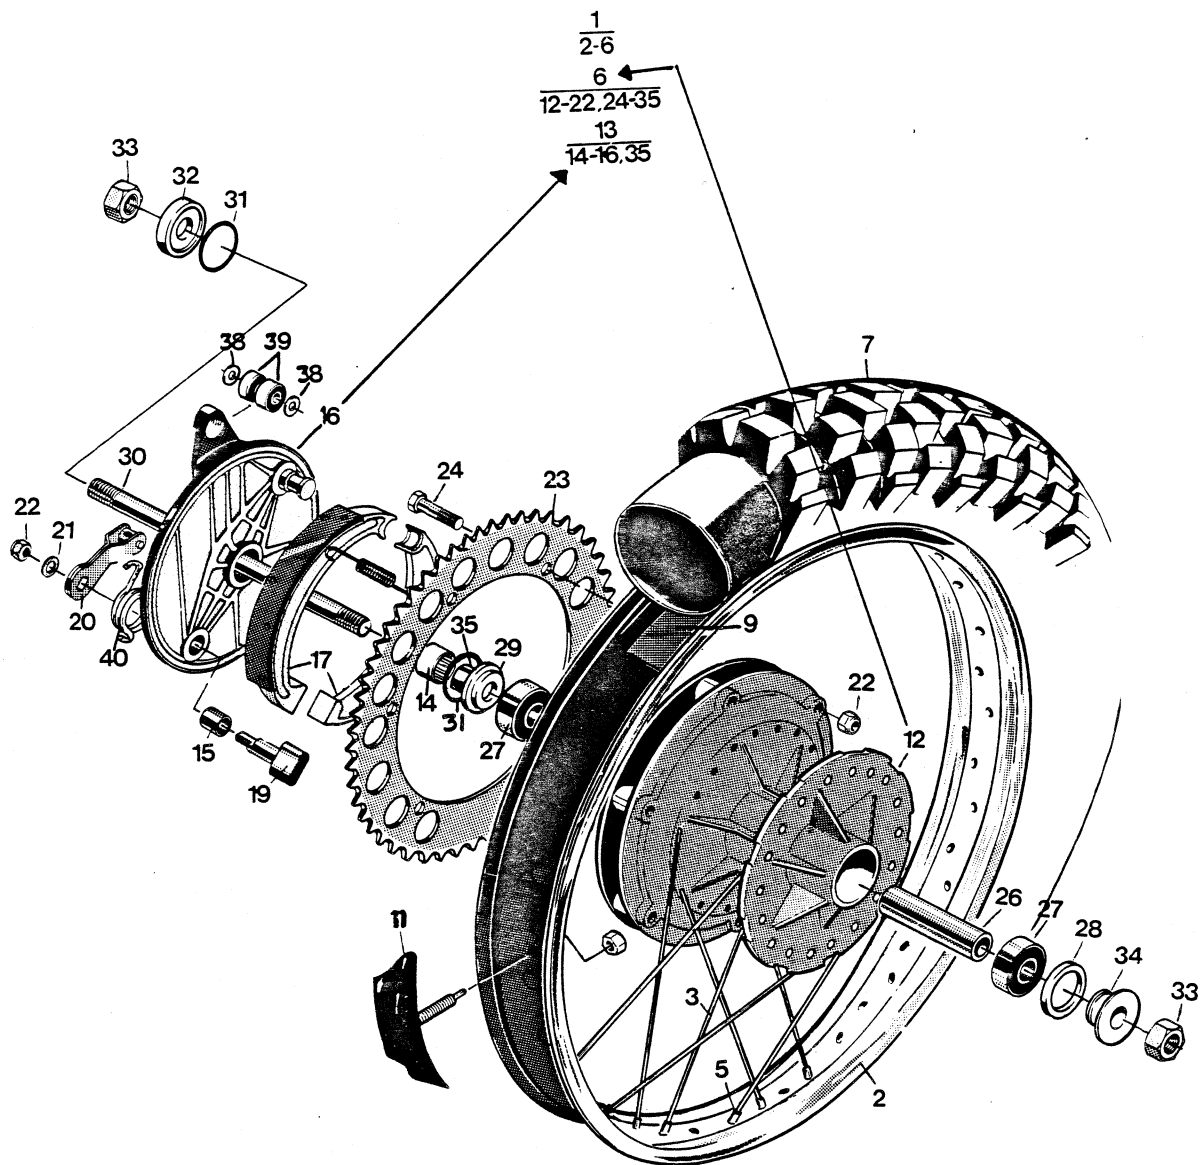


Fig.	Reservdelnummer Sparepart number	Antal - Quantity										Benämning, Description		
		125			250			500						
		CR		XC		CR		XC		CR	XC			
N	1	15 17 812-01	1			1				1			Hjul, kpl. exkl. gummi	
N		15 17 813-01											Wheel compl. exkl. rubber	
	2	15 16 827-01								1			Fälg	
		15 16 872-01	1			1							Rim	
	3	15 16 828-02								36			Eker	
		15 16 218-06	36			36							Spoke	
	5	15 16 829-01								36			Ekernippel	
		15 16 219-01	36			36							Spoke nipple	
N	6	15 17 809-01	1			1				1			Baknav kpl. utan kedjedrev	
													Rear hub compl.	
N	7	15 16 881-01	1										Däck 4.00 x 18 Metzeler motocross. Tyre	
N		15 16 883-01				1							Däck 4.50 x 18 Metzeler motocross. Tyre	
N		15 16 885-01								1			Däck 4.50 x 18 Metzeler multi cross. Tyre	
	8	15 16 508-01											Innerslang	
													Innertube	
	9	15 16 029-01											Fälgband	
													Rimband	
N	11	15 16 874-01	2			2							Däcklås, kpl.	
		15 16 772-01								2			Tyre lock	
	12	15 16 817-01	1			1				1			Navhylsa, kpl.	
													Hub sleeve	
N	13	15 15 522-01	1			1				1			Bromssköld, kpl.	
													Brake plate compl.	
N	14	15 11 239-01	1			1				1			Nållager	
													Needle bearing	
	15	15 16 859-01	1			1				1			Bussning	
													Bushing	
	17	15 16 788-02	2			2				2			Bromsback	
													Brake shoe	
	18	15 16 547-01	2			2				2			Fjäder, bromsback	
													Spring	
N	19	15 15 514-01	1			1				1			Bromsexcenter	
													Brake cam	
	20	15 16 723-01	1			1				1			Hävarm	
													Lever	
	21	73 41 164-01	1			1				1			Bricka 8.4 x 17	
													Washer	
	22	73 22 118-01	7			7				7			Låsmutter M8	
													Nut	
	23	15 16 852-03	1			1				1			Kedjekrans 52T	
	24	72 52 460-51	6			6				6			Skruv M8 x 45	
													Screw	
	26	15 16 752-01	1			1				1			Distanshylsa	
													Distance sleeve	
	27	73 82 302-34	2			2				2			Kullager	
													Ball bearing	
	28	15 13 718-01	1			1				1			Tättring	
													Seal	
N	29	15 15 523-01	1			1				1			Distans	
													Spacer	
N	30	15 15 524-01	1			1				1			Bakaxel	
													Shaft	
N	31	15 11 242-01	2			2				2			X-ring	
N	32	15 15 519-01	1			1				1			Tättningshållare	
													Seal case	
	33	15 16 598-01	2			2				2			Mutter	
													Nut	
N	34	15 16 866-01	1			1				1			Distans, vänster	
													Distance	
N	35	15 15 518-01	1			1				1			Innerhylsa	
													Spacer	
	36	73 82 296-19	2			2				2			Kullager. Bearing	
	37	73 41 153-41	2			2				2			Bricka. Washer	

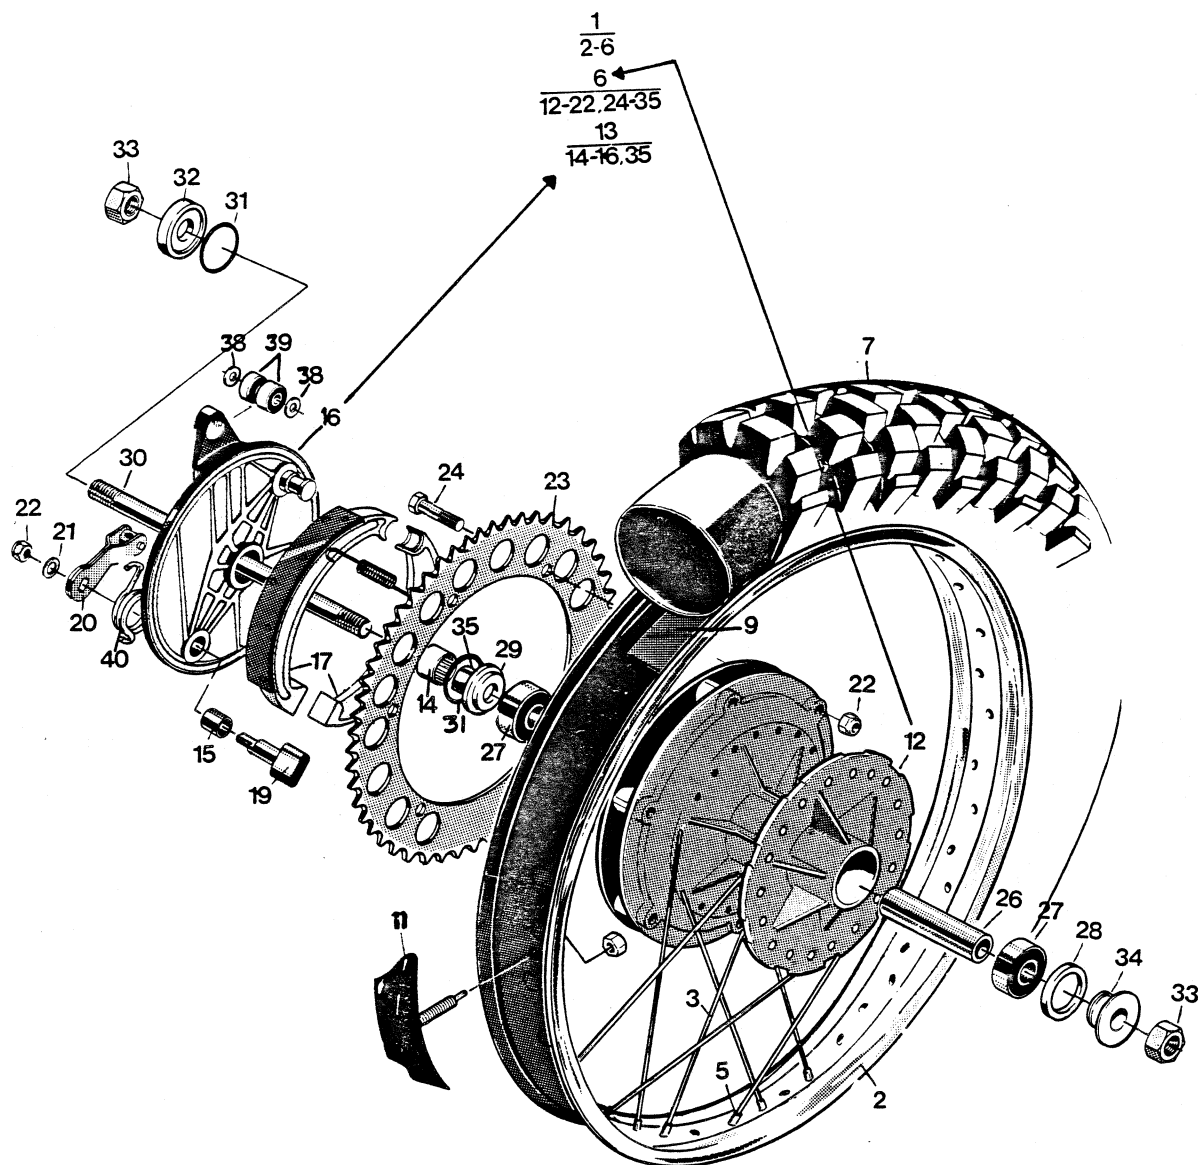


Fig.	Reservdelsnummer Sparepart number	Antal - Quantity												Benämning, Description	
		125			250			500							
		CR		XC			CR		XC			CR	XC		
N 38	73 41 153-41	2					2					2		Bricka. Washer	
39	73 82 296-19	2					2					2		Kullager. Bearing	
40	15 15 515-01	1					1					1		Fjäder. Spring	
Tillbehör/Accessories															
N	15 17 810-01	36					36							Ekersats 18'' Spoke kit	
	15 19 952-01											36		Ekersats Spoke kit	
	15 19 902-01	36					36							Nippelsats, Nipple kit	
	15 19 938-01											36		Nippelsats, Nipple kit	

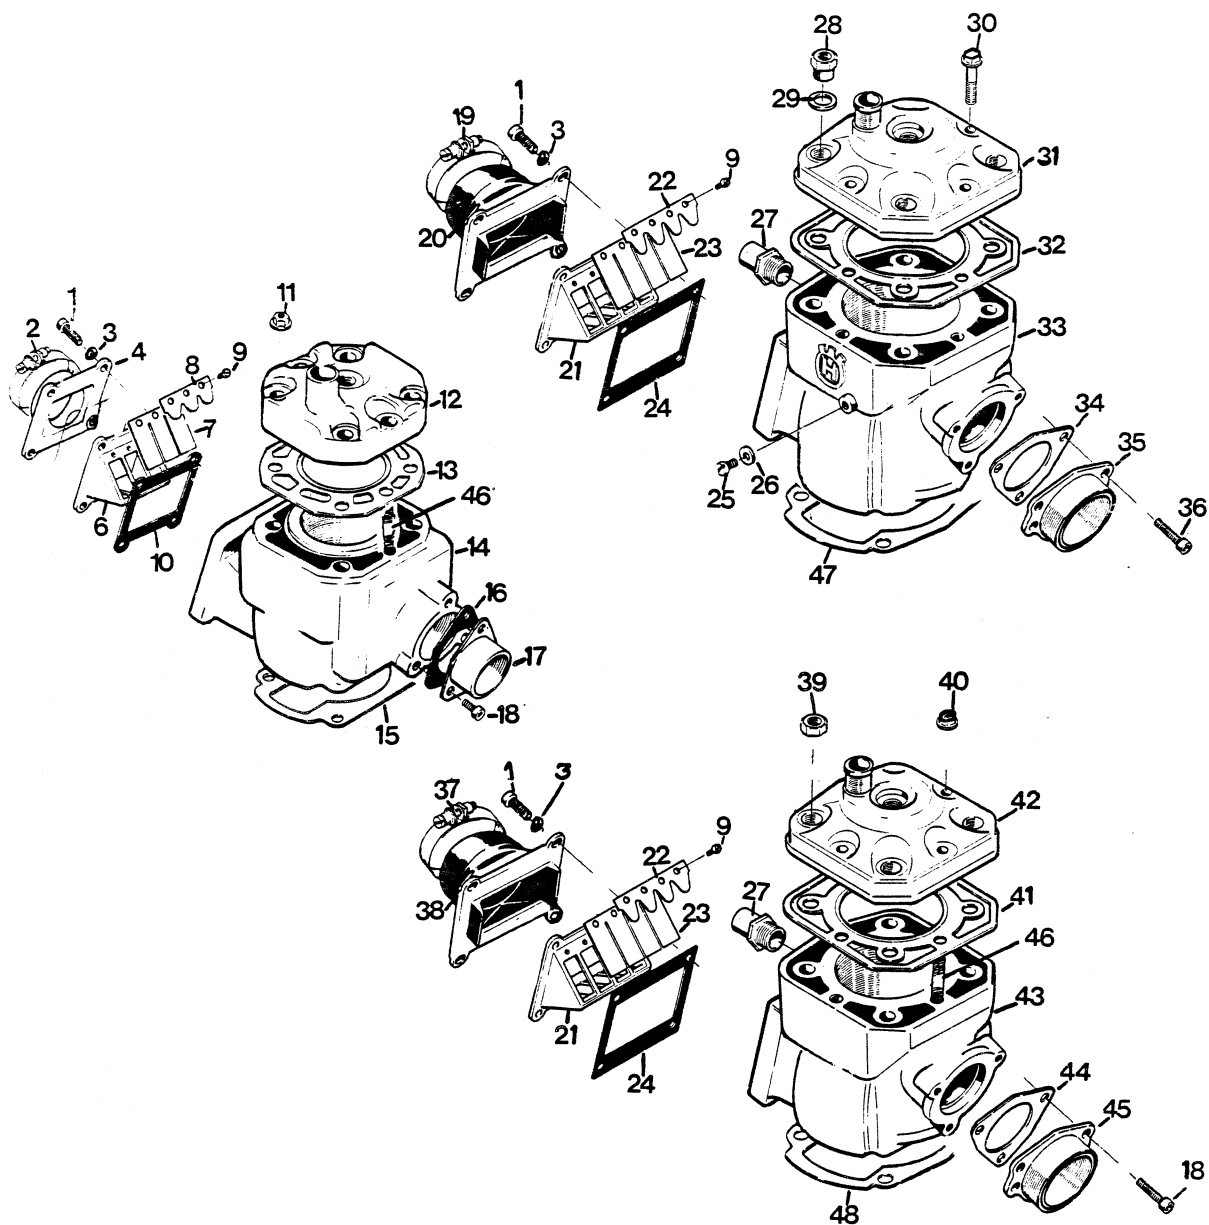


Fig.	Reservdelnummer Sparepart number	Antal - Quantity												Benämning, Description	
		125			250			400		500					
		CR		XC			CR	WRX	XC		WRX	CR	XC		
1	72 55 372-01	4		4			4	4	4		4	4	4	Skruv M6 x 25. Screw	
2	16 13 227-01	1												Klämma. Clamp	
3	73 51 153-50	4		4			4	4	4		4	4	4	Bricka. Washer	
4	16 11 857-01	1												Insugningsrör. Intake manifold	
6	16 11 855-01	1		1										Ventilhållare. Reed cage	
7	16 11 863-01	2		2										Ventil. Reed	
8	16 11 865-01	2		2										Ventilstöd. Reed support	
9	72 32 285-31	6		6			8	8	8		8	8	8	Skruv. Screw	
10	16 11 859-01	1		1										Packning. Gasket	
11	15 13 731-01	6		6										Mutter. Nut	
12	16 14 516-01	1		1										Cylinderlock. Cylinderhead	
13	16 14 522-01	1		1										Packning. Gasket	
14	16 14 525-03	1		1										Cylinder	
15	16 11 880-01	1		1										Packning. Gasket	
16	16 14 558-01	1		1										Packning. Gasket	
17	16 14 551-01	1		1										Avgasstos. Exhaust manifold	
18	72 55 368-01	3		3										Skruv M6 x 16. Screw	
19	16 13 598-01											1	1	Klämma. Clamp	
20	16 15 271-01											1	1	Insugningsrör. Intake manifold	
21	16 15 302-01						1	1	1		1	1	1	Ventilhållare. Reed cage	
22	16 11 866-01						2	2	2		2	2	2	Ventilstöd. Reed support	
23	16 11 864-01						2	2	2		2	2	2	Ventil. Reed	
24	16 11 861-01						1	1	1		1	1	1	Packning. Gasket	
25	72 52 364-53						1	1	1		1	1	1	Skruv M6 x 10. Screw	
26	16 10 823-01						1	1	1		1	1	1	Bricka. Washer	
27	16 14 508-01	1		1			1	1	1		1	1	1	Anslutning. Hose connection	
28	16 11 190-01											4	4	Mutter. Nut	
29	16 11 077-01											4	4	Bricka. Washer	
30	16 14 583-01											4	4	Skruv M8 x 40. Screw	
31	15 13 700-01											1	1	Cylinderlock. Cylinder head	
32	16 14 576-01											1	1	Packning. Gasket	
33	16 14 587-01											1	1	Cylinder	
34	16 14 577-01											1	1	Packning. Gasket	
35	16 14 476-01											1	1	Avgasstos. Exhaust manifold	
36	16 14 457-01											1	1	Skruv M6 x 20. Screw	
37	72 55 370-01										3	3	3	Klämma. Clamp	
38	16 15 206-01						1	1	1		1			Förgasaranslutning. Intake manifold	
39	16 15 272-01						1							Mutter M10. Nut	
40	16 15 302-01							1						Mutter M8. Nut	
41	15 13 704-01						4		4					Packning. Gasket	
42	15 13 731-01						4		4					Cylinderlock. Cylinder head	
43	16 14 495-01						1	1	1					Cylinder	
44	16 14 498-01						1							Packning. Gasket	
45	16 14 489-01							1						Avgasstos. Exhaust manifold	
46	16 14 463-01							1						Pinnskruv. Stud	
47	16 14 537-01						1	1	1					Base gasket	
48	16 14 534-01						1	1	1					Base gasket	
49	16 14 541-01	4		4			4	4	4						
50	16 11 882-01										1	1	1		
51	16 14 524-01						1	1	1						

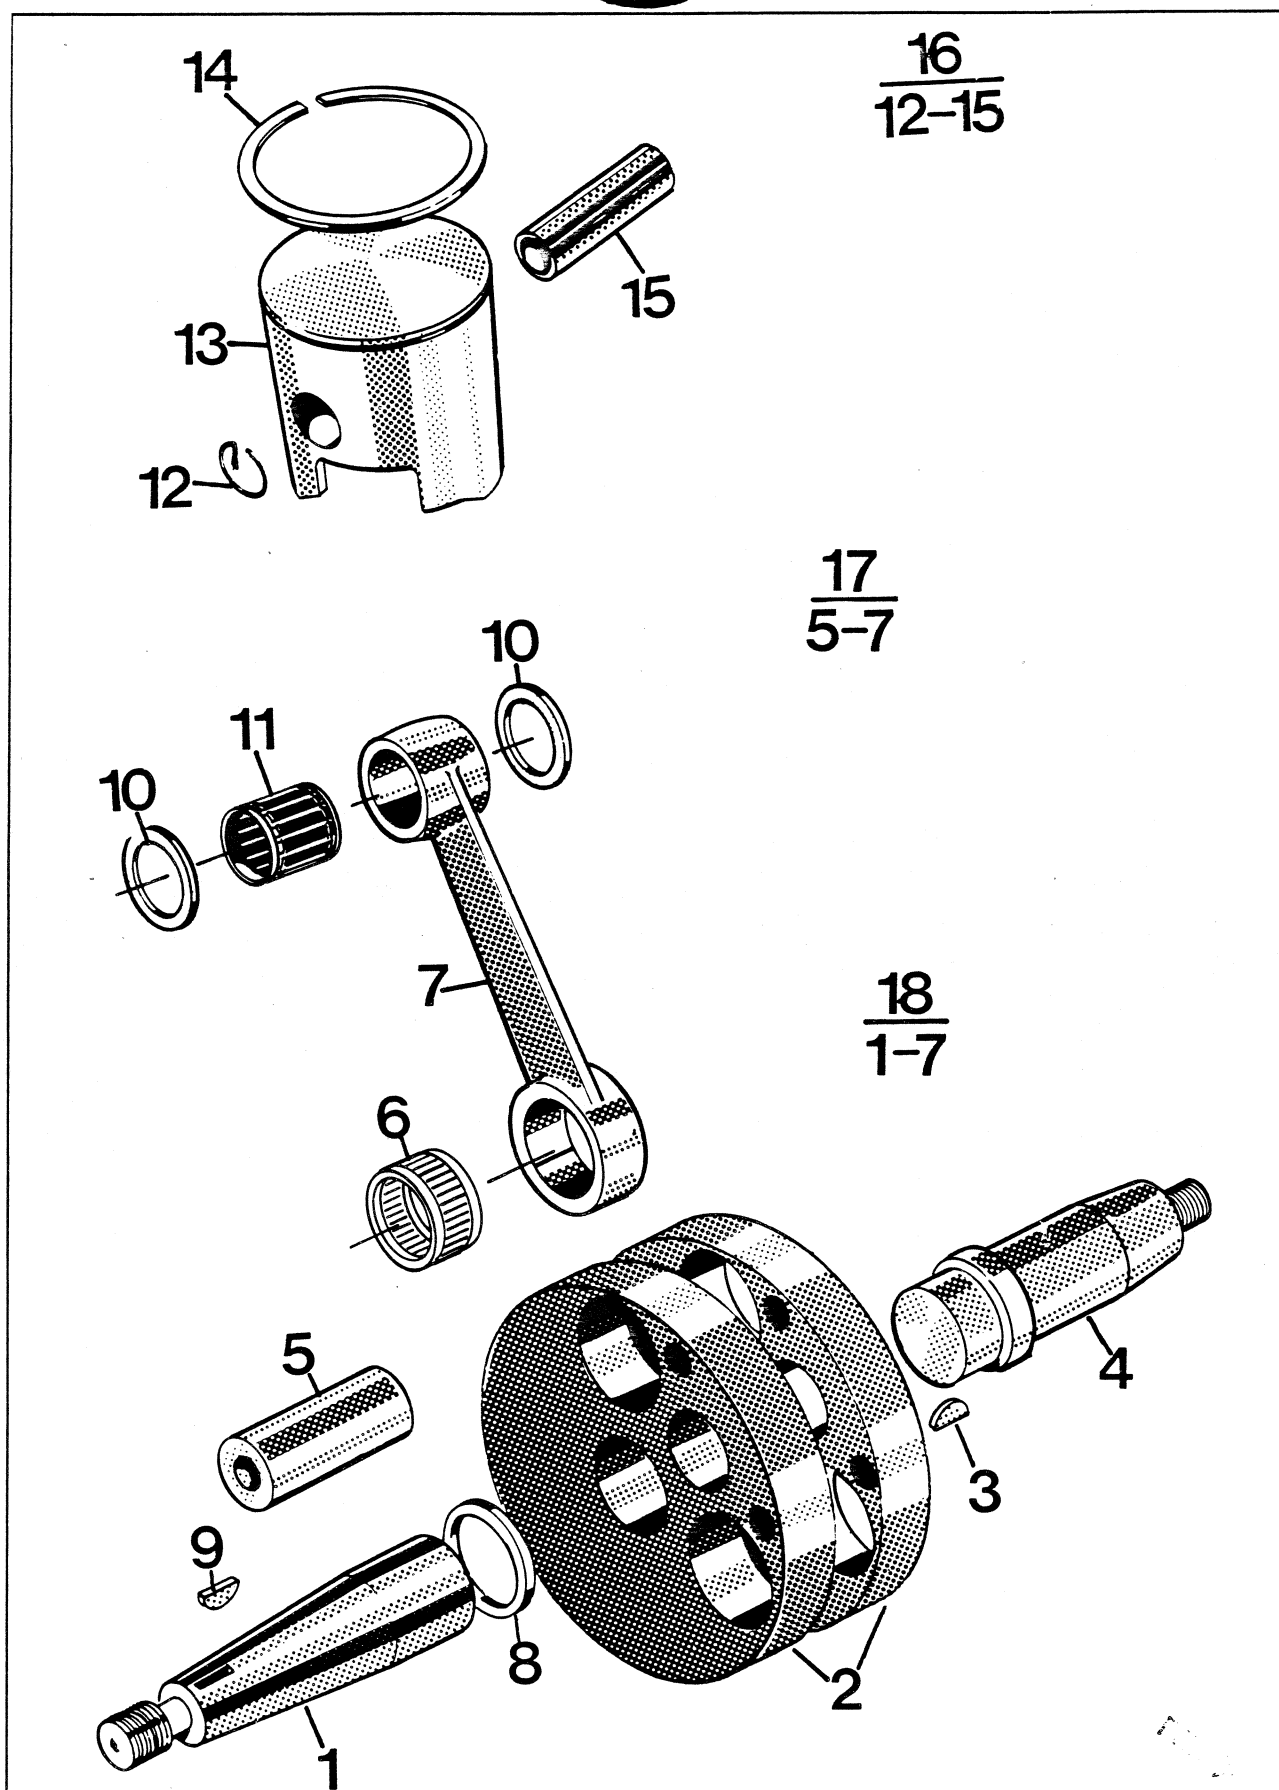


Fig.	Reservdelsnummer Sparepart number	Antal - Quantity												Benämning, Description	
		125			250			400		500					
		CR		XC			CR	WRX	XC		WRX	CR	XC		
1	16 10 653-01	1		1										Vevaxel, höger Crank shaft, right	
	16 11 659-01						1	1	1		1	1	1	Vevaxel, höger Crank shaft, right	
3	73 58 016-00	2		2			2	2	2		2	2	2	Kil 3 x 16 Key	
4	16 11 285-01	1		1										Vevaxel, vänster Crank shaft, left	
	16 14 539-01						1	1	1		1	1	1	Vevaxel, vänster Crank shaft, left	
8	16 10 676-01	1		1										Distans Spacer	
	16 10 921-01						1	1	1		1	1	1	Distans Spacer	
9	15 13 713-01	1		1			1	1	1		1	1	1	Kil Key	
10	16 10 674-01	2		2										Distans Spacer	
	16 10 971-01						2	2	2					Distans Spacer	
11	16 11 534-01	1		1										Nållager Needle bearing	
	16 10 933-01						1	1	1					Nållager Needle bearing	
	16 11 838-01										1			Nållager Needle bearing	
	16 11 205-01											1	1	Nållager Needle bearing	
12	16 11 739-01	2		2										Låsring Circlip	
	16 11 738-01						2	2	2		2			Låsring Circlip	
	16 11 195-01											2	2	Låsring Circlip	
14	16 14 521-01	1		1										Piston ring std	
	16 14 521-02													Piston ring 1st	
	16 14 521-03													Piston ring 2nd	
	16 10 831-01						1	1	1					Piston ring std	
	16 10 831-02													Piston ring 1st	
	16 10 831-03													Piston ring 2nd	
	16 10 831-04													Piston ring 3rd	
	16 11 189-01											1	1	Piston Ring std	
	16 14 592-01										1			Piston ring std	
	16 11 189-02													Piston Ring 1st	
	16 14 592-02													Piston ring 1st	
	16 11 189-03													Piston Ring 2nd	
	16 14 592-03													Piston ring 2nd	
16	16 14 520-01	1		1										Piston compl. std	
	16 14 520-02													Piston compl. 1st	
	16 14 520-03													Piston compl. 2nd	
	16 14 492-01						1		1					Piston kompl. std	
	16 14 492-02													Piston compl. 1st	
	16 14 492-03													Piston compl. 2nd	
	16 14 492-04													Piston compl. 3rd	
	16 14 487-01											1	1	Piston compl std	
	16 14 455-01											1		Piston compl. std	
	16 14 487-02													Piston compl 1st	
	16 14 455-02													Piston compl. 1st	
	16 14 487-03													Piston compl 2nd	
	16 14 455-03													Piston compl. 2nd	
17	16 10 383-01	1		1			1	1	1		1			Renov.sats vevstake Overhaulkit conn.rod	
	16 19 825-01											1	1		
	16 19 829-01														
18	16 14 542-01	1		1										Vevparti, kpl. Crank shaft, compl.	
	16 14 477-01											1	1		
	16 14 538-01						1		1						
	16 14 579-01										1				

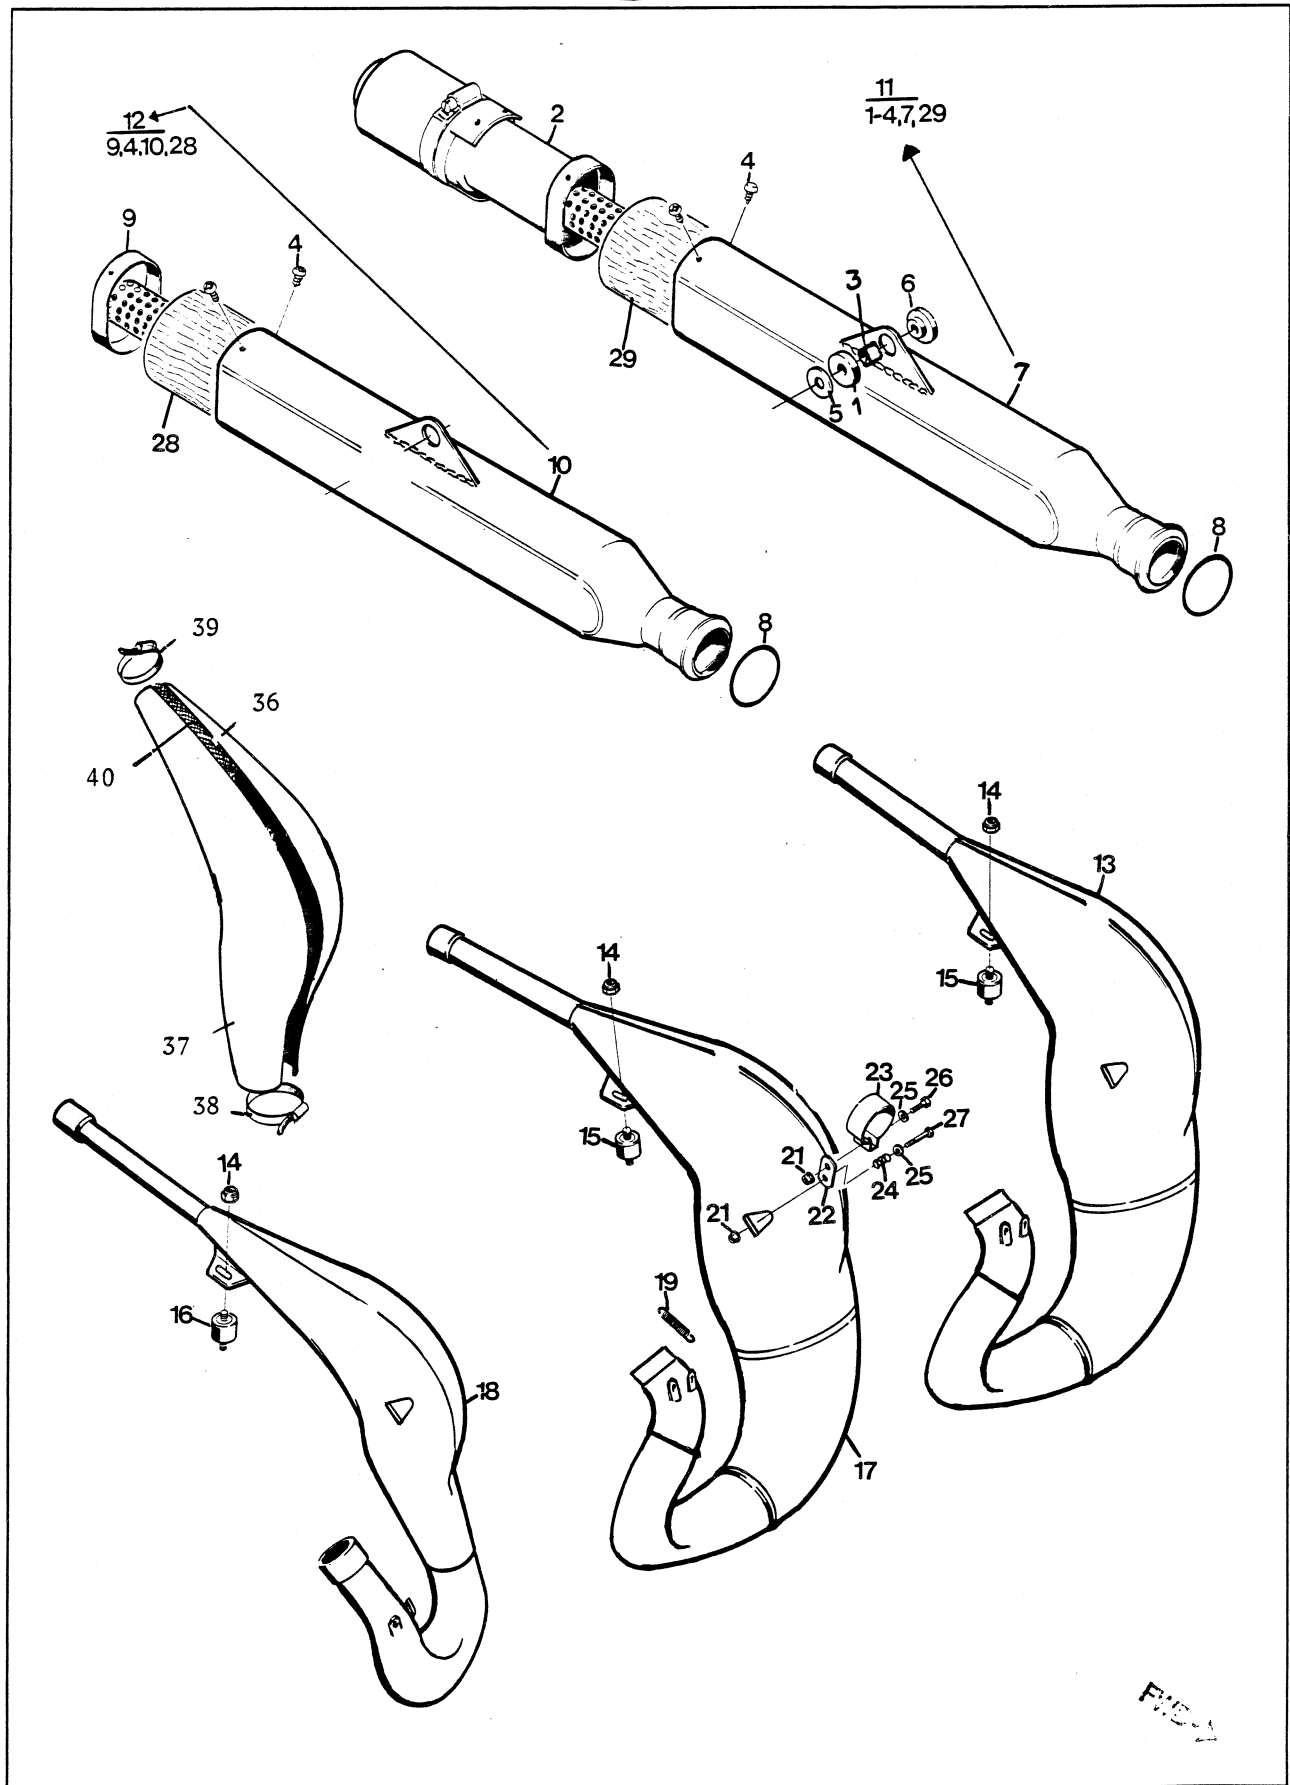


Fig.	Reservdelnummer Sparepart number	Antal - Quantity												Benämning, Description		
		125			250			400			500					
		CR		XC			CR	WRX	XC			WRX	CR			XC
N	1	15 13 414-01	1		1			1	1	1		1	1	1	Bricka. Washer	
	2	15 13 416-01			1				1	1		1		1	Insats kpl med gnistsläckare. Innertube compl with sparkarrestor	
	3	15 15 108-01	1		1			1	1	1		1	1	1	Distans. Spacer	
	4	72 95 842-01	4		4			4	4	4		4	4	4	Skruv. Screw	
	5	15 13 709-01	1		1			1	1	1		1	1	1	Bricka. Washer	
	6	15 14 032-02	1		1			1	1	1		1	1	1	Gummibussning. Rubber bushing	
	8	15 14 559-01	1		1			1	1	1		1	1	1	O-ring	
	9	15 13 398-01 15 13 398-02 15 13 398-03	1					1					1		Innerrör. Innertube Innerrör. Innertube Innerrör. Innertube	
	11	15 13 420-01			1				1	1		1		1	Ljuddämpare kpl. Silencer compl.	
N	12	15 13 393-01 15 13 393-02 15 13 393-03	1					1					1		Ljuddämpare. Silencer Ljuddämpare. Silencer Ljuddämpare. Silencer	
	13	15 13 401-01 15 13 454-02										1	1	1	Avgasrör. Exhaust pipe	
	14	73 22 118-01	2		2			2	2	2		2	2	2	Mutter M8. Nut	
	15	15 14 590-01						1	1	1		1	1	1	Vibrationsdämpare. Damper	
	16	15 13 318-01	1		1										Vibrationsdämpare. Damper	
	17	15 13 425-01						1		1					Avgasrör. Exhaust pipe	
	18	15 13 382-01	1		1				1						Avgasrör. Exhaust pipe	
	19	15 13 391-01	2		2			2	2	2		2	2	2	Fjäder. Spring	
	21	15 13 706-01	2		2			2	2	2		2	2	2	Mutter M6. Nut	
N	22	15 13 389-01	1		1			1	1	1		1	1	1	Fäste. Attachment	
	23	15 13 441-01	1		1			1	1	1		1	1	1	Klämma. Clamp	
	24	15 14 038-01	1		1			1	1	1		1	1	1	Fjäder. Spring	
	25	73 44 926-01	4		4			4	4	4		4	4	4	Bricka. Washer	
	26	72 52 372-51	1		1			1	1	1		1	1	1	Skruv M6 x 25. Screw	
	27	72 52 376-51	1		1			1	1	1		1	1	1	Skruv M6 x 35. Screw	
	28	15 13 336-03 15 13 336-02	1					1					1		Stoppning. Packing Stoppning. Packing	
	29	15 13 336-03			1				1	1		1		1	Stoppning. Packing	
		36	15 13 463-01 15 13 473-01							1				1		Outer cover-left Outer cover-left
37		15 13 464-01 15 13 471-01							1				1		Outer cover-right Outer cover-right	
38		15 13 349-01							1				1		Clamp 90/110	
39		15 14 476-01							1				1		Clamp 60/80	
40		15 13 233-01 15 13 218-02							2				2		Insulation Insulation	


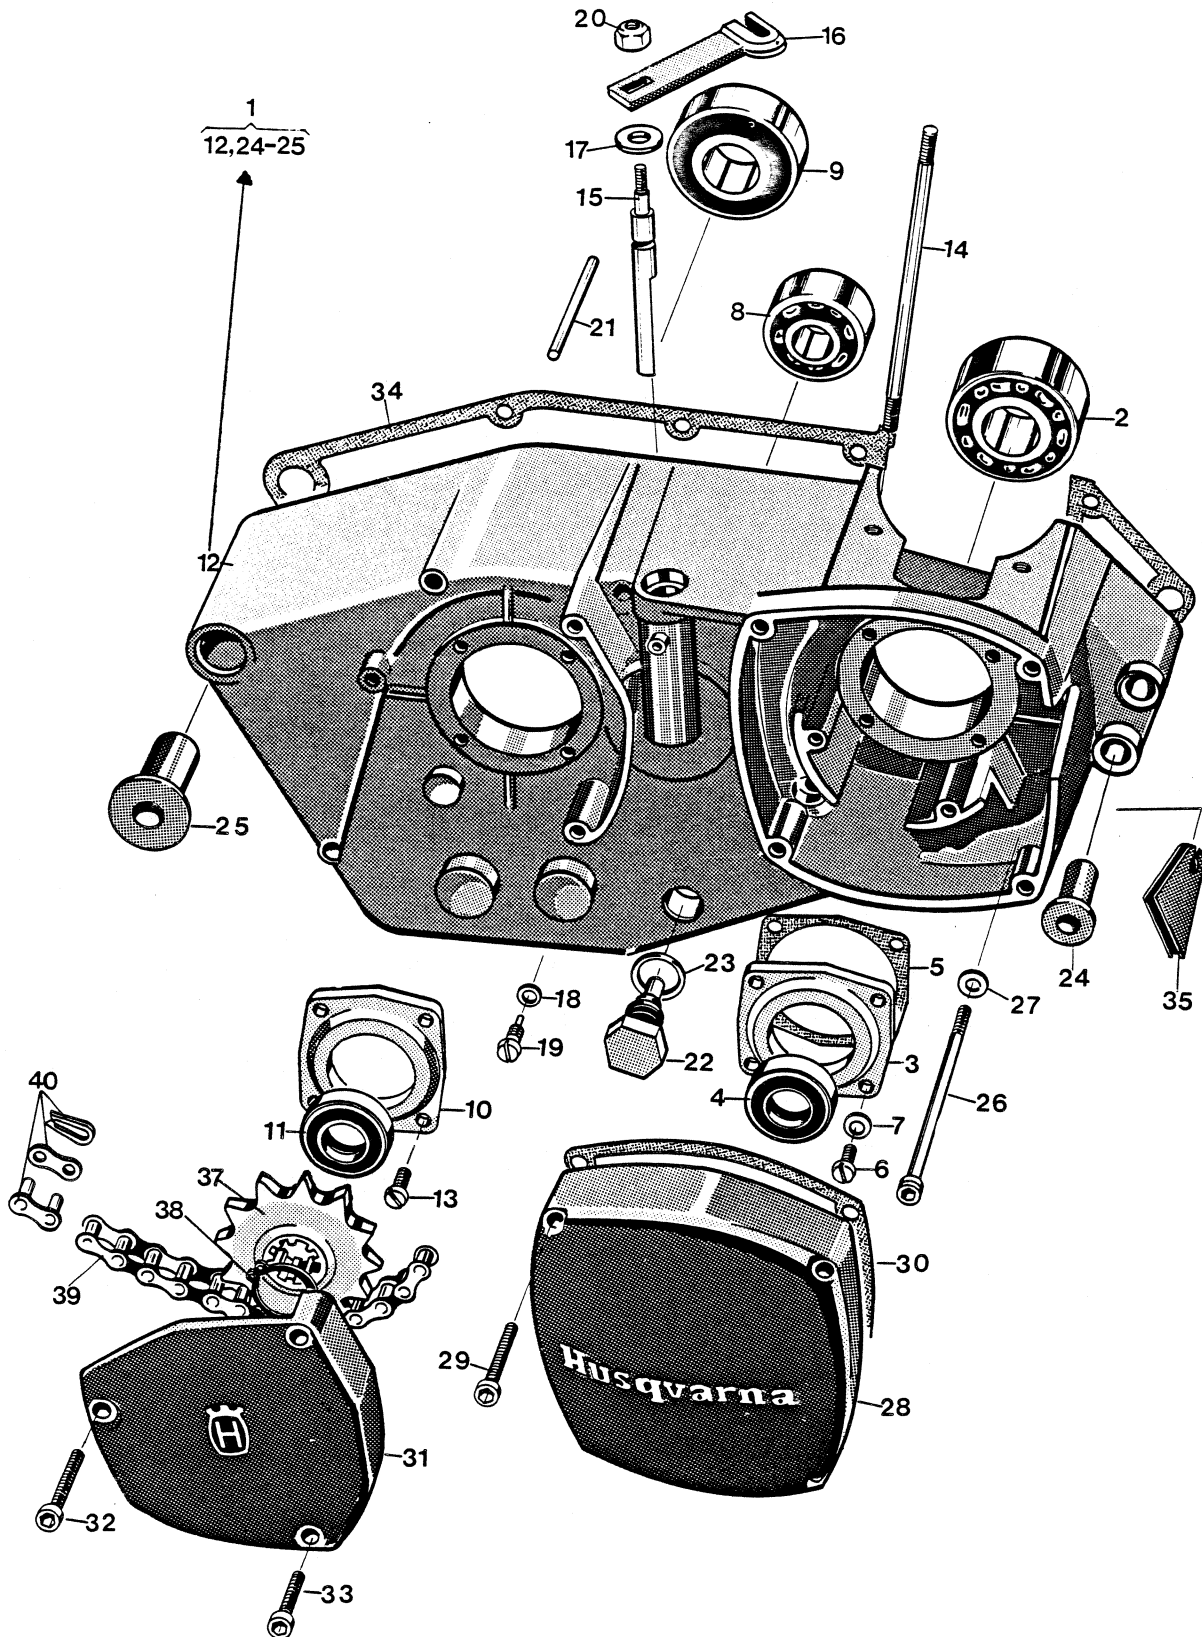


Fig.	Reservdelsnummer Sparepart number	Antal - Quantity												Benämning, Description			
		125			250			400			500						
		CR		XC			CR		XC			CR				XC	
N	1	16 19 690-01	1		1											Vevhushalva, höger Crankcase halve right	
N		16 19 692-01	1		1											Vevhushalvor par Crankcase halves pair	
	2	73 83 204-40	1		1											Kullager Ball bearing	
	3	16 10 679-01	1		1											Fläns Flange	
	4	16 10 681-01	1		1											Tättring Seal	
	5	12 25 360-01	1		1											Packning Gasket	
	6	72 31 328-51	4		4											Skruv M5 x 14 Screw	
	7	73 51 146-50	4		4											Fjäderbricka Washer	
	8	73 82 302-40	1		1											Kullager Ball bearing	
	9	16 16 351-01	1		1											Kullager Ball bearing	
	10	16 11 778-01	1		1											Fläns Flange	
	11	16 12 359-01	1		1											Distans Spacer	
	13	72 35 328-55	4		4											Skruv M5 x 14 Screw	
	14	16 11 546-02	4		4											Dragbult, cylinder Cylinder stud	
	15	16 10 774-01	1		1											Frikopplingsaxel Declutching shaft	
	16	16 11 171-01	1		1											Hävarm Lever	
	17	15 13 722-01	1		1											Tättring Seal	
	18	73 44 878-00	1		1											Bricka Washer	
	19	12 25 077-01	1		1											Stoppskruv Screw	
	20	73 22 118-01	1		1											Låsmutter M8 Nut	
	21	72 11 350-40	1		1											Pinne Pin	
	22	16 12 537-01	1		1											Magnetplugg Magneto plug	
	23	12 25 025-01	1		1											Packning Gasket	
	24	16 10 777-01	2		2											Flänsbussning Flange sleeve	
	25	16 11 516-01	1		1											Flänsbussning Flange sleeve	
	26	72 55 385-01	9		9											Skruv M6 x 75 Screw	
	27	73 41 153-01	9		9											Bricka 6.4 x 12.5 Washere	
	28	16 10 647-01	1		1											Magnetkåpa Magneto cover	
	29	72 55 378-01	4		4											Skruv M6 x 40 Screw	
	30	16 11 623-01	1		1											Packning Gasket	
	31	16 11 560-02	1		1											Kåpa Cover	
	32	72 55 380-01	1		1											Skruv M6 x 50 Screw	
	33	72 55 376-01	2		2											Skruv M6 x 35 Screw	
	34	16 11 641-01	1		1											Vevhuspackning Gasket	
	35	16 14 728-01	1		1											Genomföring Grommet	
	37	16 12 693-04	1		1											Kedjedrev z = 13 Sprocket	
	38	73 53 126-00	1		1											Spårring. Circlip	
	39	15 19 760-12	1		1											Kedja 5/8 x 1/4 118. Chain	
	40	15 19 759-04	1		1											Kedjelås. Master link	

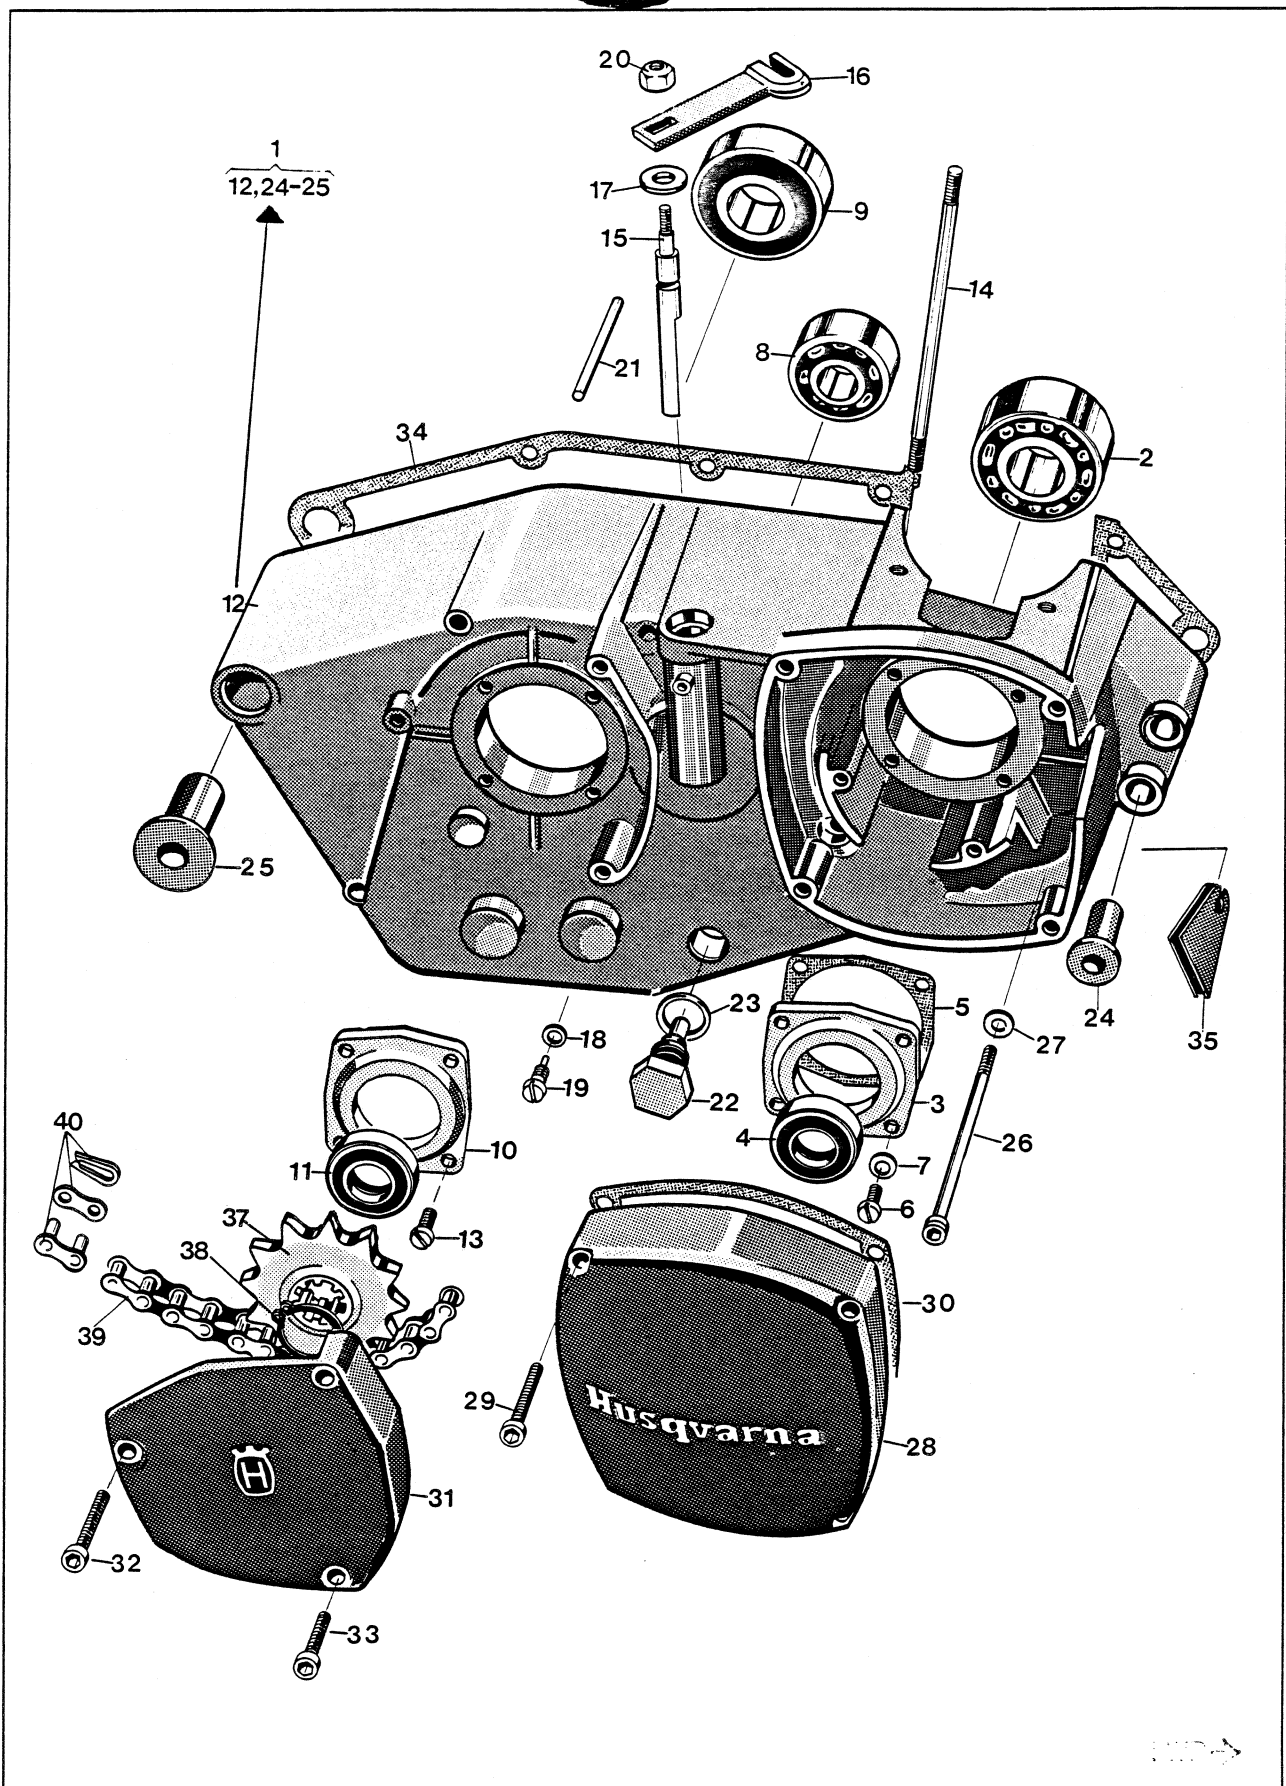

Tillbehör/Accessories

16 12 693-01
16 12 693-02
16 12 693-03
16 12 693-05
16 12 693-06
16 12 693-07
16 12 693-08
16 19 852-01

Kedjedrev
Front sprocket
z = 10
z = 11
z = 12
z = 14
z = 15
z = 16
z = 17
Packningssats
Gasket set

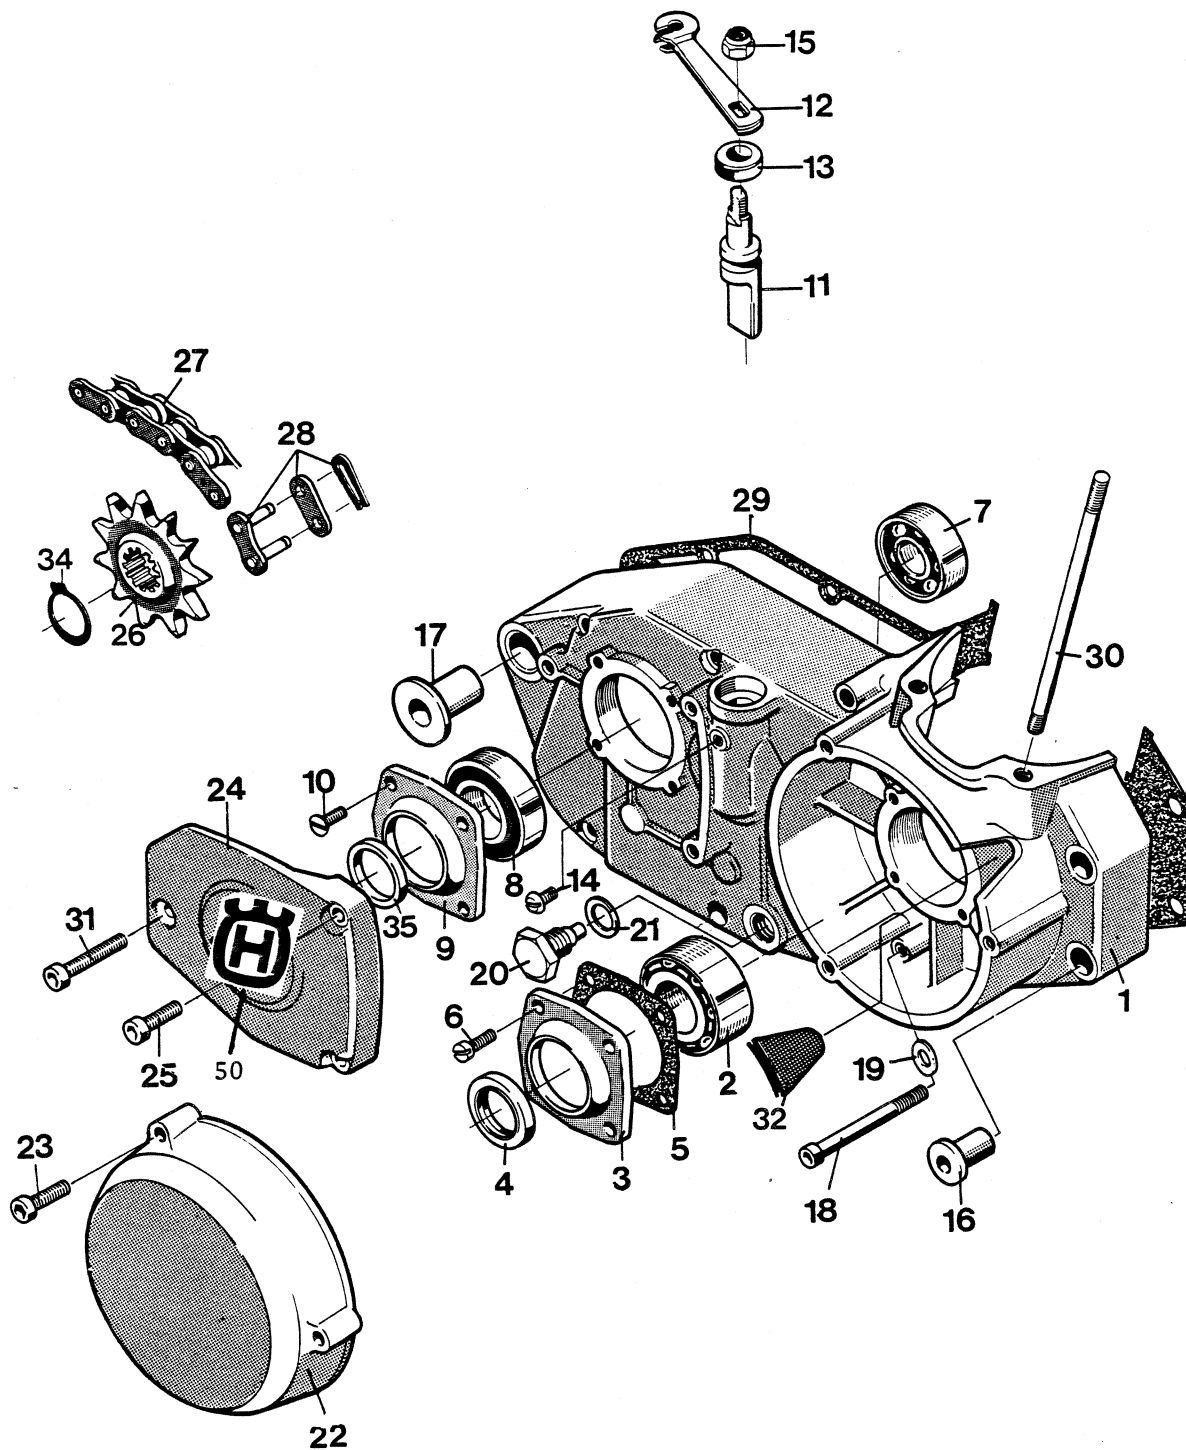


Fig.	Reservdelsnummer Sparepart number	Antal - Quantity										Benämning, Description	
		125				250			400		500		
		CR	XC			CR	WRX	XC	WRX	CR	XC		
N	16 19 686-01					1	1	1				Vevhus, kpl. Crankcase, compl.	
	16 19 689-01								1	1	1		
N	16 19 684-01					1	1	1		1	1	Vevhushalva höger, kpl. Crankcase half, compl.	
N	16 19 687-01								1	1	1		
2	73 83 205-40					1	1	1	1	1	1	Vinkelkontaktkullager Ball bearing	
3	16 10 810-01					1	1	1	1	1	1	Fläns Flange	
4	15 13 725-01					1	1	1	1	1	1	Tätning Seal	
5	12 25 358-01					1	1	1	1	1	1	Packning Gasket	
6	72 31 328-51					4	4	4	4	4	4	Skruv M5 x 14 Screw	
7	73 82 302-40					1	1	1	1	1	1	Kullager Ball bearing	
8	73 82 205-28							1	1	1	1	Kullager Ball bearing	
	16 16 351-01					1		1					
9	16 11 778-01					1	1	1		1	1	Fläns Flange	
10	72 35 328-55					4	4	4	4	4	4	Skruv M5 x 14 Screw	
11	16 11 663-01					1	1	1	1	1	1	Frikopplingsaxel Declutching shaft	
N	16 14 584-01					1	1	1	1	1	1	Hävarm Lever	
13	15 13 722-01					1	1	1	1	1	1	Tätning Seal	
14	72 31 323-01					1	1	1	1	1	1	Skruv M5 x 8 Screw	
15	73 22 118-01					1	1	1	1	1	1	Låsmutter Nut	
16	16 10 777-01					2	2	2	2	2	2	Flänsbussning Flange sleeve	
N	16 14 589-01					1	1	1	1	1	1	Flänsbussning Flange sleeve	
18	72 55 385-01					6	6	6	6	6	6	Skruv M6 x 75 Screw	
19	73 41 153-01					6	6	6	6	6	6	Bricka 6.4 x 12.5 Washer	
20	16 12 537-01					1	1	1	1	1	1	Magnetbult Magneto plug	
21	12 25 025-01					1	1	1	1	1	1	Packning Gasket	
22	16 11 640-01					1	1	1	1	1	1	Magnetkåpa Magneto cover	
23	72 55 378-01					3	3	3	3	3	3	Skruv M6 x 40 Screw	
24	16 11 816-02					1	1	1	1	1	1	Kåpa Cover	
25	72 55 374-01					2	2	2	2	2	2	Skruv M6 x 30 Screw	
26	16 12 693-03					1						Kedjedrev z = 12 Sprocket = 12	
	16 12 693-04						1	1				Kedjedrev z = 13 Sprocket = 13	
	16 12 693-05								1	1		Kedjedrev z = 14 Sprocket = 14	
	16 12 693-06										1	Kedjedrev z = 15 Sprocket = 15	
27	15 19 760-11					1		1				Chain--116L Non-O-Ring	
	15 19 760-12									1	1	Chain--118L Non-O-Ring	
	15 19 760-06						1		1			Chain--116L O-Ring	
28	15 19 759-04					1		1		1	1	Kedjelås Chain lock	
	See page C-19 for more master link info.												
29	16 11 667-01					1	1	1				Packning Gasket	
	16 11 667-02								1	1	1		
30	16 11 883-03					4	4	4		4	4	Dragbult Cylinder stud	
	16 11 710-01								4				
31	72 55 376-01					1	1	1	1	1	1	Skruv M6 x 36 Screw	
32	16 14 728-01					1	1	1	1	1	1	Kabelgenomföring Grommet	



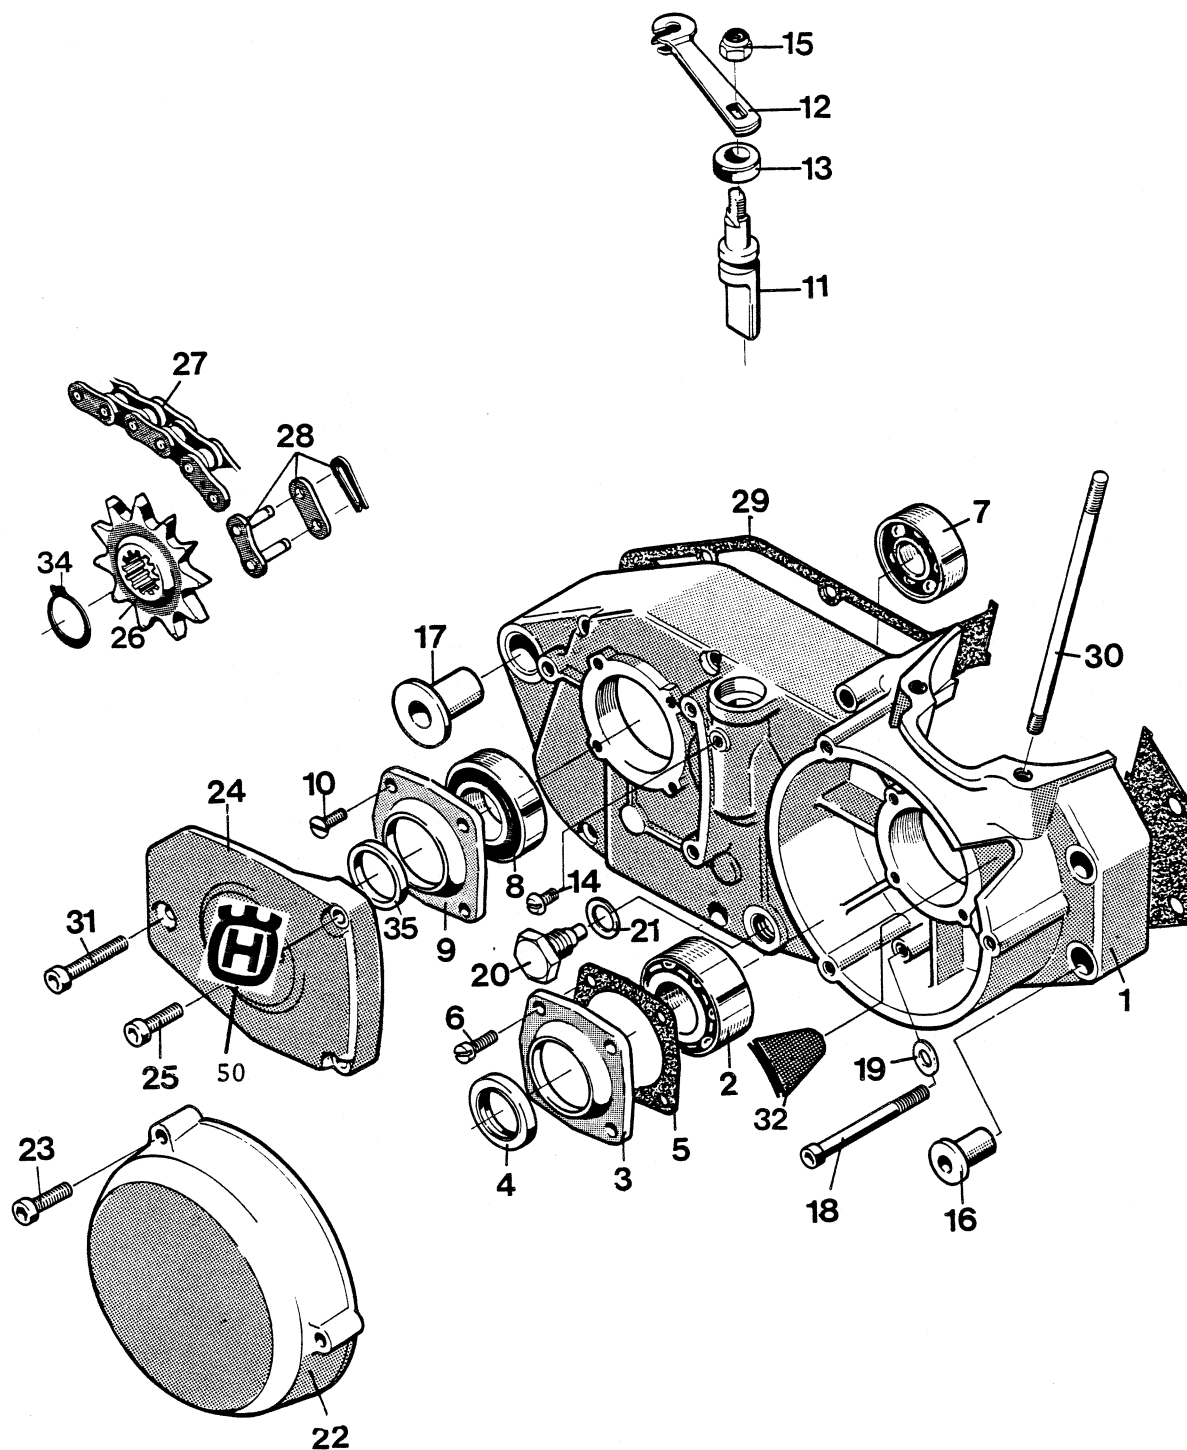


Fig.	Reservdelsnummer Sparepart number	Antal - Quantity										Benämning, Description		
		125		250			400		500					
		CR	XC			CR	WRX	XC		WRX	CR			XC
33	16 19 863-01 16 19 864-01					1	1	1		X	1	1	Packningssats Gasket set	
34	73 53 126-00					1	1	1		1	1	1	Låsring Circlip	
35	16 12 359-01 16 19 864-01					1	1	1		1	1	1	Distans Spacer GSKT SET	
50	16 11 844-01												Decal, sprocket cover	
	<u>Master link</u> 00 01 135-02 15 19 759-04 15 19 759-46 15 19 759-56 None available												Chain <u>Applicaton</u> Rk O-Ring Regina Non-O-Ring Regina Endless O-Ring Regina Endless O-Ring (rivet link) QR Non-O-Ring	

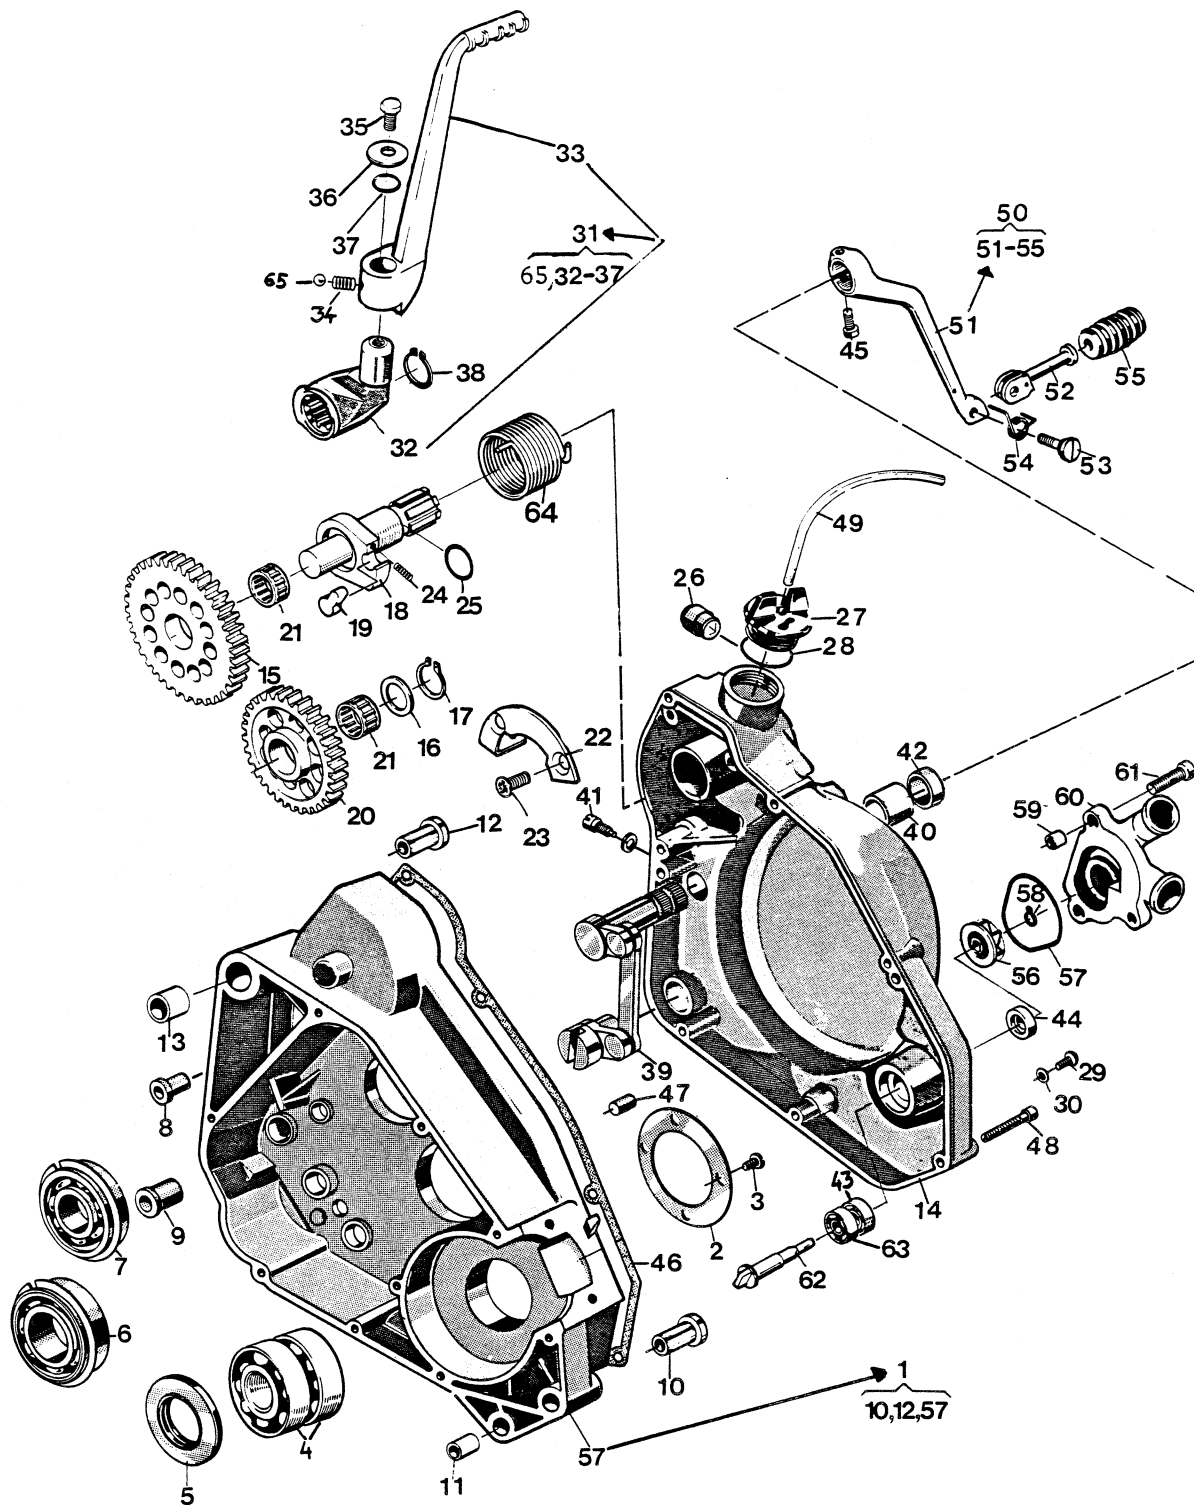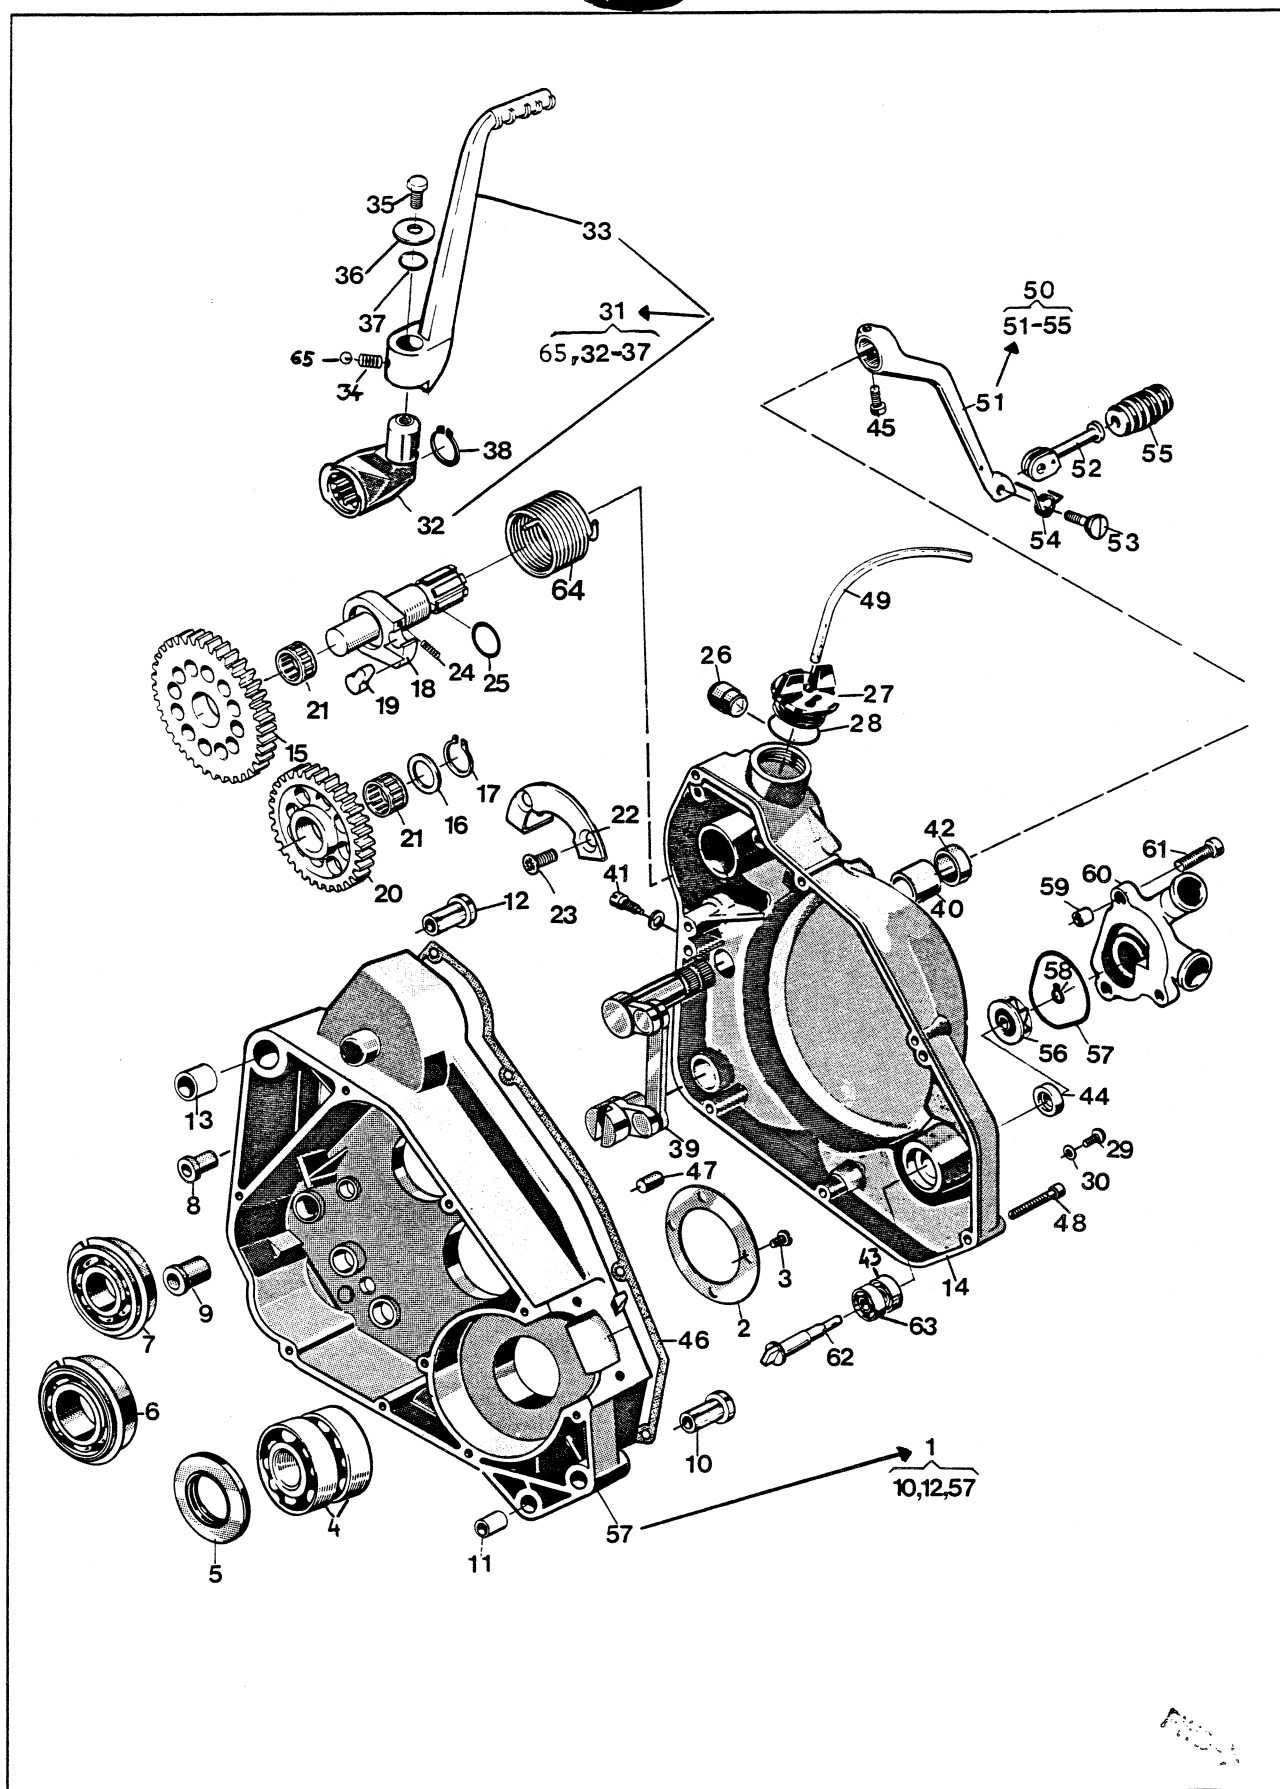

FWD-A

Fig.	Reservdelnummer Sparepart number	Antal - Quantity										Benämning, Description					
		125					250				500						
		CR		XC			CR		XC					CR		XC	
N	1	16 19 691-01	1		1											Vevhushalva, vänster Crankcase halve left	
N		16 19 692-01	1		1											Vevhushalvor par Crankcase halves	
	2	16 11 566-01	1		1											Stödbricka Support washer	
	3	72 52 331-86	4		4											Skruv M5 x 20 Screw	
	4	73 82 204-25	2		2											Kullager SKF 3204/C3 Ball bearing	
	5	15 13 724-01	1		1											Tätning Seal	
	6	15 13 721-01	1		1											Kullager SKF 6205 NR/C3 Ball bearing	
	7	15 13 720-01	1		1											Kullager SKF 6303 NR/C3 Ball bearing	
	8	16 11 465-01	2		2											Bussning Bushing	
	9	12 25 356-01	1		1											Bussning Bushing	
	10	16 10 777-01	2		2											Flänsbussning Flange sleeve	
	11	16 10 776-01	1		1											Styrhylsa Steering sleeve	
N	12	16 14 589-01	1		1											Flänsbussning Flange sleeve	
N	13	16 14 590-01	1		1											Styrhylsa Steering sleeve	
N	14	16 19 849-02	1		1											Vevhuskåpa, vänster Transmission cover	
	15	16 11 282-01	1		1											Kickhjul Gearwheel kickstart	
	16	15 13 714-01	1		1											Bricka Washer	
	17	73 53 118-00	1		1											Spårring Circlip	
	18	16 11 677-01	1		1											Kickaxel Kickshaft	
	19	16 11 680-01	1		1											Medbringare Pawl	
	20	16 11 281-01	1		1											Mellanhus Idle gear	
	21	16 11 675-01	1		1											Nållager Needle bearing	
	22	16 11 284-01	1		1											Fjäderhållare Spring holder	
	23	72 52 331-05	2		2											Skruv Screw	
	24	16 11 681-01	1		1											Fjäder Spring	
	25	74 04 313-10	2		2											O-ring	
N	26	16 17 017-01	1		1											Buffert Buffert	
	27	16 10 786-01	1		1											Lock Cap	
	28	50 12 782-01	1		1											Packning Gasket	
	29	72 31 364-01	1		1											Skruv M6 x 10 Screw	
	30	16 10 823-01	1		1											Packning Gasket	
N	31	16 11 086-01	1		1											Kickstartpedal, kpl. Kick starter pedal compl.	
	32	16 11 672-02	1		1											Underdel, kick Lower part	
N	33	16 11 083-01	1		1											Kickstartpedal Kick starter pedal	
	34	16 11 084-01	1		1											Fjäder Spring	
	35	72 55 366-01	1		1											Skruv M6 x 12 Screw	
	36	16 11 298-01	1		1											Bricka Washer	
	37	74 04 313-10	1		1											O-ring	
	38	73 53 122-00	1		1											Spårring Circlip	
	39	16 11 535-01	1		1											Växelmekanism, kpl. Gear links compl.	



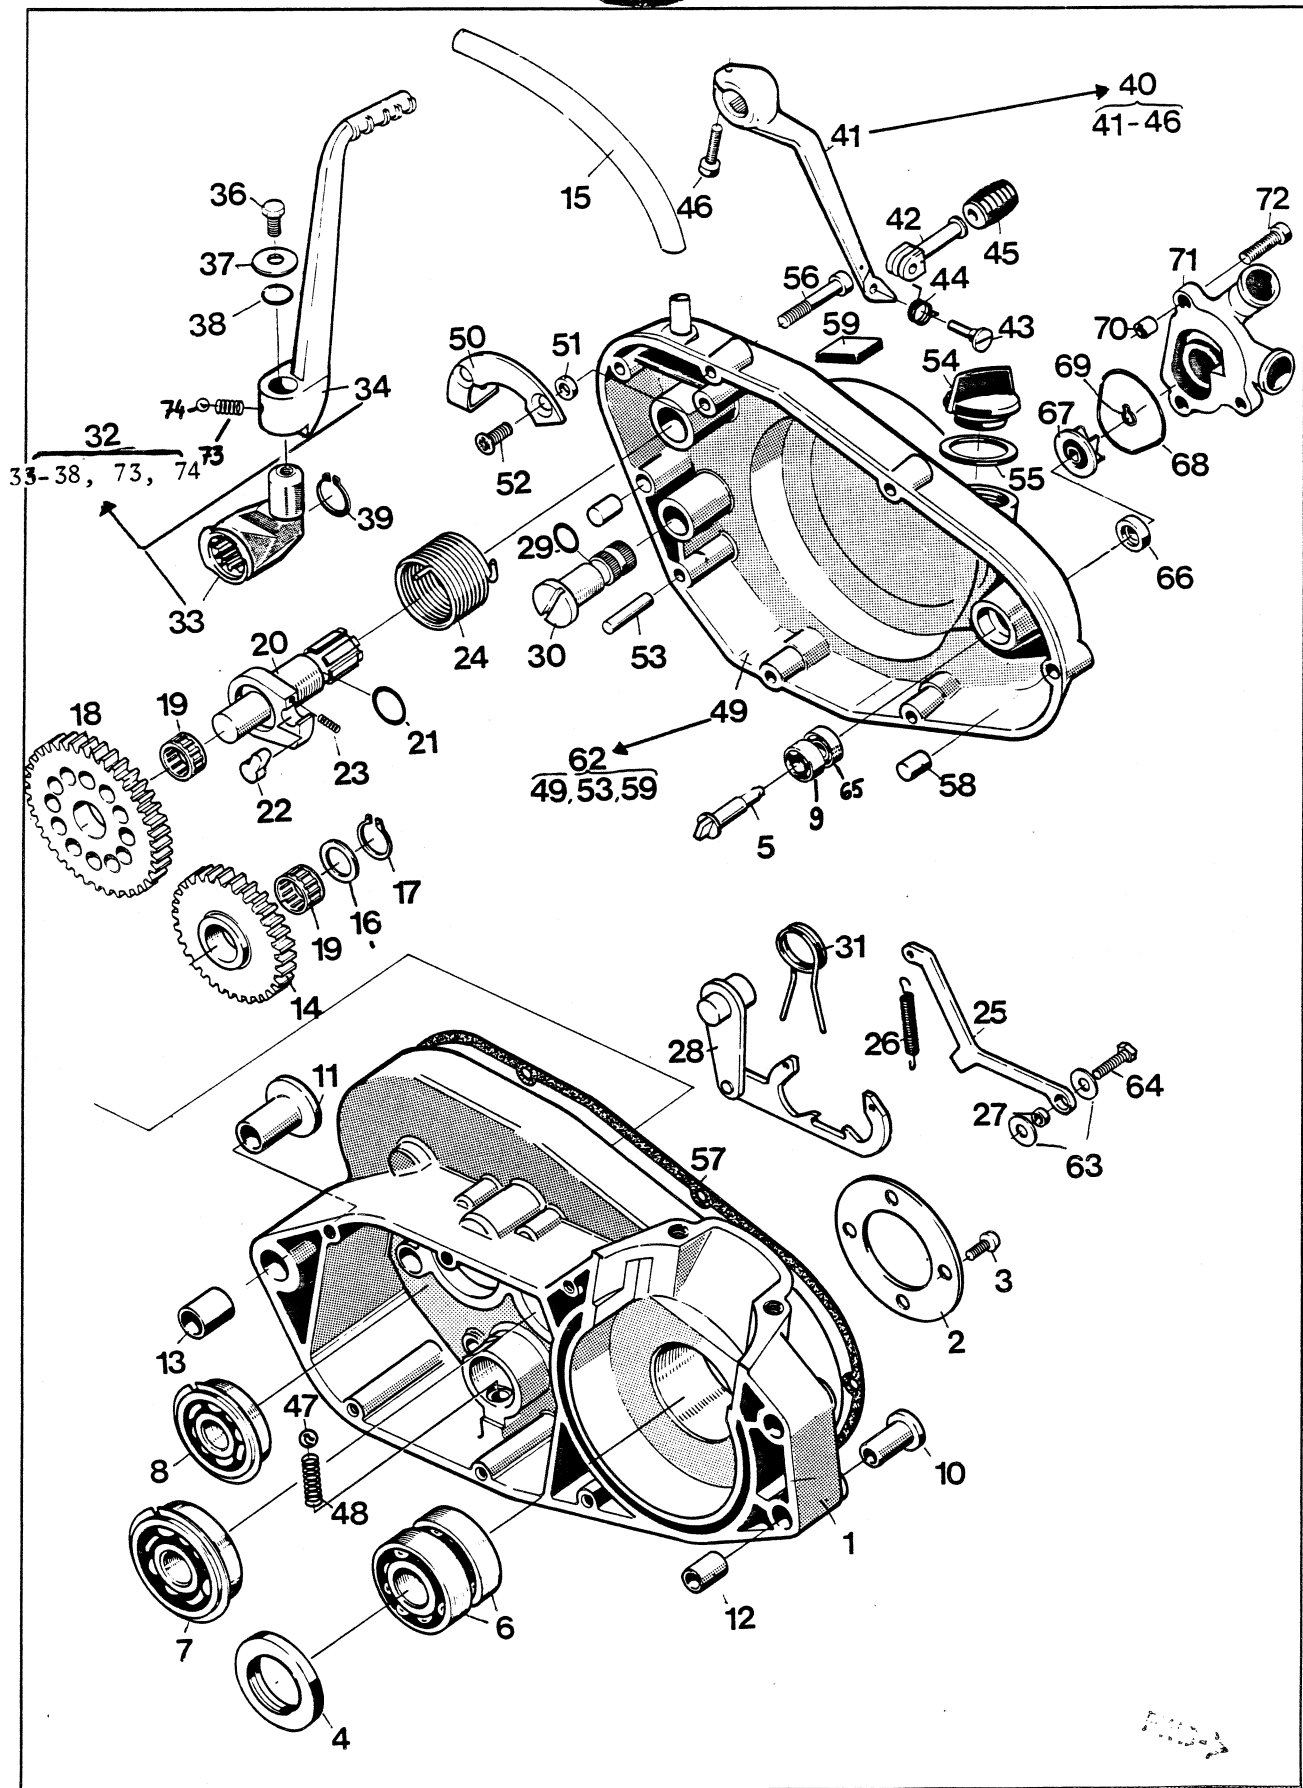
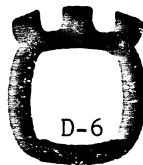


Fig.	Reservdelsnummer Sparepart number	Antal - Quantity												Benämning, Description		
		125			250			400			500					
		CR		XC			CR	WRX	XC			WRX	CR			XC
N	1	16 19 685-01					1	1	1			1	1	1	Vevhushalva, vänster komplett	
N		16 19 688-01													Crankcase halve left	
	2	16 10 779-01					1	1	1			1	1	1	Stödbricka	
															Support washer	
	3	72 52 331-86					4	4	4			4	4	4	Skruv M6S x 20	
															Screw	
	4	15 13 726-01					1	1	1			1	1	1	Tätning	
															Seal	
N	5	16 17 966-01					1	1	1			1	1	1	Pumpaxel	
															Pump shaft	
	6	73 82 205-25					2	2	2			2	2	2	Kullager	
															Ball bearing	
	7	15 13 721-01					1	1	1			1	1	1	Kullager	
															Ball bearing	
	8	15 13 720-01					1	1	1			1	1	1	Kullager	
															Ball bearing	
	9	73 82 198-00					1	1	1			1	1	1	Kullager	
															Ball bearing	
	10	16 10 777-01					2	2	2			2	2	2	Flänsbussning	
															Flange sleeve	
N	11	16 14 589-01													Flänsbussning	
															Flange sleeve	
	12	16 10 776-01					1	1	1			1	1	1	Styrhylsa, fram	
															Steering sleeve	
N	13	16 14 590-01					1	1	1			1	1	1	Styrhylsa, bak	
															Steering sleeve	
	14	16 11 271-01					1	1	1			1	1	1	Mellanhus	
															Cog wheel	
	15	16 14 540-01					1	1	1			1	1	1	Ventilationsslang	
															Ventilation hose	
	16	15 13 714-01					1	1	1			1	1	1	Bricka	
															Washer	
	17	73 53 118-00					1	1	1			1	1	1	Spårring	
															Circlip	
	18	16 11 270-01					1	1	1			1	1	1	Kugghjul	
															Gear wheel	
	19	16 11 675-01					2	2	2			2	2	2	Nålhylsa	
															Sleeve	
	20	16 11 677-01					1	1	1			1	1	1	Kickaxel	
															Shaft	
	21	74 04 313-10					1	1	1			1	1	1	O-ring	
															O-ring	
	22	16 11 680-01					1	1	1			1	1	1	Medbringare	
															Driving	
	23	16 11 681-01					1	1	1			1	1	1	Fjäder	
															Spring	
	24	16 11 682-01					1	1	1			1	1	1	Kickfjäder	
															Spring	
	25	16 11 683-01					1	1	1			1	1	1	Lägeshake	
															Hook link	
	26	16 11 684-01					1	1	1			1	1	1	Fjäder	
															Spring	
	27	16 11 216-01					1	1	1			1	1	1	Bussning	
															Bushing	
	28	16 11 686-01					1	1	1			1	1	1	Växelmatare	
															Kicker	
	29	74 04 310-10					2	2	2			2	2	2	O-ring	
															O-ring	
	30	16 11 746-01					1	1	1			1	1	1	Växlingsaxel	
															Shaft	
	31	16 11 692-01					1	1	1			1	1	1	Återgångsfjäder	
															Return spring	
N	32	16 11 086-01					1	1	1			1	1	1	Kickstartvev	
															Kick starter cpl.	
	33	16 11 672-01					1	1	1			1	1	1	Underdel, kick	
															Lower part, kickstarter	
N	34	16 11 083-01					1	1	1			1	1	1	Kickstartpedal	
															Kick starter pedal	
	36	72 55 366-01					1	1	1			1	1	1	Skruv M6 x 12	
															Screw	

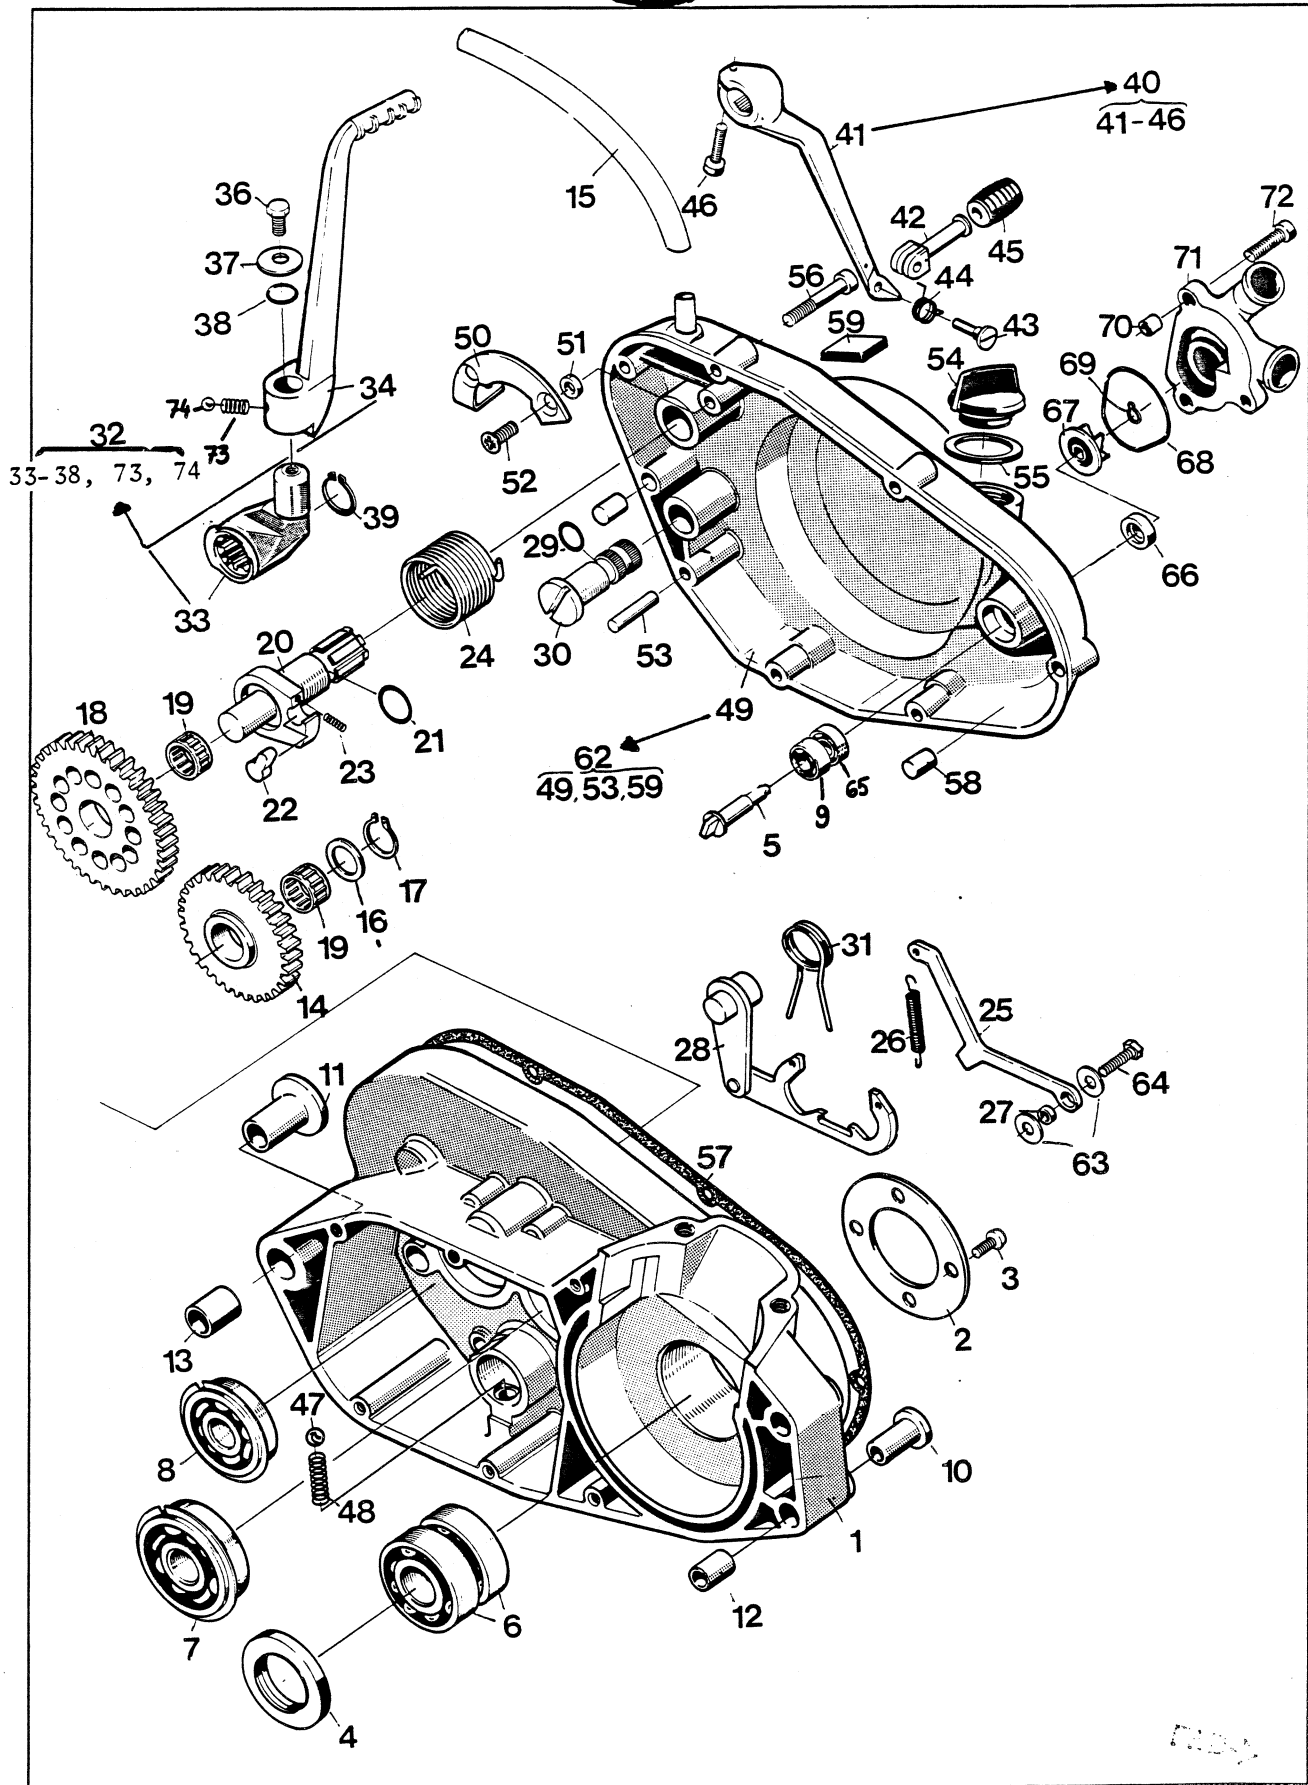


Fig.	Reservdelsnummer Sparepart number	Antal - Quantity												Benämning, Description	
		125			250			400		500					
		CR		XC			CR	WRX	XC		WRX	CR	XC		
37	16 11 298-01						1	1	1		1	1	1	Bricka Washer	
38	74 04 313-10						1	1	1		1	1	1	O-ring	
39	73 53 122-00						1	1	1		1	1	1	Spårring Circlip	
40	16 12 683-01						1	1	1		1	1	1	Fotväxelpedal, kpl. Shift lever compl.	
43	16 12 686-01						1	1	1		1	1	1	Ledskruv Screw	
44	16 12 687-01						1	1	1		1	1	1	Fjäder Spring	
45	16 12 688-01						1	1	1		1	1	1	Pedalgummi Pedal rubber	
46	72 55 370-01						1	1	1		1	1	1	Skruv M6 x 22 Screw	
47	73 86 130-03						1	1	1		1	1	1	Kula Ball	
48	16 12 745-01						1	1	1		1	1	1	Fjäder Spring	
50	16 11 704-01						1	1	1		1	1	1	Fjäderhållare Spring holder	
51	16 11 706-01						2	2	2		2	2	2	Distans Distance	
52	72 43 370-50						2	2	2		2	2	2	Skruv M6 x 20 Screw	
53	72 01 361-50						1	1	1		1	1	1	Räffelpinne Pin	
54	50 11 538-03						1	1	1		1	1	1	Lock Cap	
55	50 12 782-01						1	1	1		1	1	1	Packning Gasket	
56	72 55 379-01						6	6	6		6	6	6	Skruv M6 x 45 Screw	
57	16 11 650-01						1	1	1		1	1	1	Packning Gasket	
58	16 11 708-01						2	2	2		2	2	2	Styrhylsa Steering sleeve	
59	16 11 709-02						1	1	1		1	1	1	Gummistop, kickstart Buffer	
62	16 19 845-02						1	1	1		1	1	1	Vevhuskåpa vänster, kpl. Transmission cover compl.	
63	15 13 734-01						2	2	2		2	2	2	Bricka 6.4 x 14 Washer	
64	72 52 368-53						1	1	1		1	1	1	Skruv M6 x 16 Screw	
65	73 82 198-04						1	1	1		1	1	1	Lager Bearing	
66	16 17 958-01						1	1	1		1	1	1	Tätning Seal	
67	16 17 951-01						1	1	1		1	1	1	Pumphjul Pump wheel	
68	74 04 834-03						1	1	1		1	1	1	O-ring	
69	73 53 108-00						1	1	1		1	1	1	Låsring Circlip	
70	16 17 955-01						2	2	2		2	2	2	Styrstift Peg	
71	16 17 967-01						1	1	1		1	1	1	Pumphus Pump housing	
72	72 55 371-01						3	3	3		3	3	3	Skruv M6 x 22 Screw	
73	16 11 084-01						1	1	1		1	1	1	Fjäder. Spring	
74	73 86 120-03						1	1	1		1	1	1	Kula. Ball	

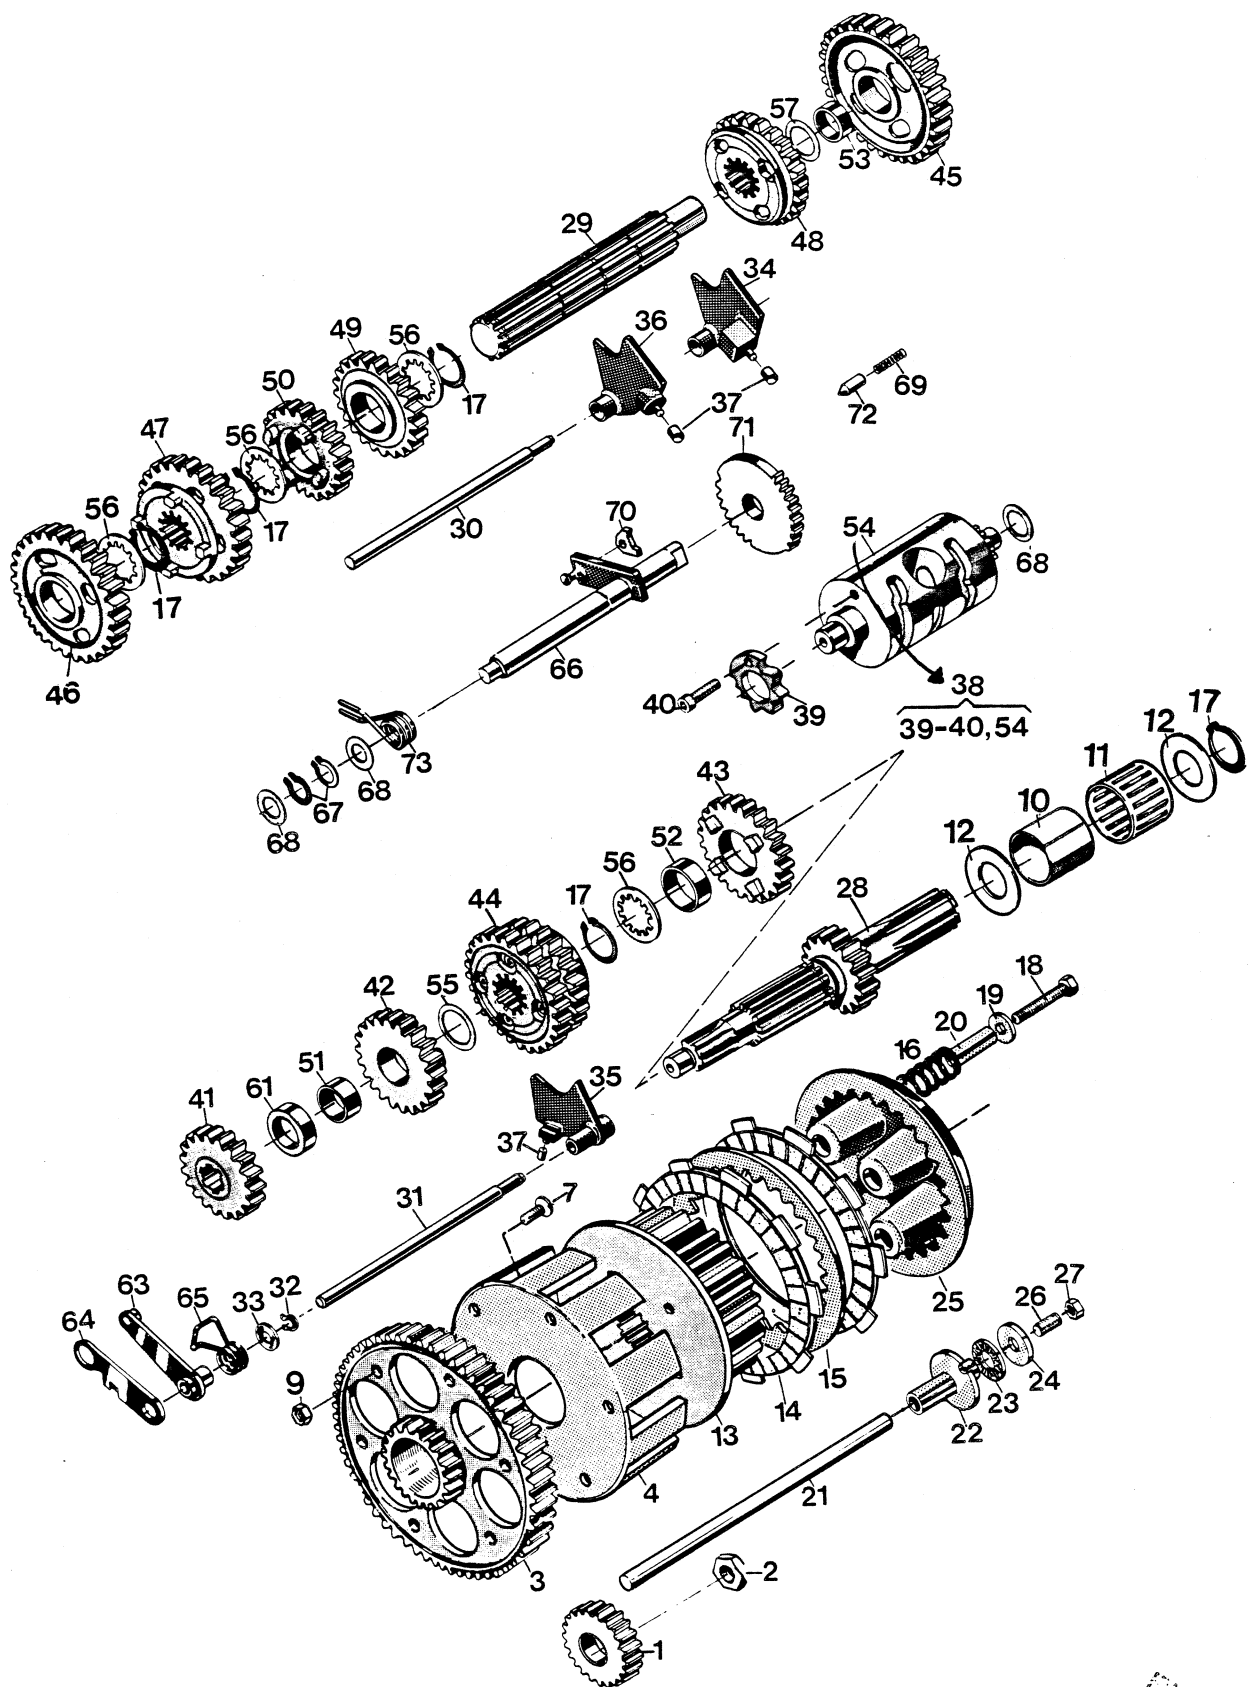


Fig.	Reservdelnummer Sparepart number	Antal - Quantity										Benämning, Description	
		125				250				500			
		CR	XC			CR	XC			CR	XC		
1	16 11 174-01	1	1									Drivhjul z = 29 Driving gear	
2	16 11 175-01	1	1									Mutter Nut	
3	16 11 283-01	1	1									Kopplingskrans Clutch gear	
4	16 11 203-01	1	1									Kopplingskorg Clutch ring	
7	72 56 367-55	6	6									Skruv M6 x 16 Screw	
9	73 12 316-55	6	6									Mutter Nut	
10	16 11 670-01	1	1									Innerring Internal ring	
11	16 11 671-01	1	1									Nållager Needle bearing	
12	16 11 155-01	2	2									Bricka Washer	
13	16 11 156-01	1	1									Kopplingscentrum Clutch hub	
14	16 15 106-01	7	7									Lamell m. belägg Disc w. lining	
15	16 15 107-01	6	6									Lamell Disc	
16	16 15 265-01	5	5									Kopplingsfjäder Clutch spring	
17	73 53 126-00	4	4									Spårring Circlip	
18	72 52 378-71	5	5									Skruv M6 x 40 Screw	
19	73 44 926-01	5	5									Bricka Washer	
20	16 11 169-01	5	5									Distanshylsa Distance sleeve	
N 21	16 17 003-02	1	1									Tryckstång Push rod	
22	16 11 170-01	1	1									Axelhylsa Shaft sleeve	
23	16 11 166-01	1	1									Axiallager Axial bearing	
24	16 11 167-01	1	1									Axialbricka Axial washer	
25	16 11 168-01	1	1									Tryckskiva Pressure plate	
26	78 85 370-00	1	1									Skruv TSS6 x 20 Screw	
27	15 13 703-01	1	1									Mutter M6 Nut	
28	16 12 345-01		1									Huvudaxel z = 14 Clutch shaft	
	16 11 697-01	1										Huvudaxel z = 15 Clutch shaft	
29	16 11 280-01	1	1									Hjälpaxel Sprocket shaft	
30	16 12 843-01	1	1									Axel Shaft	
31	16 12 484-01	1	1									Axel Shaft	
32	73 53 112-00	1	1									Spårring Circlip	
33	16 12 485-01	1	1									Bricka Washer	
N 34	16 11 082-01	1	1									Växelförare kpl. 1-5 Gear striker	
N 35	16 11 081-01	1	1									Växelförare kpl. 3-4 Gear striker	
N 36	16 11 080-01	1	1									Växelförare kpl. 6-2 Gear striker	
37	16 12 424-01	1	1									Ledrulle Guide roller	
38	16 12 486-01	1	1									Kulissrulle, kpl. Linkroller compl.	
39	16 12 488-01	1	1									Spärrhjul Ratchet wheel	
40	72 55 366-06	1	1									Skruv M6 x 12 Screw	
41	16 12 351-01		1									Kugghjul 2:an z = 17 Gear wheel	

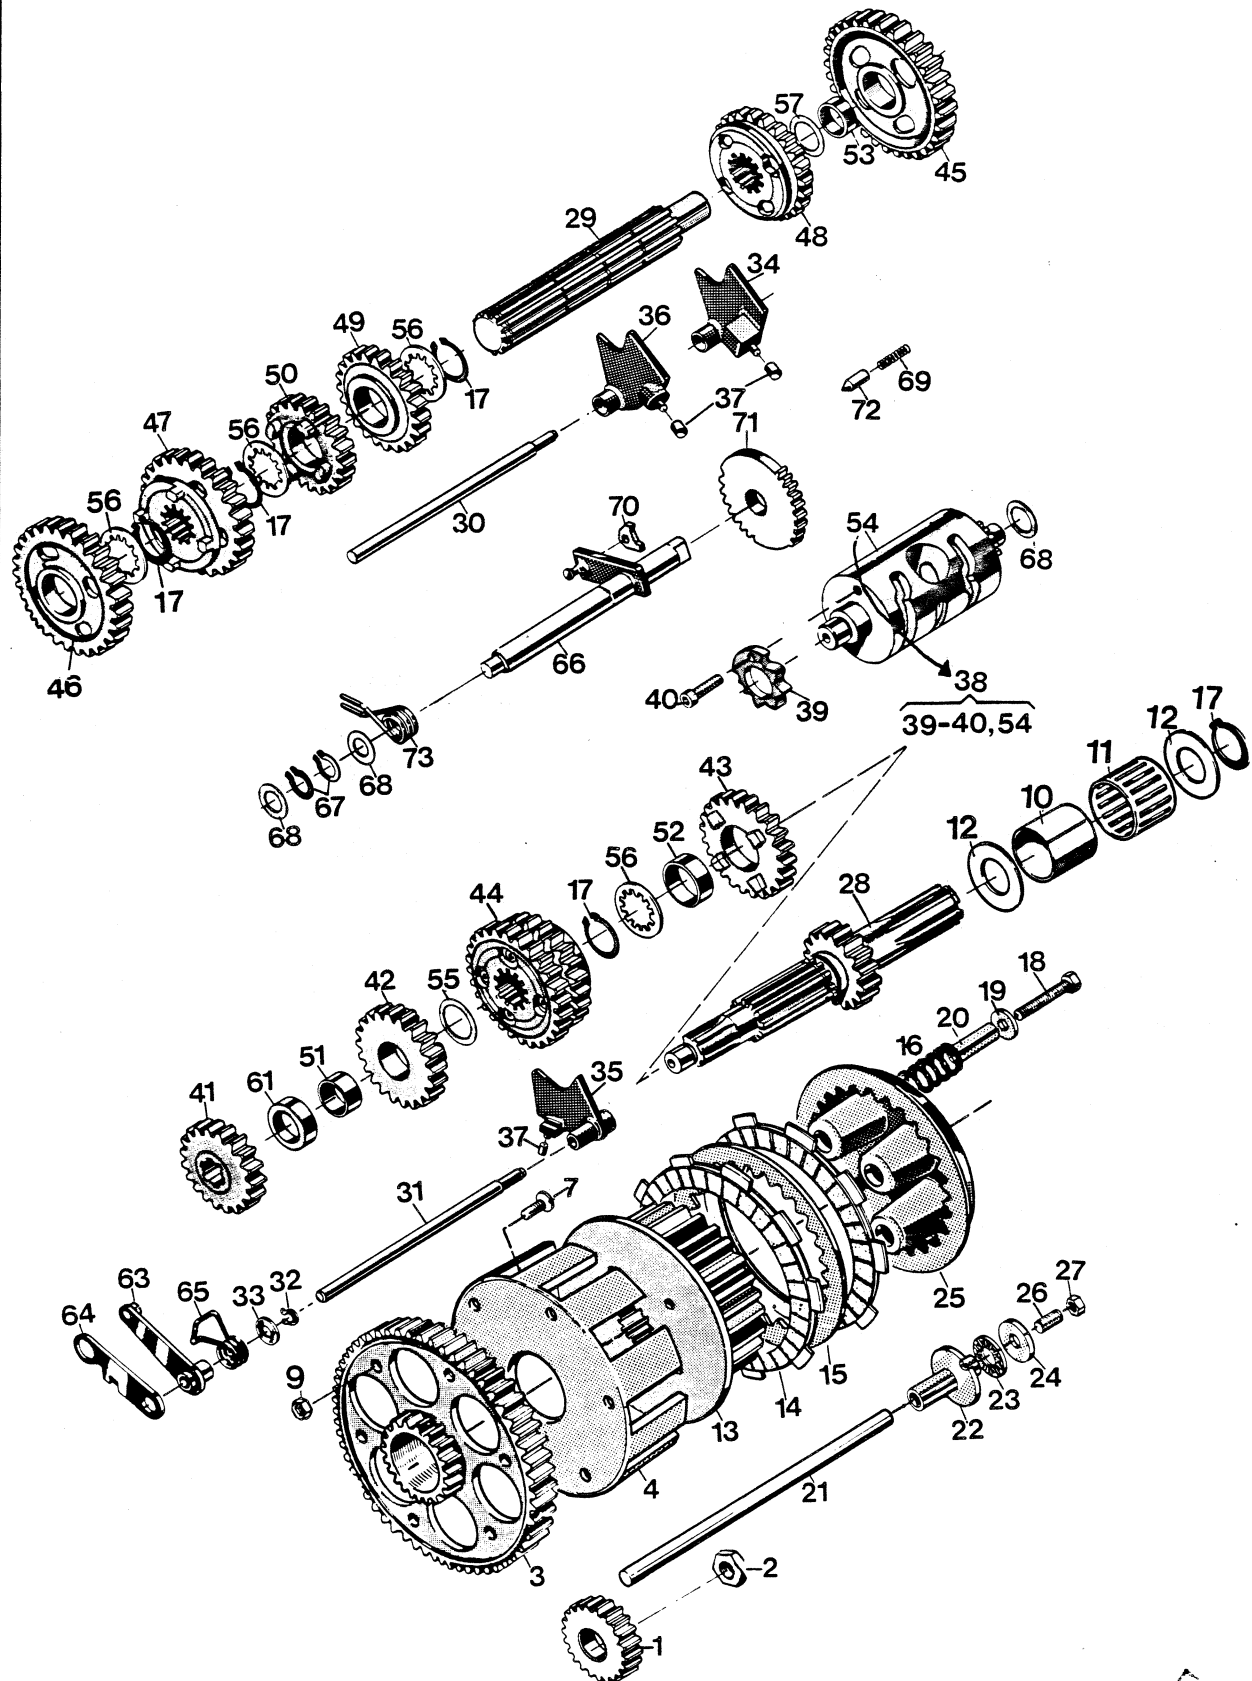


Fig.	Reservdelsnummer Sparepart number	Antal - Quantity												Benämning, Description		
		125			250			500								
		CR		XC			CR		XC			CR	XC			
N	16 16 006-01	1													Kugghjul 2:an z = 18 Gear wheel	
42	16 12 363-01	1													Kugghjul 3:an z = 21 Gear wheel	
	16 12 349-01			1											Kugghjul 3:an z = 20 Gear wheel	
43	16 11 837-01			1											Kugghjul 4:an z = 23 Gear wheel	
N	16 16 007-01	1													Kugghjul 4:an z = 21 Gear wheel	
44	16 12 390-01			1											Kugghjul 5-6:an z = 25, 27 Gear wheel	
N	16 16 008-01	1													Kugghjul 5:an, 6:an z = 23, 24 Gear wheel	
45	16 11 711-01	1													Kugghjul 1:an z = 31 Gear wheel	
	16 12 346-01			1											Kugghjul 1:an z = 33 Gear wheel	
46	16 12 347-01			1											Kugghjul 2:an z = 29 Gear wheel	
N	16 16 009-01	1													Kugghjul 2:an z = 28 Gear wheel	
47	16 12 386-01	1													Kugghjul 3:an z = 26 Gear wheel	
	16 12 387-01			1											Kugghjul 3:an z = 26 Gear wheel	
48	16 12 388-01			1											Kugghjul 4:an z = 24 Gear wheel	
N	16 16 010-01	1													Kugghjul 4:an z = 24 Gear wheel	
49	16 11 715-01			1											Kugghjul 5:an z = 22 Gear wheel	
N	16 16 011-01	1													Kugghjul 5:an z = 22 Gear wheel	
N	16 16 012-01	1													Kugghjul 6:an z = 22 Gear wheel	
	16 12 357-01			1											Kugghjul 6:an z = 20 Gear wheel	
51	16 12 480-01	1		1											Lagerhylsa Sleeve	
52	16 12 418-01	1		1											Lagerhylsa Sleeve	
53	16 12 415-01	1		1											Lagerhylsa Sleeve	
56	16 11 717-01	4		4											Stödbricka Washer	
57	15 13 714-01	1		1											Stödbricka Washer	
61	16 12 481-01	1		1											Distansring Spacer	
63	16 12 489-01	1		1											Spärrarm Ratchet arm	
64	16 12 493-01	1		1											Distansarm Distance arm	
65	16 12 494-01	1		1											Fjäder Spring	
66	16 11 279-01	1		1											Växlingsaxel Gear shaft	
67	73 53 117-00	2		2											Spårring Circlip	
68	50 32 300-14	3		3											Bricka Washer	
69	16 12 593-01	1		1											Fjäder Spring	
70	16 12 895-01	1		1											Medbringare Pawl	
71	16 12 870-01	1		1											Stegmatare Stepfeder	
72	16 12 455-01	1		1											Spärrhylsa Ratchet sleeve	
73	16 12 594-01	1		1											Fjäder Spring	


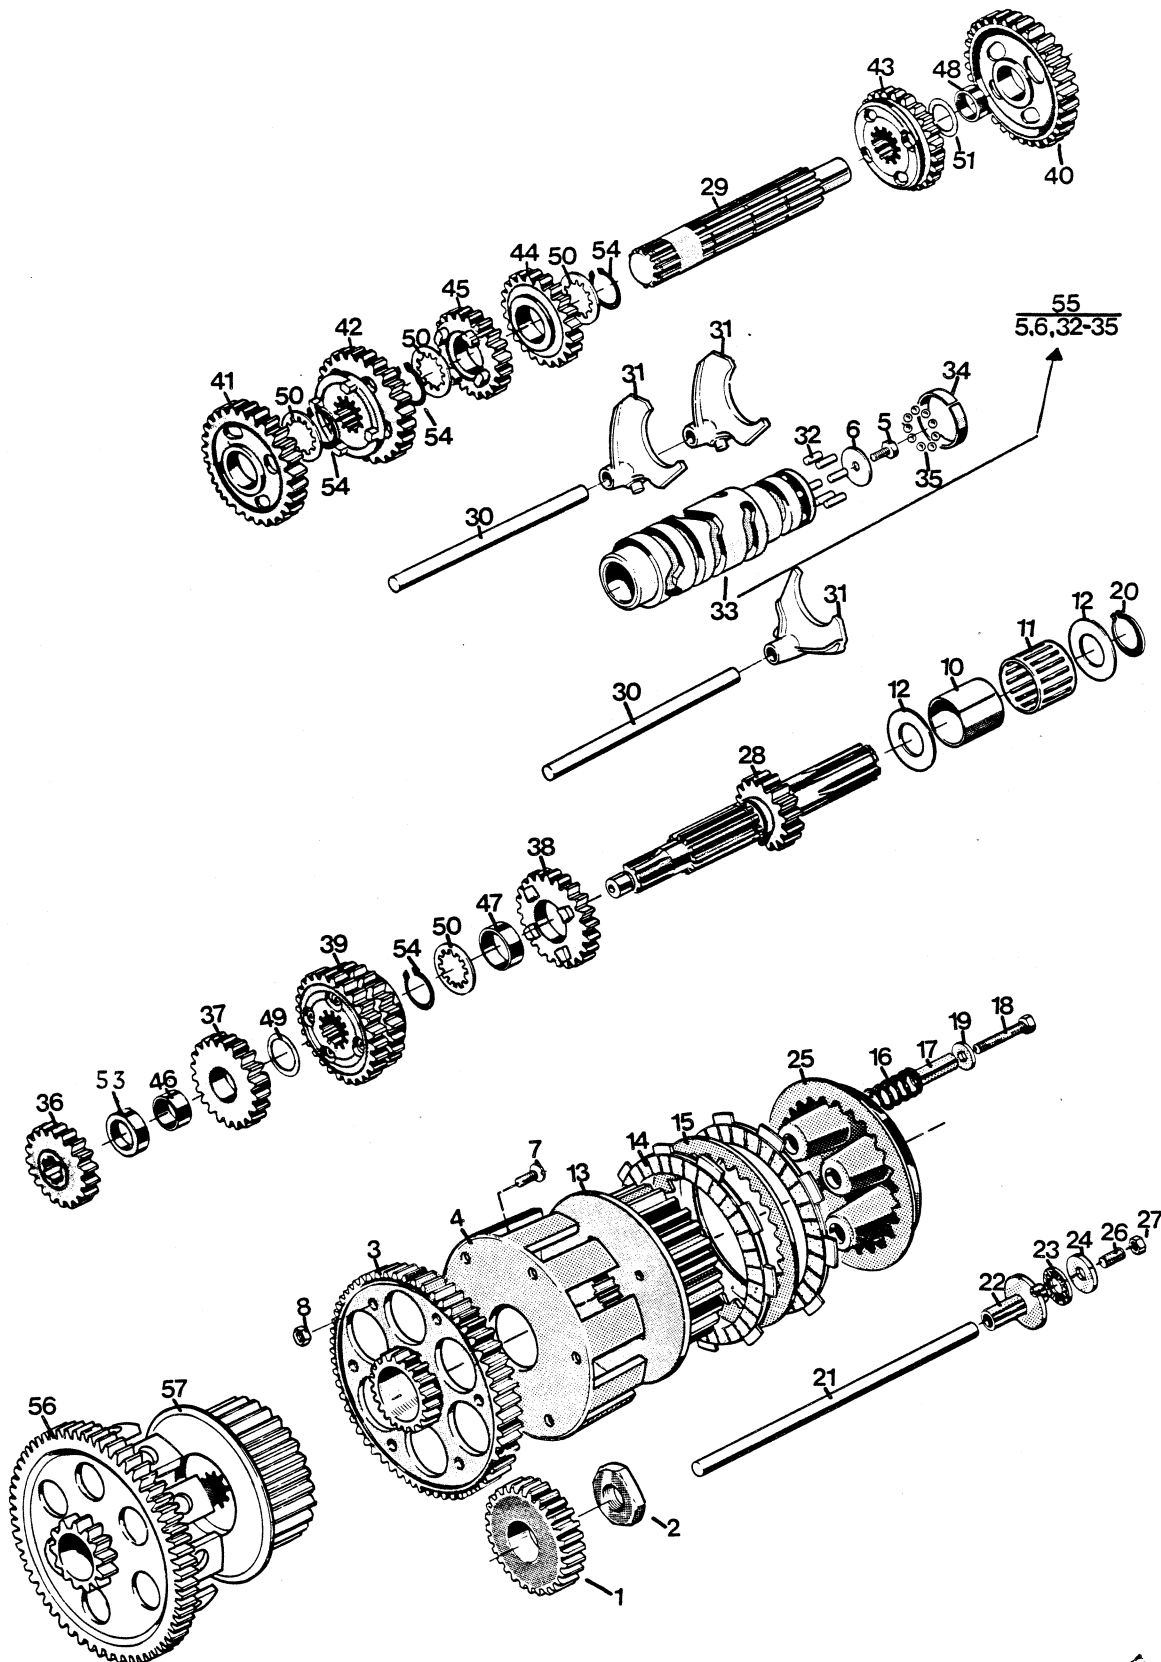


Fig.	Reservdelsnummer Sparepart number	Antal - Quantity												Benämning, Description		
		125			250			400		500						
		CR		XC			CR	WRX	XC		WRX	CR	XC			
1	16 11 075-01 16 11 885-01 16 11 178-01							1	1			1	1	1	Drivhjul Driving gear	
2	16 11 101-01							1	1			1	1	1	Mutter Nut	
3	16 14 427-01													1	Kopplingskrans Gear wheel, clutch	
4	16 11 203-01													1	Kopplingskorg	
5	72 52 364-86							1	1			1	1	1	Skruv M6 x 10 Screw	
6	15 13 709-01							1	1			1	1	1	Bricka 6.5 x 22 Washer	
7	72 56 367-55													6	Skruv Screw	
8	73 12 316-55													6	Mutter M6 Nut	
10	16 11 670-01							1	1			1	1	1	Innerring Internal ring	
11	16 11 671-01							1	1			1	1	1	Nålhållare Needle ring	
12	16 11 155-01							2	2			2	2	2	Bricka Washer	
13	16 11 156-01													1	Kopplingscentrum Clutch hub	
14	16 15 106-01							8	8			8	8	7	Lamell Disc	
15	16 15 107-01							7	7			7	7	6	Lamell Disc	
16	16 15 265-01							5	5			5	5	5	Kopplingsfjäder Clutch spring	
17	16 11 169-01							5	5			5	5	5	Distanshylsa Distance sleeve	
18	72 52 378-71							5	5			5	5	5	Skruv M6 x 40 Screw	
19	73 44 926-01							5	5			5	5	5	Bricka Washer	
20	73 53 126-00							1	1			1	1	1	Spärring Circlip	
21	16 17 003-01							1	1			1	1	1	Tryckstång Push rod	
22	16 11 170-01							1	1			1	1	1	Axeldel Shaft	
23	16 11 166-01							1	1			1	1	1	Axiallager Axial bearing	
24	16 11 167-01							1	1			1	1	1	Axialbricka Axial washer	
25	16 11 168-01							1	1			1	1	1	Trycksiva Pressure plate	
26	22 21 370-06							1	1			1	1	1	Skruv Screw	
27	15 13 703-01							1	1			1	1	1	Mutter Nut	
28	16 12 360-01 16 12 345-01								1					1	Huvudaxel Clutch shaft Huvudaxel Clutch shaft	
29	16 12 350-01							1	1			1	1	1	Hjälpxaxel Sprocket shaft	
30	16 11 699-01							2	2			2	2	2	Axel Shaft	
31	16 12 384-01							3	3			3	3	3	Växelförare Gear striker	
32	72 01 268-50							6	6			6	6	6	Pinne Pin	
34	16 12 699-01							1	1			1	1	1	Kulbana Outer race	
35	73 86 120-03							11	11			11	11	11	Kula Ball	
36	16 12 362-01 16 12 351-01							1	1			1	1		Kugghjul 2:an Huvudaxel Gear wheel	
37	16 12 363-01 16 12 349-01							1	1			1	1		Kugghjul 3:an Huvudväxel Gear wheel	
38	16 11 837-01							1	1			1	1	1	Kugghjul 4:an Huvudaxel Gear wheel	
39	16 12 390-01							1	1			1	1	1	Kugghjul 5:an-6:an Huvudaxel Gear wheel	
40	16 12 361-01 16 12 346-01							1	1			1	1		Kugghjul 1:an Hjälpxaxel Gear wheel	
41	16 12 365-01								1			1	1		Kugghjul 2:an Hjälpxaxel	



D-16

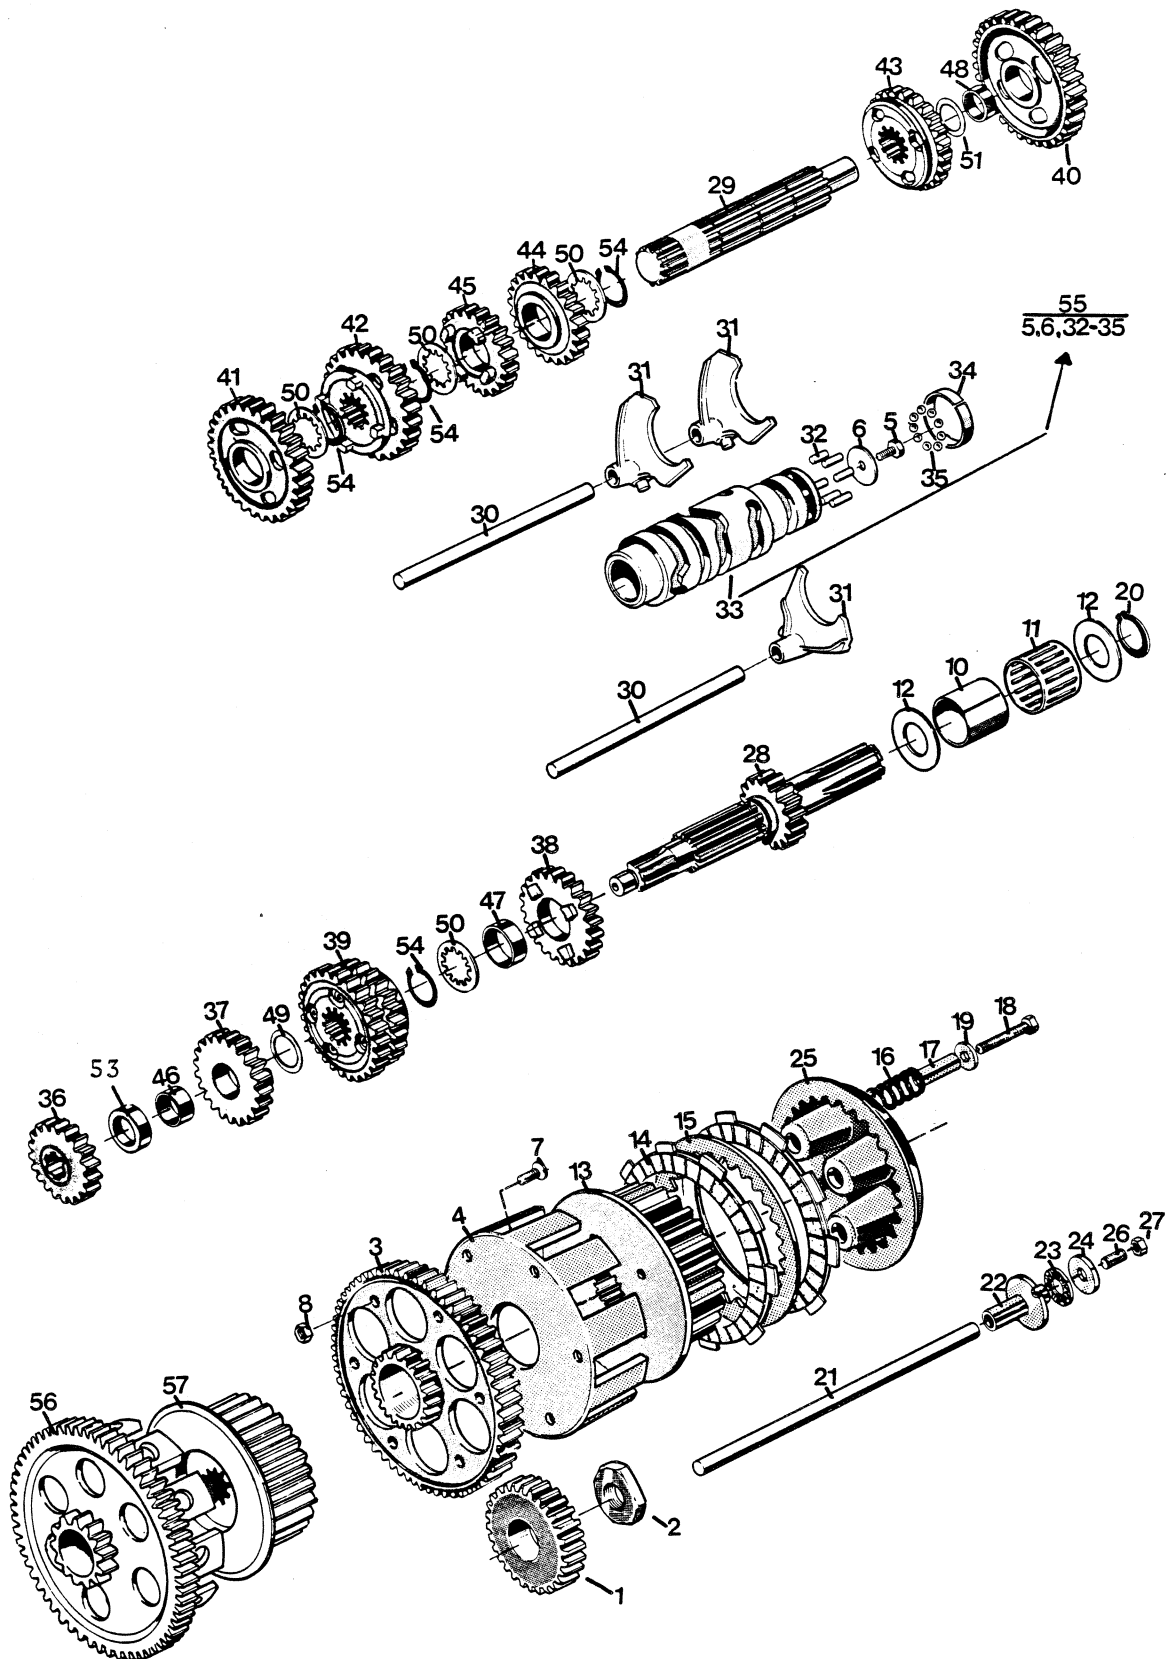

Reservdelsnummer		Antal - Quantity										Benämning, Description
		125				250			400		500	
Fig.	Sparepart number	CR		XC		CR	WRX	XC		WRX	CR	XC
	16 12 347-01						1	1			1	
42	16 12 386-01									1		1
	16 12 387-01						1	1			1	
43	16 12 388-01						1	1		1	1	1
44	16 11 715-01						1	1		1	1	1
45	16 12 357-01						1	1		1	1	1
46	16 12 480-01						1	1		1	1	1
47	16 12 418-01						1	1		1	1	1
48	16 12 415-01						1	1		1	1	1
49	16 12 842-01						1	1		1	1	1
50	16 11 717-01						4	4		4	4	4
51	15 13 714-01						1	1		1	1	1
53	16 12 481-01						1	1		1	1	1
54	73 53 126-00						4	4		4	4	4
55	16 11 701-01						1	1		1	1	1
56	16 14 426-01											
56	16 11 669-01						1	1			1	
	16 14 427-01									1		
57	16 15 088-01						1	1		1	1	


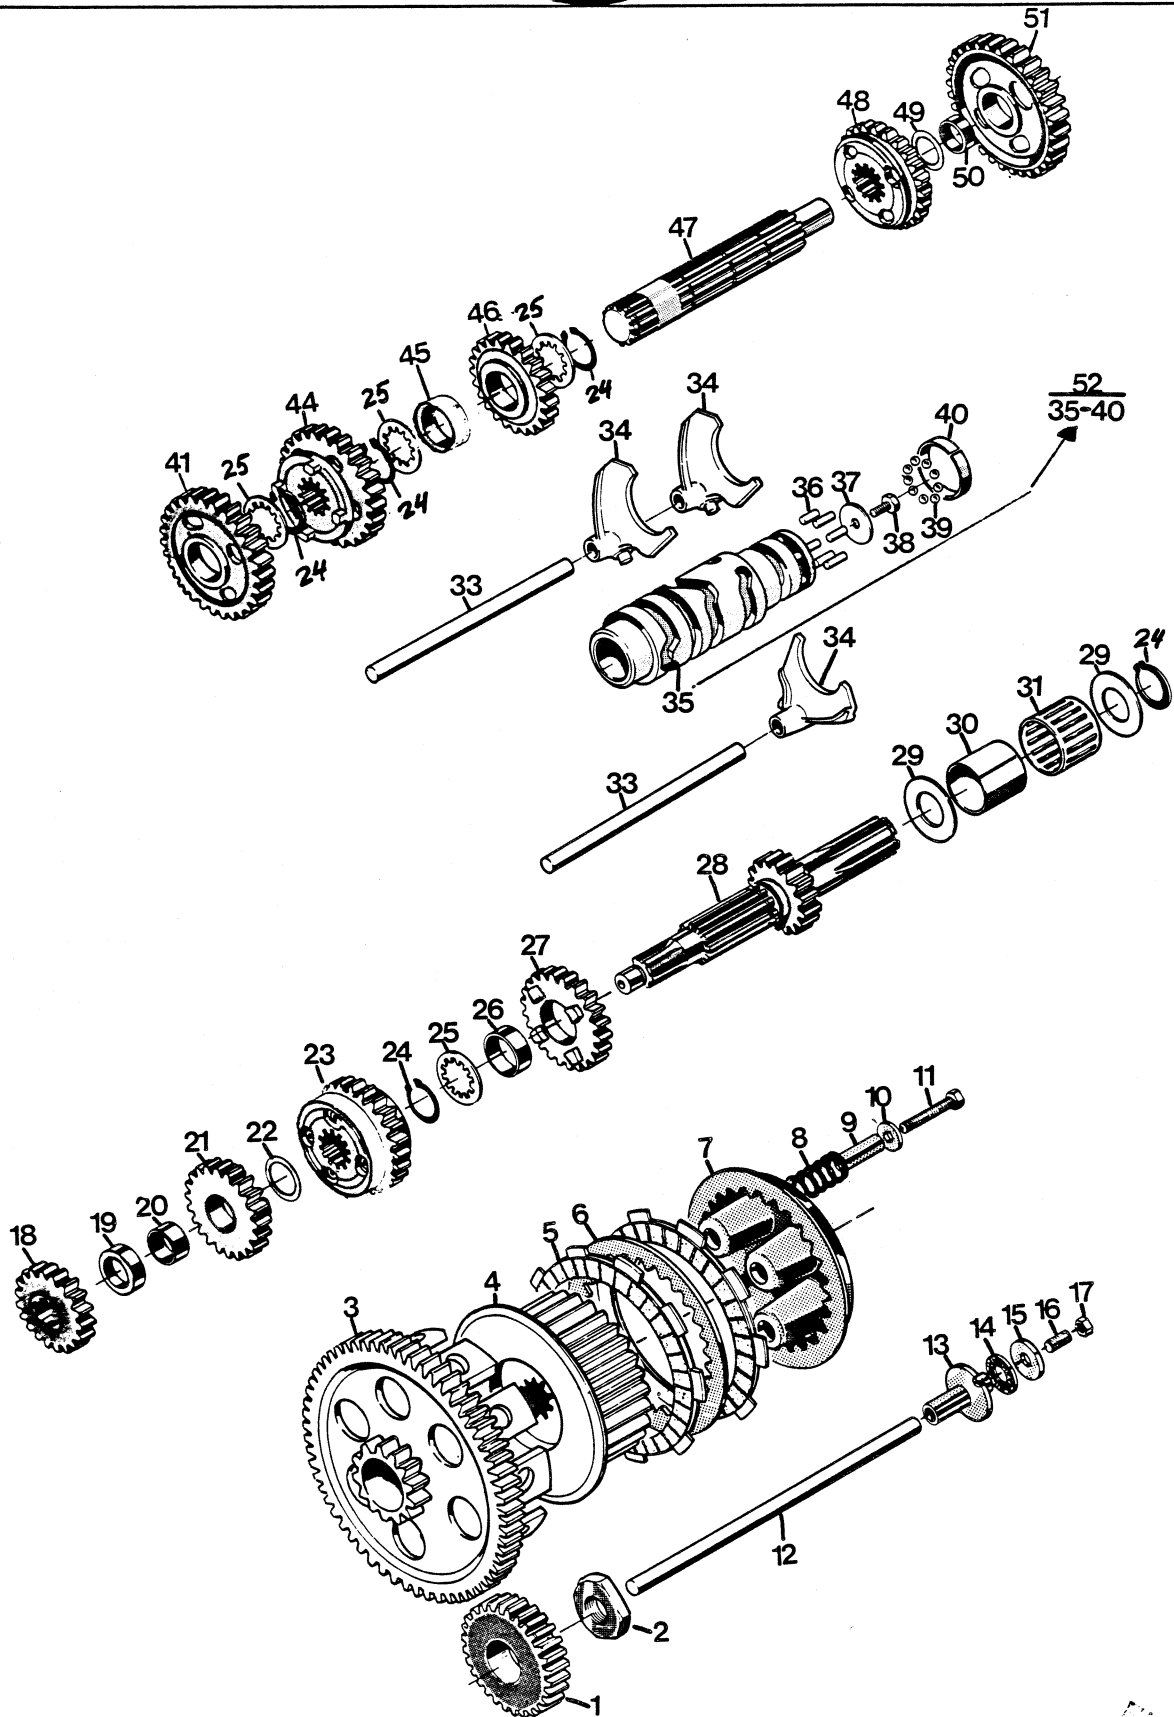


Fig.	Reservdelnummer Sparepart number	Antal - Quantity										Benämning, Description		
		125				250				500				
		CR	XC			CR	XC			CR	XC			
N	1	16 11 178-01					1						Drivhjul. Driving gear	
	2	16 11 101-01					1						Mutter. Nut	
	3	16 11 669-01					1						Kopplingskrans Gear wheel, clutch	
	4	16 15 088-01					1						Kopplingscentrum Clutch hub	
	5	16 15 106-01					8						Lamell med belägg Clutch plate with lining	
	6	16 15 107-01					7						Lamell. Clutch plate	
	7	16 11 168-01					1						Tryckplatta. Pressure plate	
	8	16 15 265-01					5						Fjäder. Spring	
	9	16 11 169-01					5						Distans. Spacer	
	10	73 44 926-01					5						Bricka. Washer	
	11	72 52 378-71					5						Skruv M6 x 40. Screw	
	12	16 17 003-01					1						Tryckstång. Push rod	
	13	16 11 170-01					1						Axeldel. Shaft	
	14	16 11 166-01					1						Axiallager. Bearing	
	15	16 11 167-01					1						Axialbricka. Washer	
	16	72 85 370-00					1						Skruv M6 x 20. Screw	
	17	15 13 703-01					1						Mutter. Nut	
	18	16 12 352-01					1						Kugghjul 2:an. Gear wheel 2:nd	
	19	16 12 481-01					1						Distans. Spacer	
	20	16 12 480-01					1						Lagerhylsa. Sleeve	
	21	16 11 703-01					1						Kugghjul 3:an. Gear wheel 3:rd	
	22	16 12 842-01					1						Bricka. Washer	
	23	16 14 595-01					1						Kugghjul 5:an. Gear wheel 5:th	
24	73 53 126-00					5						Spårring. Circlip		
25	16 11 717-01					4						Stödbricka. Washer		
26	16 12 418-01					1						Lagerhylsa. Sleeve		
27	16 11 837-01					1						Kugghjul 4:an. Gear wheel 4:th		
28	16 16 002-01					1						Huvudaxel. Mainshaft		
29	16 11 155-01					2						Bricka. Washer		
30	16 11 670-01					1						Innerring. Sleeve		
31	16 11 671-01					1						Nållager. Needle bearing		
33	16 11 699-01					2						Axel. Shaft		
34	16 12 384-01					3						Växelförare. Shift fork		
36	72 01 268-50					6						Pinne. Pin		
37	15 13 709-01					1						Bricka. Washer		
38	72 52 364-86					1						Skruv M6 x 10. Screw		
39	73 86 120-03					11						Kula. Ball		
40	16 12 699-01					1						Kulbana. Race		
41	16 12 354-01					1						Kugghjul 2:an. Gear wheel 2:nd		
44	16 12 385-01					1						Kugghjul 3:an. Gear wheel 3:rd		
45	16 14 594-01					1						Distans. Spacer		
46	16 11 715-01					1						Kugghjul 5:an. Gear wheel 5:th		
47	16 12 350-01					1						Hjälpaxel. Auxiliary shaft		
48	16 12 388-01					1						Kugghjul 4:an. Gear wheel 4:th		
49	15 13 714-01					1						Bricka. Washer		
50	16 12 415-01					1						Lagerhylsa. Sleeve		
51	16 16 003-01					1						Kugghjul 1:an. Gear wheel 1:st		
52	16 14 596-01					1						Kulissrulle kpl. Shift drum		

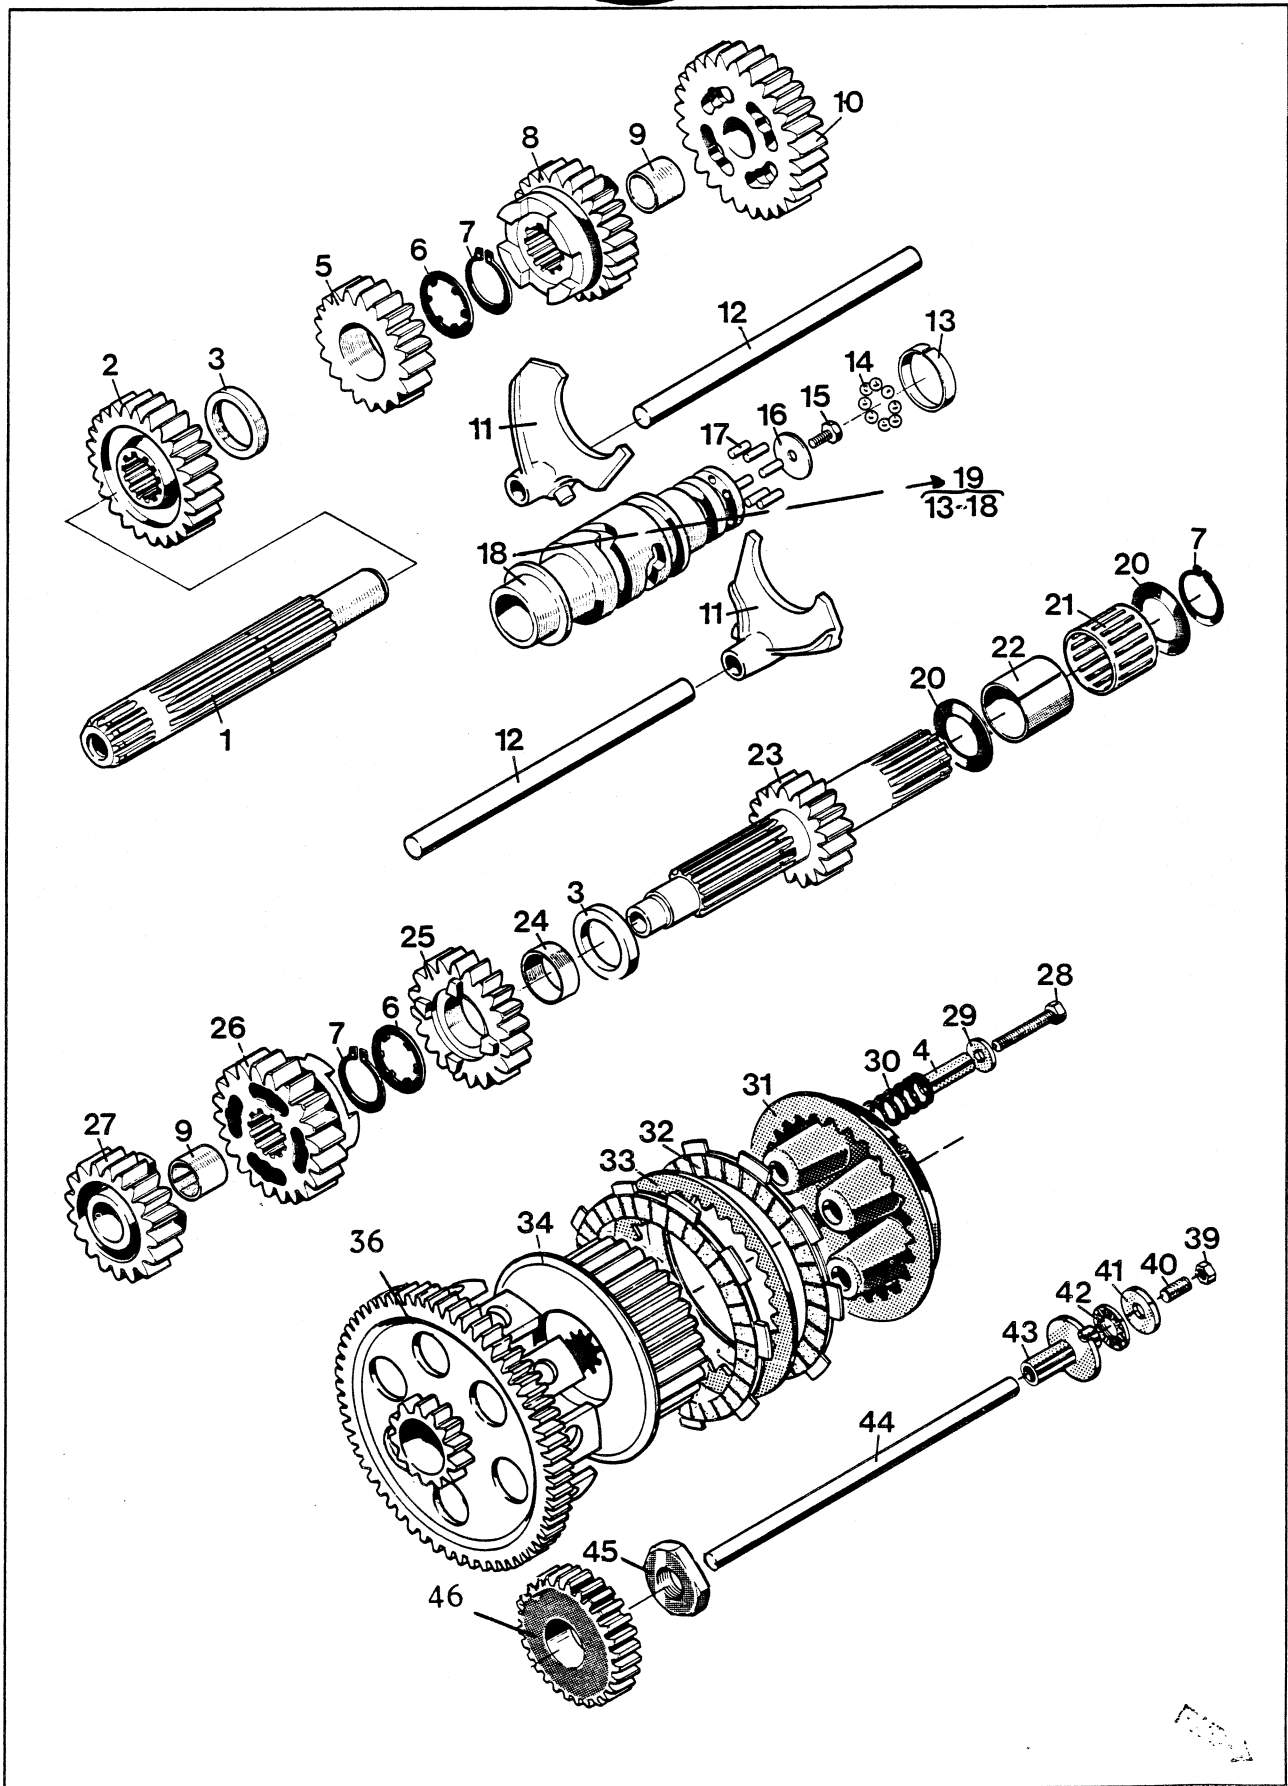

N	Fig.	Detaljnummer Partnumber	Antal Quantity 500 CR	Benämning Description
	1	16 12 369-01	1	Hjälpaxel. Auxiliary shaft
	2	16 12 377-01	1	Kugghjul 2:an. Gearwheel 2:nd z = 26
	3	16 12 383-01	2	Distans. Spacer
	4	16 11 169-01	5	Distans. Spacer
	5	16 12 379-01	1	Kugghjul 4:an. Gearwheel 4:th z = 22
	6	16 11 717-01	2	Stödbricka. Support washer
	7	73 53 126-00	3	Spärring. Circlip
	8	16 12 378-01	1	Kugghjul 3:an. Gearwheel 3:rd z = 24
	9	16 12 380-01	2	Lagerhylsa. Bearing sleeve
	10	16 12 376-01	1	Kugghjul 1:an. Gearwheel 1:st z = 29
	11	16 12 384-01	2	Växelförare. Shiftfork
	12	16 11 699-01	2	Axel. Shaft
	13	16 12 699-01	1	Kulbana. Outer race
	14	73 86 120-03	11	Kula. Ball
	15	72 52 364-86	1	Skruv M6 x 10. Screw
	16	15 13 709-01	1	Bricka 6.5 x 22 x 1.5. Washer
	17	72 01 268-50	6	Pinne. Pin
	19	16 12 371-01	1	Kulissrulle, kpl. Linkroller compl.
	20	16 11 155-01	2	Bricka. Washer
	21	16 11 671-01	1	Nållager, 28 x 33 x 27. Needle bearing
	22	16 11 670-01	1	Innerring. Bearing sleeve
	23	16 12 368-01	1	Huvudaxel. mainshaft z = 17
	24	16 12 381-01	1	Lagringshylsa. Bearing sleeve
	25	16 12 374-01	1	Kugghjul 3:an. Gearwheel 3:rd z = 23
	26	16 12 375-01	1	Kugghjul 4:an. Gearwheel 4:th z = 25
	27	16 12 373-01	1	Kugghjul 2:an. Gearwheel 2:nd z = 20
	28	72 52 378-71	5	Skruv, M6 x 40. Screw
	29	73 44 926-01	5	Bricka, 8.4 x 17. Washer
	30	16 15 265-02	5	Kopplingsfjäder. Clutch spring
	31	16 11 168-01	1	Trycksiva. Pressure plate
	32	16 15 106-01	8	Lamell med belägg. Disc with lining
	33	16 15 107-01	7	Lamell. Disc
	34	16 15 088-01	1	Kopplingscentrum. Clutch hub
	36	13 11 676-01	1	Kopplingskorg. Clutch ring
	39	15 13 703-01	1	Mutter M6. Nut
	40	72 85 370-00	1	Skruv M6. Screw
	41	16 11 167-01	1	Bricka. Washer
	42	16 11 166-01	1	Axiallager. Bearing
	43	16 11 170-01	1	Axeldel. Shaft
	44	16 11 673-01	1	Tryckstång. Push rod
	45	16 11 101-01	1	Mutter. Nut
	46	16 11 075-01	1	Drivhjul. Drive gear



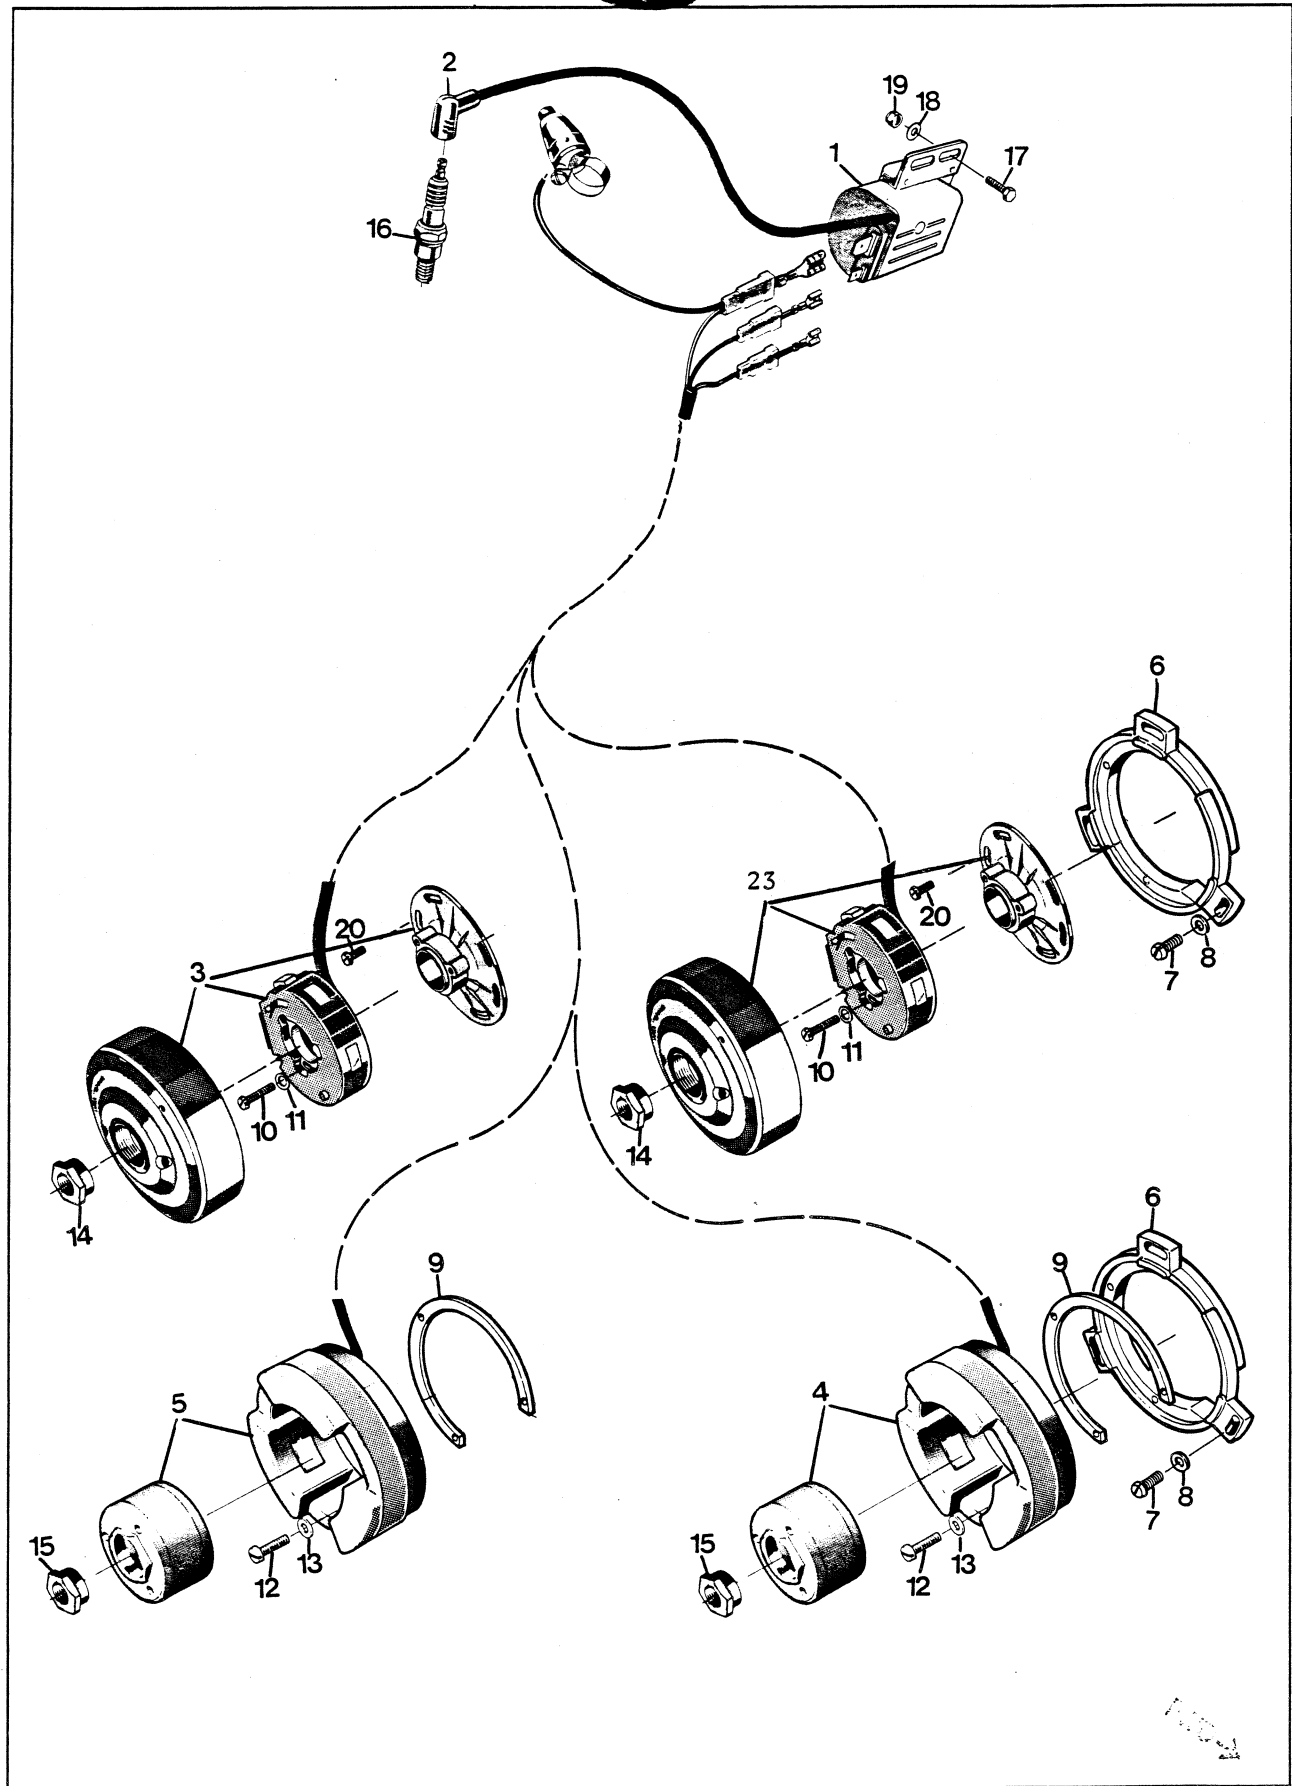


Fig.	Reservdelsnummer Sparepart number	Antal - Quantity										Benämning, Description	
		125				250			400		500		
		CR		XC		CR	WRX	XC		WRX	CR	XC	
1	16 14 714-01	1		1		1	1	1		1	1	1	Tändspole. Ignition coil
2	16 14 635-01	1		1		1	1	1		1	1	1	Tändhatt. Spark plug cup
3	16 14 801-01			1									Magnet kpl. Magneto compl.
4	16 14 759-01										1		Magnet kpl. Magneto compl.
5	16 14 790-01	1				1							Magnet kpl. Magneto compl.
6	16 14 165-01					1	1	1		1	1	1	Fästplatta. Mounting plate
7	72 55 332-55					3	3	3		3	3	3	Skruv M5 x 22. Screw
8	15 13 730-01					3	3	3		3	3	3	Bricka. Washer
9	16 14 167-01	1		1		1					1		Distansplatta. Spacer
10	72 55 295-55			3			3	3		3		3	Skruv M4 x 20. Screw
11	73 44 851-01			3			3	3		3		3	Bricka. Washer
12	72 55 335-55	3				3					3		Skruv M5 x 25. Screw
13	15 13 730-01	3				3					3		Bricka. Washer
14	16 11 191-02			1			1	1		1		1	Mutter. Nut
15	16 11 191-03	1				1					1		Mutter. Nut
16	16 14 769-01				1	1	1	1		1	1	1	Tändstift Bosch W4C. Sparkplug
	16 14 769-02	1		1									Tändstift Bosch W3C. Sparkplug
17	72 52 368-51	2		2		2	2	2		2	2	2	Skruv M6 x 16. Screw
18	73 41 153-01	2		2		2	2	2		2	2	2	Bricka. Washer
19	73 22 116-01	2		2		2	2	2		2	2	2	Mutter M6. Nut
23	16 14 794-01						1	1		1		1	Magneto compl.

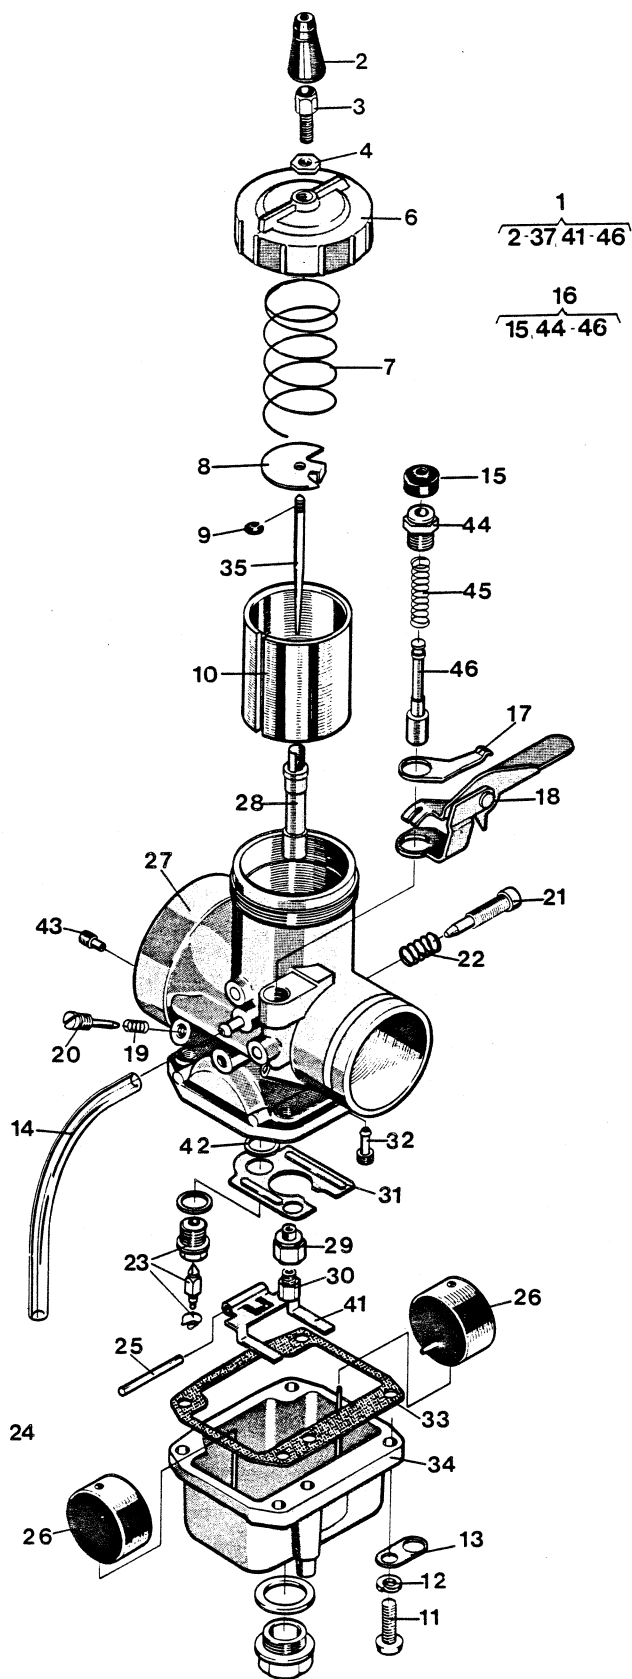

FW-1

Fig.	Reservdelsnummer Sparepart number	Antal - Quantity										Benämning, Description	
		125		250		400		500					
		CR	XC	CR	WRX	XC	WRX	CR	XC				
N 1	16 13 794-01 16 13 811-01 16 13 808-01	1	1			1		1				Carburetor (166) Förgasare Mikuni Ø 36 mm Carburetor (166)	
2	16 13 777-01	1	1			1		1				Skyddshylsa Protection sleeve	
3	16 13 757-01	1	1			1		1				Ställskruv Adjuster	
4	16 13 758-01	1	1			1		1				Mutter Nut	
6	16 13 570-01	1	1			1		1				Förgasarlock Cover	
7	16 13 571-01	1	1			1		1				Fjäder Spring	
8	16 13 584-01	1	1			1		1				Wire lås Wire lock	
9	16 13 583-01	1	1			1		1				Nålclips Needle clip	
10	16 13 785-01 16 13 576-01	1	1			1		1				Trottel ca 2.0 (Ø 36 mm) Throttle-2.5 (38mm)	
11	72 41 329-01	4	4			4		4				Skruv M5 x 16 Screw	
12	73 51 146-01	4	4			4		4				Bricka Washer	
13	16 13 569-01	2	2			2		2				Hållare Holder	
14	16 13 448-01	2	2			2		2				Slang Hose	
15	16 13 590-01	1	1			1		1				Gummiskydd Rubber cap	
16	16 13 589-01	1	1			1		1				Startventil kpl Start valve compl.	
17	16 13 594-01	1	1			1		1				Fjäder Spring	
18	16 13 595-01	1	1			1		1				Chokereglage Choke lever	
19	16 13 572-01	1	1			1		1				Fjäder Spring	
20	16 13 573-01	1	1			1		1				Luftskruv Airscrew	
21	16 13 588-01 16 13 782-01	1	1			1		1				Ställskruv Adjusting screw	
22	16 13 587-01	1	1			1		1				Fjäder Spring	
23	16 13 565-01	1	1			1		1				Nålventil kpl. Needle valve compl.	
24	16 13 585-01	2	2			2		2				Flottörstopp Cap	
25	16 13 566-01	1	1			1		1				Stift Peg	
26	16 13 578-01	2	2			2		2				Flottör Finat	
28	16 13 551-01 16 13 801-01 16 13 554-01	1	1			1		1				Q6 Needle jet Naimunstycke Special Needle jet R2 Needle jet Mellan skruv Distance screw	
29	16 13 580-01	1	1			1		1				400 Main jet	
30	16 13 557-01 16 13 684-01 16 13 559-01	1	1			1		1				Main jet 420 Main jet	360
31	16 13 586-01	1	1			1		1				Skvaipplat Baffle plate	
32	16 13 546-01 16 13 544-01	1	1			1		1				Tomgångsmunstycke P.J 45 35 Pilot jet	
33	16 13 543-01	1	1			1		1				Packning Gasket	
34	16 13 574-01 16 13 778-01	1	1			1		1				Flottörhus Float chamber	
35	16 13 579-01 16 13 804-01 16 13 647-01	1	1					1				6DH3 Needle Needle 6DH20 Needle	
36	16 13 581-01 16 13 780-01	1	1			1		1				Bottenskruv Drain screw	
37	16 13 582-01 16 13 781-01	1	1			1		1				Packning Gasket	
41	16 13 564-01	1	1			1		1				Flottörarm Float lever	
42	16 13 565-01	2	2			2		2				Bricka Washer	
43	16 13 568-01	1	1			1		1				Luftmunstycke 2.0 Air jet	

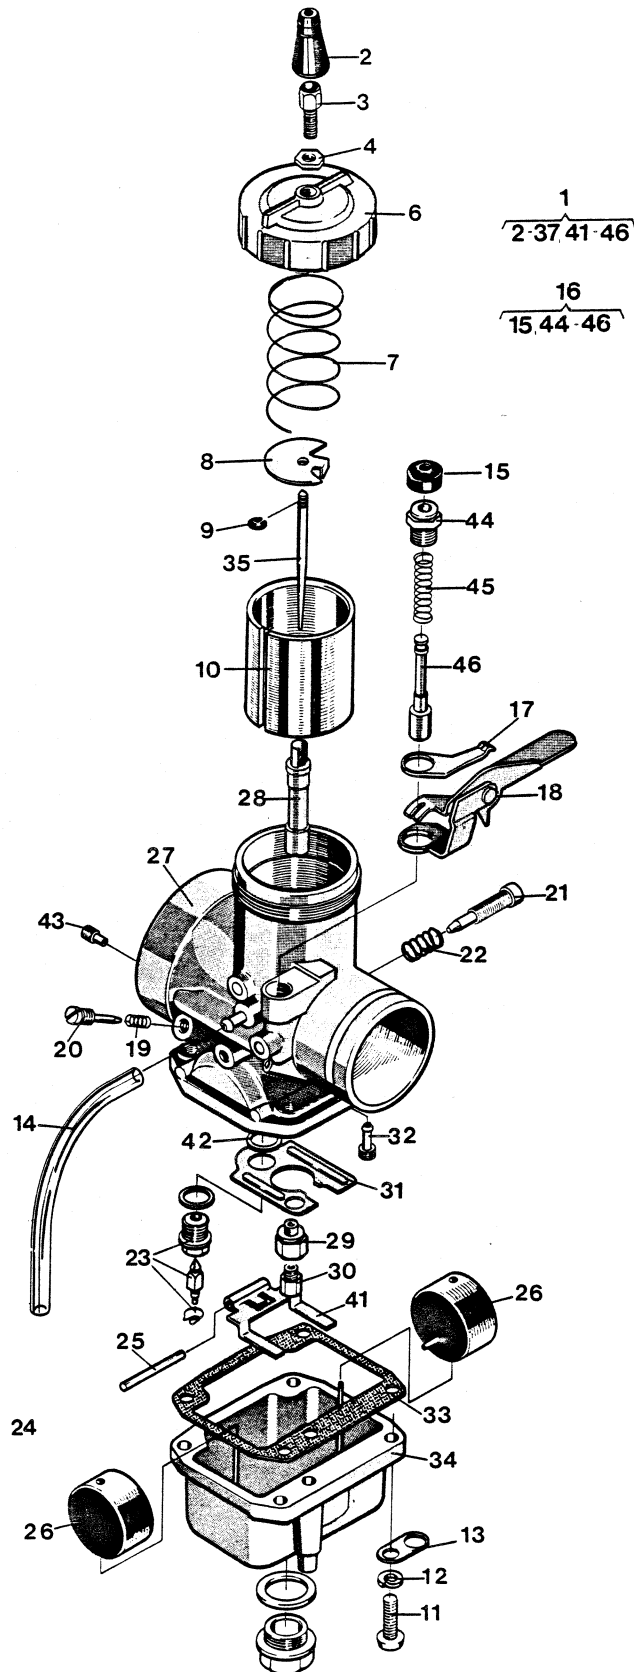

Tillbehör/Accessories

10	16 13 784-01 16 13 785-01 16 13 786-01	159 SERIES					Trottlar Throttles C.A. 1.5 (Ø 36 mm) C.A. 2.0 (Ø 36 mm) C.A. 2.5 (Ø 36 mm)
28	16 13 788-01 16 13 789-01 16 13 790-01 16 13 791-01 16 13 792-01						Nålmunstycke Needle jets N.J Q-6 (Ø 36 mm) N.J Q-8 (Ø 36 mm) N.J R-0 (Ø 36 mm) N.J R-2 (Ø 36 mm) N.J R-4 (Ø 36 mm)
30	16 13 556-01 16 13 557-01 16 13 558-01 16 13 559-01 16 13 561-01 16 13 562-01 16 13 563-01 16 13 641-01 16 13 694-01 16 13 695-01 16 13 696-01 16 13 697-01 16 13 698-01 16 13 683-01 16 13 684-01 16 13 685-01 16 13 686-01	ALL MIKUNI					Huvudmunstycke Main jets M.J 390 M.J 400 M.J 410 M.J 420 M.J 440 M.J 450 M.J 460 M.J 470 M.J 480 M.J 490 M.J 500 M.J 530 M.J 560 M.J 350 M.J 360 M.J 370 M.J 380
32	16 13 544-01 16 13 545-01 16 13 546-01 16 13 547-01 16 13 548-01						Torgångsmunstycke Idling jets P.J 35 P.J 40 P.J 45 P.J 50 P.J 55
10	16 13 575-01 16 13 576-01 16 13 577-01	166 SERIES					Throttles 2.0 2.5 3.0
28	16 13 549-01 16 13 550-01 16 13 551-01 16 13 552-01 16 13 553-01 16 13 554-01 16 13 555-01 16 13 642-01 16 13 699-01						Needle Jets Q4 Q5 Q6 Q8 R0 R2 R4 R6 R8
35	16 13 579-03 16 13 693-01 16 13 693-18						Needles 6DH04 6F16 6F18




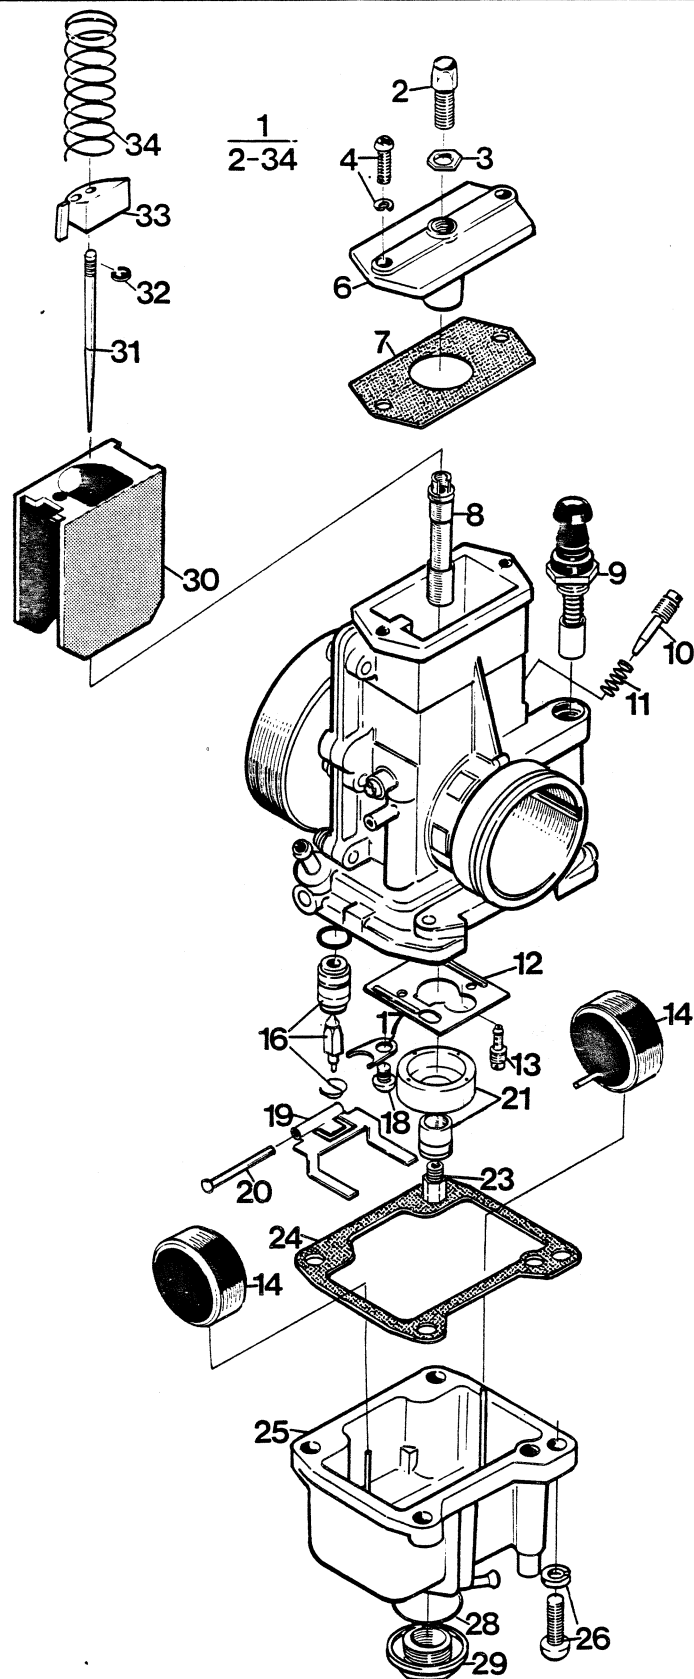



Fig.	Reservdelnummer Sparepart number	Antal - Quantity										Benämning, Description		
		125				250				500				
		CR		XC		CR		XC		CR	XC			
N 1	16 13 816-01					1		1					Förgasare, kpl. Carburettor compl.	
2	16 13 757-01					1		1					Justerskruv Adjuster	
3	16 13 758-01					1		1					Mutter Nut	
4	16 13 741-01					2		2					Skruv Screw	
6	16 13 767-01					1		1					Lock Cover	
7	16 13 763-01					1		1					Packning Gasket	
8	16 13 730-01					1		1					Nålmunstycke Ø 4	
9	16 19 857-01					1		1					Startventil Choke valve compl.	
10	16 13 752-01					1		1					Luftskruv Airscrew	
11	16 13 753-01					1		1					Fjäder Spring	
12	16 13 759-01					1		1					Skvalpskydd Plate	
13	16 13 544-01					1		1					Tomgångsmunstycke 35 Pilot jet	
14	16 13 578-01					2		2					Flottör Float	
16	16 13 742-01					1		1					Nålventil Valve	
17	16 13 754-01					1		1					Hållare Holder	
18	16 13 755-01					1		1					Skruv Screw	
19	16 13 564-0					1		1					Flottörmarm Float lever	
20	16 13 566-01					1		1					Stift Peg	
21	16 13 748-01					1		1					Labyrint	
23	16 13 556-01					1							Huvudmunstycke MJ 390 Main jet	
24	16 13 739-01					1		1					Packning Gasket	
25	16 13 740-01					1		1					Flottörhus Float chamber	
26	16 13 746-01					4		4					Skruv Screw	
28	16 13 750-01					1		1					O-ring	
29	16 13 749-01					1		1					Bottenskruv Drain screw	
30	16 13 736-01					1		1					Trottel 4.0 Throttle	
31	16 13 747-01					1		1					Nål 6 FJ 40 Needle	
32	16 13 583-01					1		1					Nålclips Needle clip	
33	16 13 762-01					1		1					Wirelås Wire lock	
34	16 13 764-01					1		1					Fjäder Spring	
40	16 13 546- 16 13 546-												Idle kits With 3.5 slide With 4.0 slide	

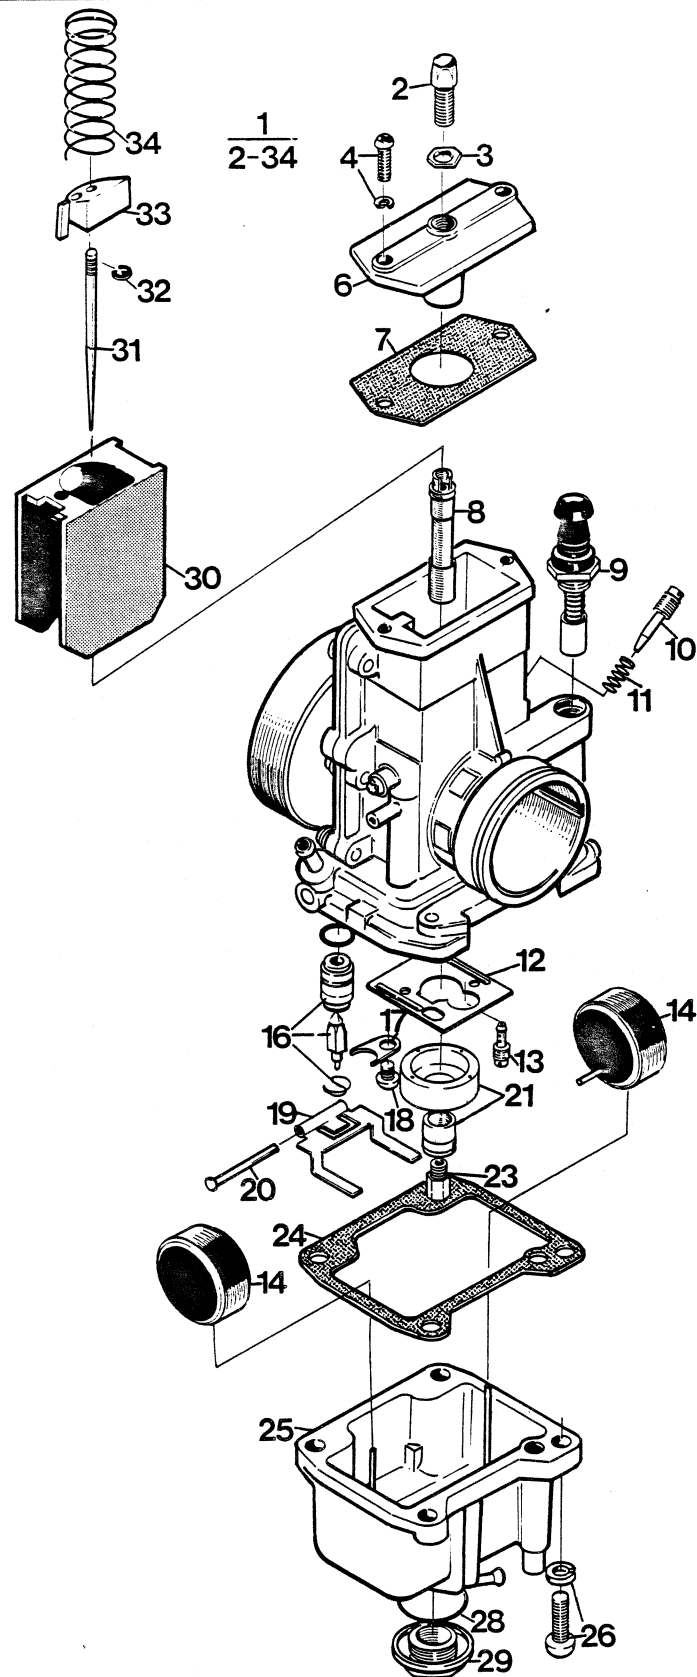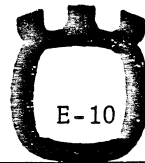


Tillbehör/Accessories													
8	16 13 728-01 16 13 729-01 16 13 730-01 16 13 731-01 16 13 732-01 16 13 733-01												Nålmunstycke Q2, Needle jet Nålmunstycke Q3, Needle jet Nålmunstycke Q4, Needle jet Nålmunstycke Q6, Needle jet Nålmunstycke Q8, Needle jet Nålmunstycke RO, Needle jet
13	16 13 630-01 10 00 025-10 16 13 544-01 16 13 545-01 16 13 546-01 16 13 547-01												Tomgångsmunstycke 25, Pilot jet Tomgångsmunstycke 30, Pilot jet Tomgångsmunstycke 35, Pilot jet Tomgångsmunstycke 40, Pilot jet Tomgångsmunstycke 45, Pilot jet Tomgångsmunstycke 50, Pilot jet
23	16 13 684-01 16 13 685-01 16 13 686-01 16 13 556-01 16 13 557-01 16 13 558-01 16 13 559-01 16 13 560-01												Huvdmunstycke MJ 360, Main jet Huvdmunstycke MJ 370, Main jet Huvdmunstycke MJ 380, Main jet Huvdmunstycke MJ 390, Main jet Huvdmunstycke MJ 400, Main jet Huvdmunstycke MJ 410, Main jet Huvdmunstycke MJ 420, Main jet Huvdmunstycke MJ 430, Main jet
30	16 13 734-01 16 13 735-01 16 13 736-01 16 13 737-01												Trottel 6.0, Throttle Trottel 5.0, Throttle Trottel 4.0, Throttle Trottel 3.0, Throttle
31	16 13 747-01 16 13 747-03												6FJ40 Needle 6FJ41 Needle

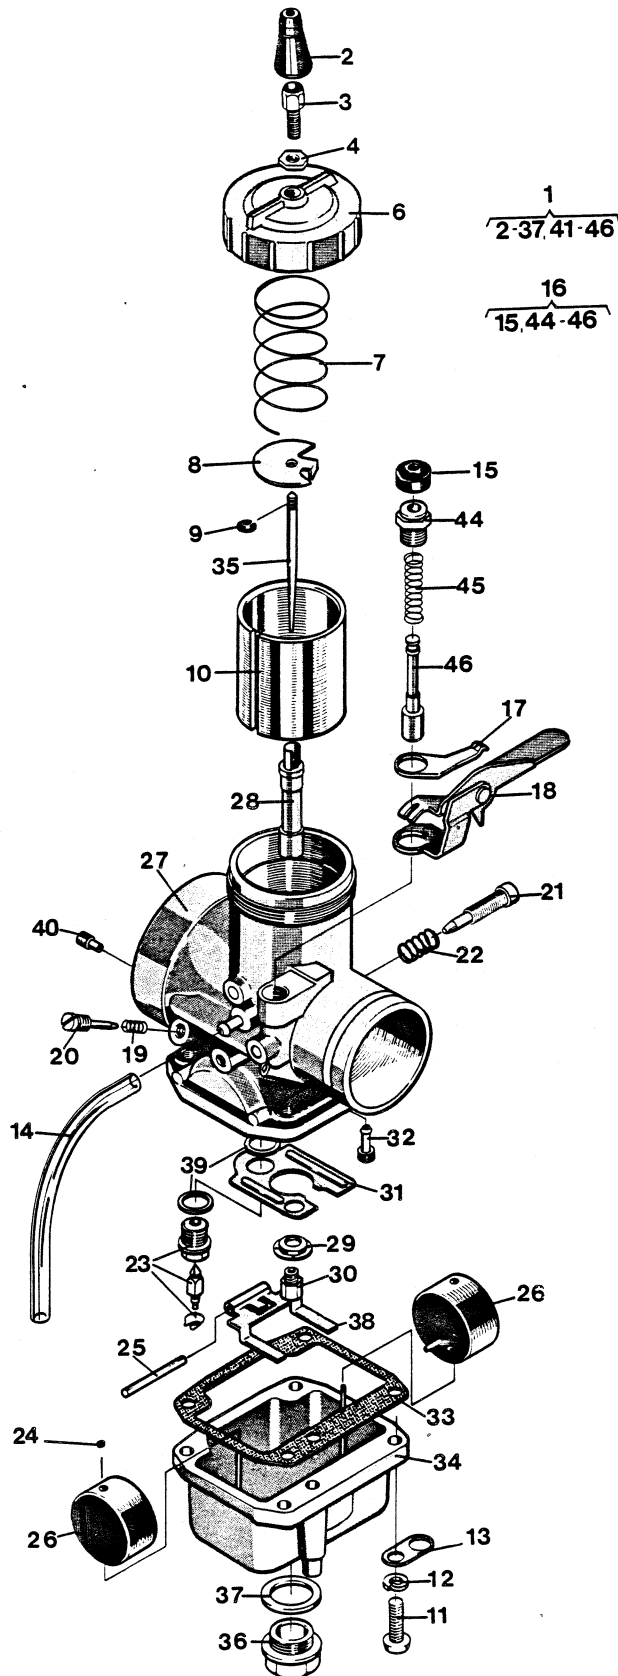

N	Fig.	Detaljnummer Partnummer	Antal Quantity	Benämning Description
N	1	16 13 813-01	1	Förgasare Mikuni Ø40. Carburettor 500
	2	16 13 128-01	1	Skyddshylsa. Protection sleeve
	3	16 13 916-01	1	Ställskruv. Adjuster
	4	16 13 908-01	1	Mutter. Nut
	6	16 13 653-01	1	Lock. Cover
	7	16 13 654-01	1	Fjäder. Spring
	8	16 13 662-01	1	Wire lås. Wire lock
	9	16 13 661-01	1	Nålclips. Needle clip
	10	16 13 679-01	1	Trottle 2.5. Throttle
	11	72 41 329-01	4	Skruv. Screw
	12	73 51 146-01	4	Bricka. Washer
	13	16 13 569-01	2	Hållare. Holder
	14	16 13 448-01	2	Slang. Hose
	15	16 13 665-01	1	Gummiskydd. Rubber cap
	16	16 13 664-01	1	Startventil. Start valve compl.
	17	16 13 594-01	1	Fjäder. Spring
	18	16 13 595-01	1	Chokeregglage. Choke lever
	19	16 13 655-01	1	Fjäder. Spring
	20	16 13 573-01	1	Luftskruv. Air screw
	21	16 13 588-01	1	Ställskruv. Idle adjuster
	22	16 13 587-01	1	Fjäder. Spring
	23	16 13 565-01	1	Nålventil, kpl. Needle valve, compl.
	24	16 13 585-01	2	Flottörstopp. Cap
	25	16 13 566-01	1	Stift. Peg
	26	15 13 578-01	2	Flottör. Float
	28	16 13 671-01	1	Nålmunstycke, AA-5. Needle jet
	29	16 13 658-01	1	Bricka. Washer
	30	16 13 683-01	1	Huvudmunstycke 350. Main jet
	31	16 13 663-01	1	Skvalplåt. Baffle plate
	32	16 13 548-01	1	Tomgångsmunstycke 55. Pilot jet
	33	16 13 543-01	1	Packning. Gasket
	34	16 13 657-01	1	Flottörhus. Float chamber
	35	16 13 681-01	1	Nål 7DH3. Needle
	36	16 13 659-01	1	Bottenplugg. Drain plug
	37	16 13 660-01	1	Packning. Gasket
	38	16 13 564-01	1	Flottörm. Float lever
	39	16 13 567-01	2	Bricka. Washer
	40	16 13 676-01	1	Luftmunstycke, AJ 0.7. Air jet

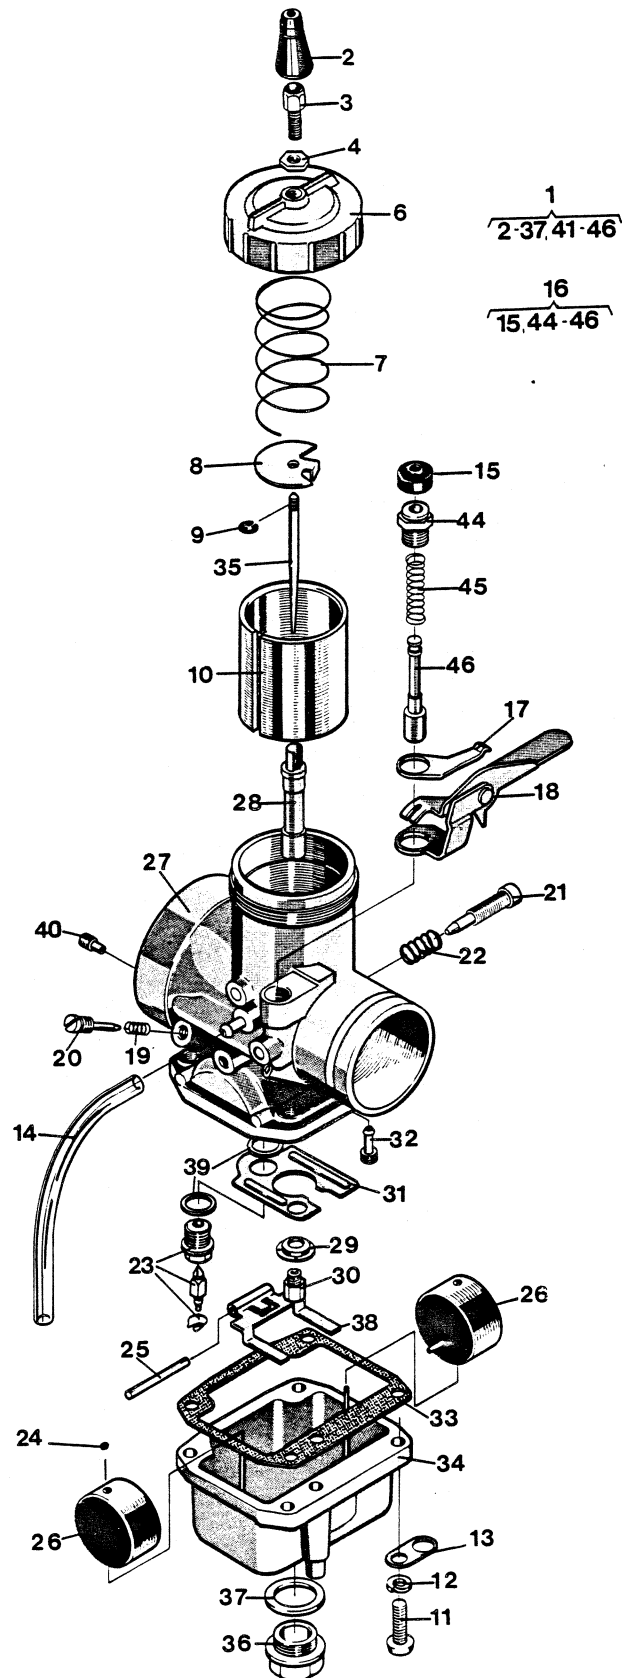

Tillbehör/Accessories													
10	16 13 677-01 16 13 678-01 16 13 679-01 16 13 680-01												Throttlar Throttles C.A. 1.5 C.A. 2.0 C.A. 2.5 C.A. 3.0
28	16 13 668-01 16 13 669-01 16 13 670-01 16 13 671-01 16 13 672-01 16 13 673-01 16 13 674-01 16 13 675-01												Nålmunstycke Needle jet NJ Z-0 Z-5 AA-0 AA-5 BB-0 BB-5 CC-0 CC-5
30	16 13 682-01 16 13 683-01 16 13 684-01 16 13 685-01 16 13 686-01 16 13 556-01 16 13 557-01 16 13 558-01 16 13 559-01 16 13 560-01 16 13 561-01 16 13 562-01 16 13 563-01 16 13 641-01												Huvudmunstycke Main jet MJ 340 MJ 350 MJ 360 MJ 370 MJ 380 MJ 390 MJ 400 MJ 410 MJ 420 MJ 430 MJ 440 MJ 450 MJ 460 MJ 470
32	16 13 544-01 16 13 545-01 16 13 546-01 16 13 547-01 16 13 548-01												Tomgångsmunstycke Idling jet P.J 35 P.J 40 P.J 45 P.J 50 P.J 55
35	16 13 681-01 16 13 681-03												7DH3 Needle 7F7 Needle

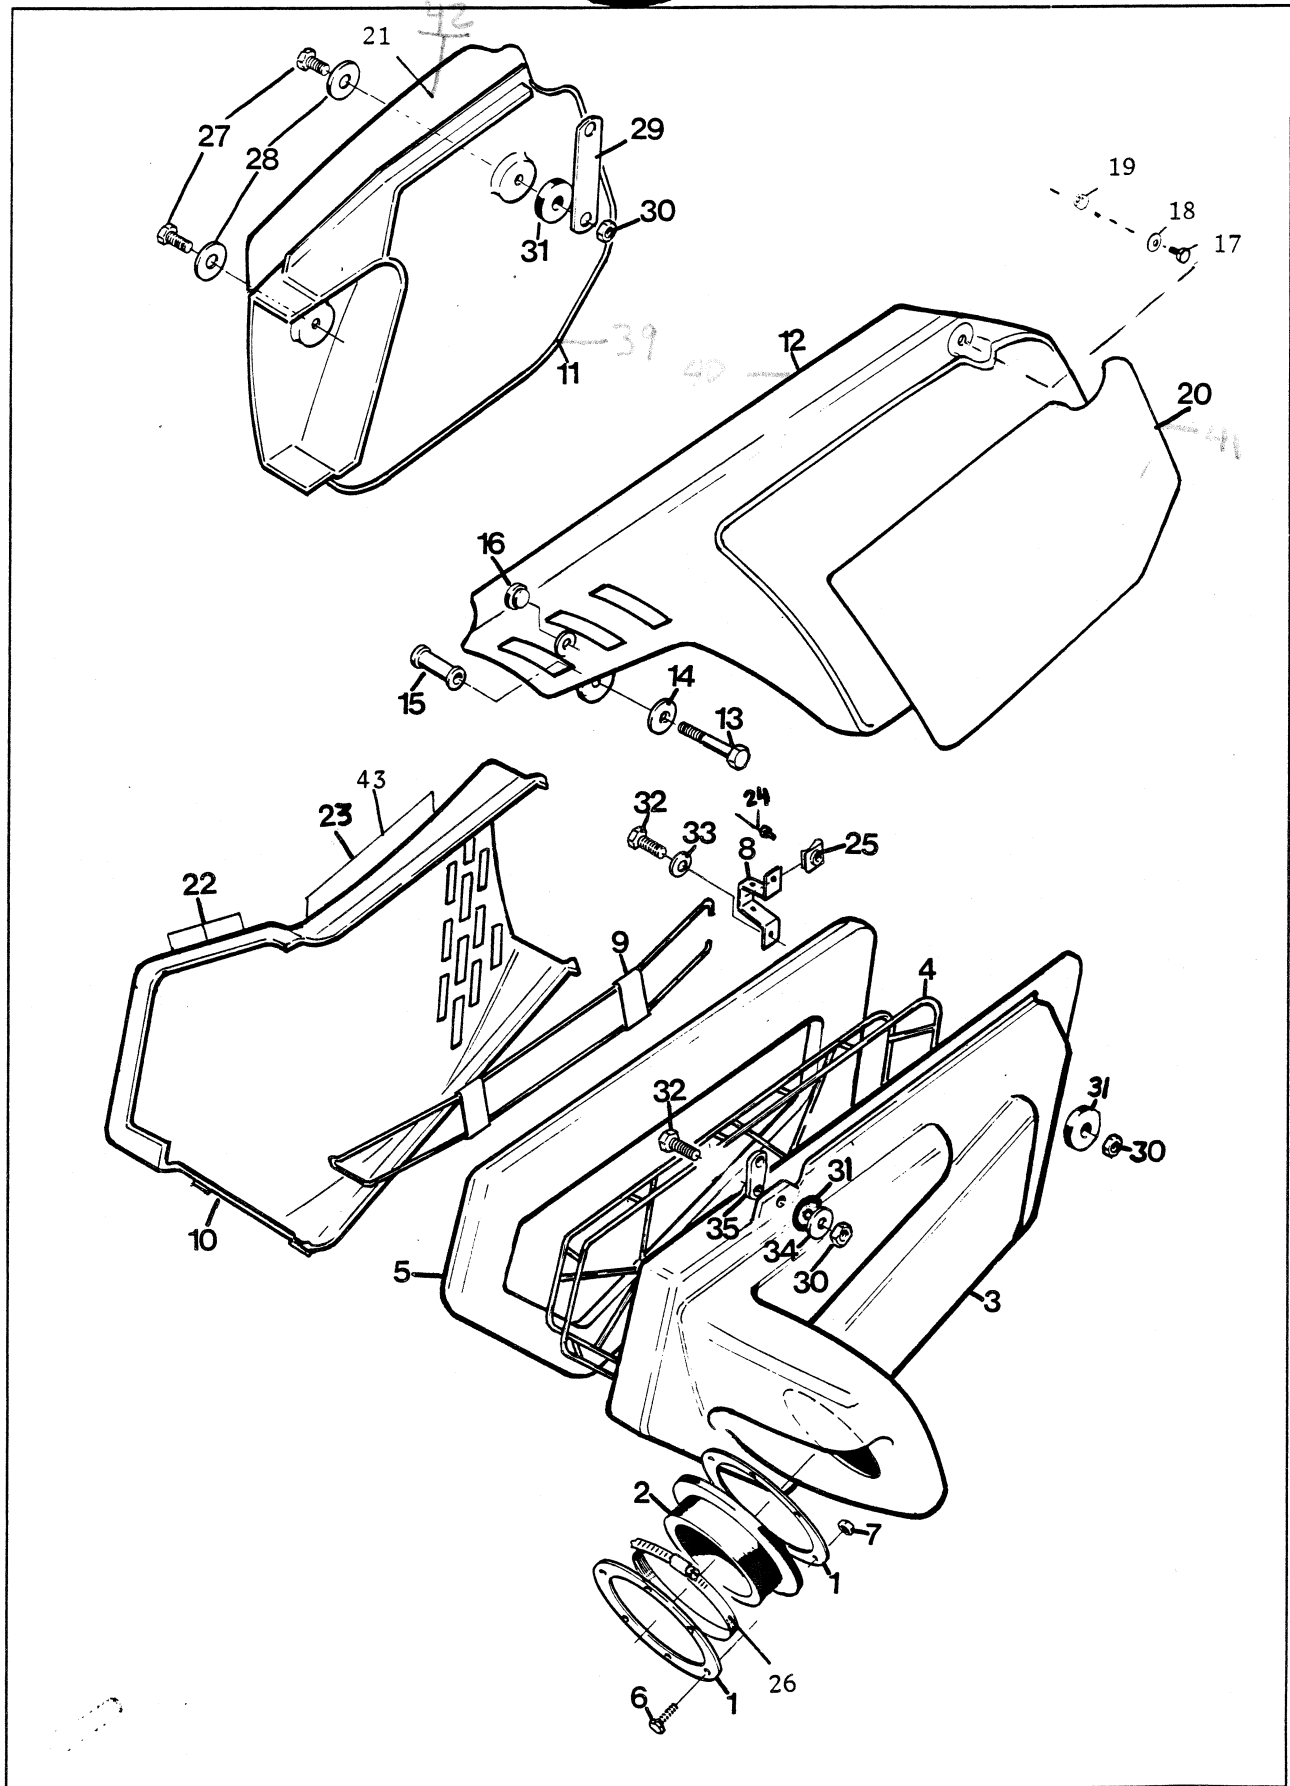

SIDE PNL RIGHT
SIDE PNL LEFT
DECAL LEFT YELLOW
GREEN
DECAL RHE YELLOW
GREEN

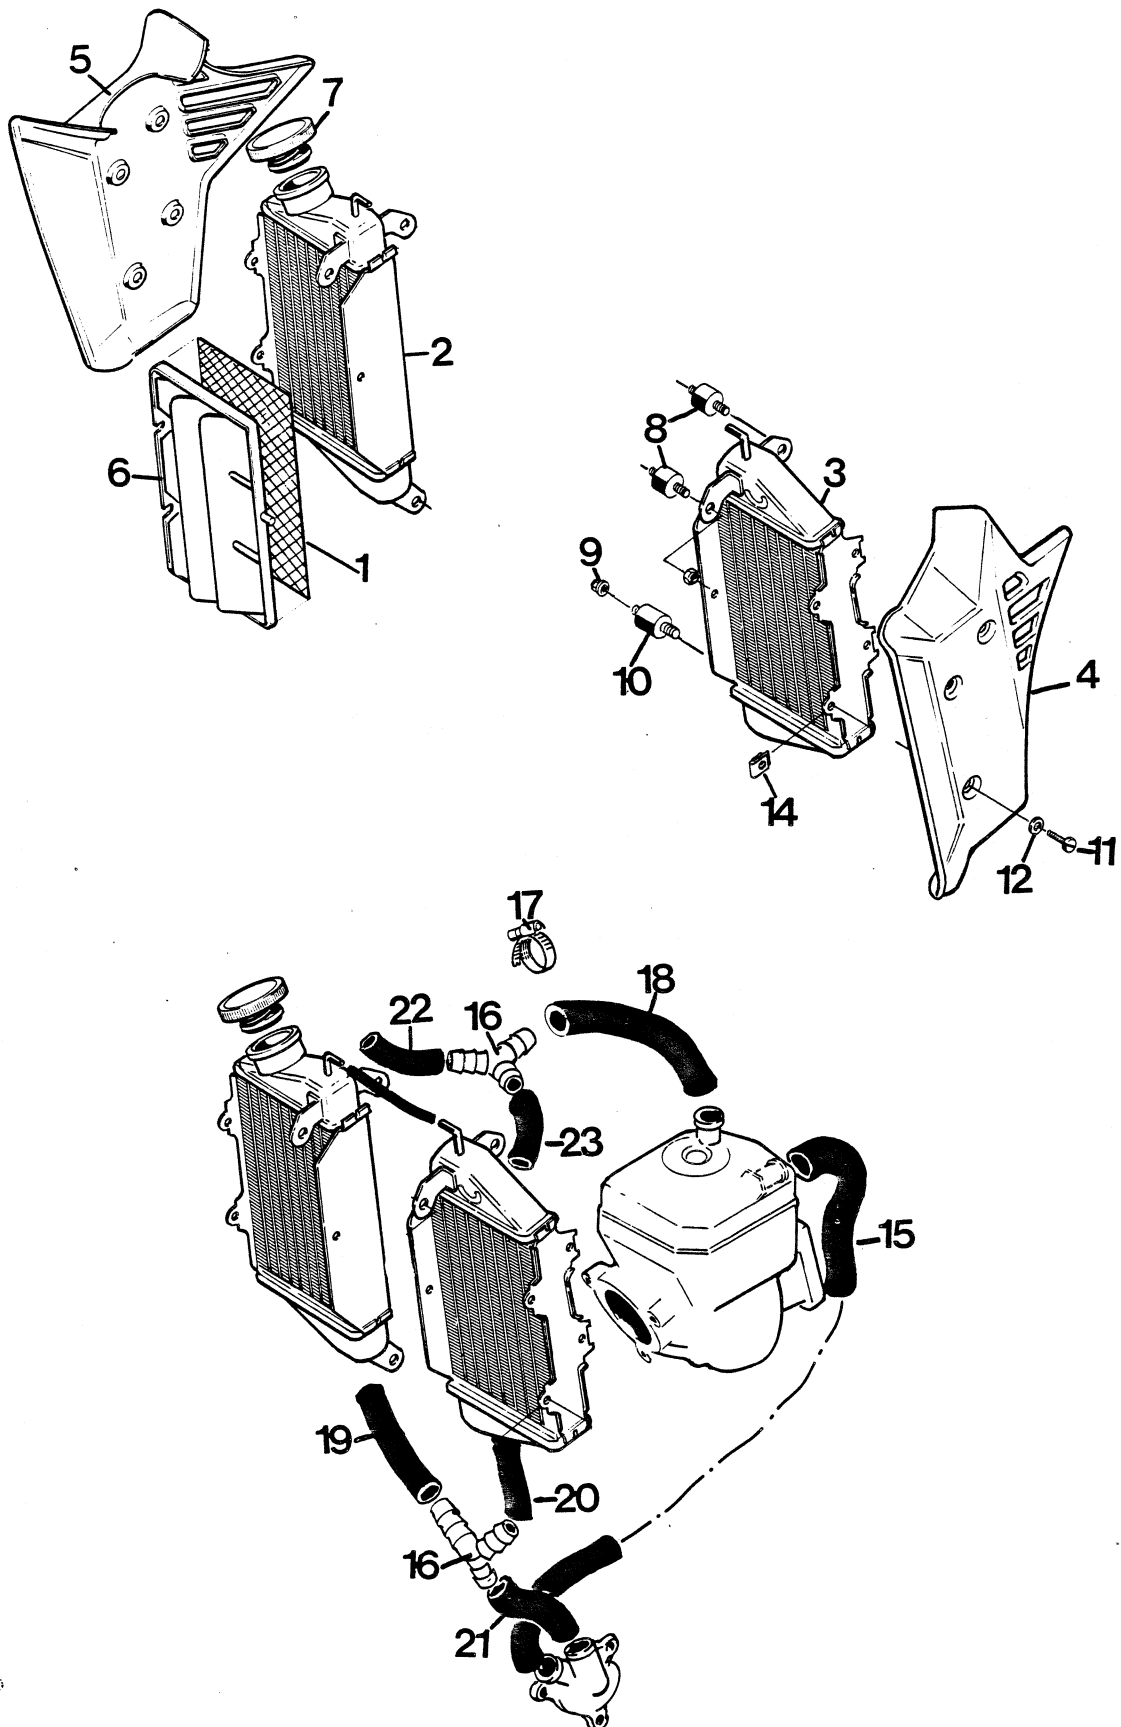


Fig.	Reservdelnummer Sparepart number	Antal - Quantity											Benämning, Description		
		125			250			400		500					
		CR		XC			CR	WRX	XC		WRX	CR			XC
N	1	15 13 905-01	2		2		2		2					Kylargaller, Screen	
N	2	15 13 902-01 15 14 142-01	1		1		1	1	1		1		1	Kylare, Radiator Kylare, Radiator	
N	3	15 13 904-01 15 14 141-01	1		1		1	1	1		1		1	Kylare, Radiator Kylare, Radiator	
N	4	15 13 908-01	1		1		1	1	1		1	1	1	Spoiler vänster, Spoiler left	
N	5	15 13 909-01	1		1		1	1	1		1	1	1	Spoiler höger, Spoiler right	
N	6	15 13 906-01 15 14 144-01	2		2		2	2	2		2	2	2	Stänkskydd, Splash shield Stänkskydd, Splash shield	
	7	15 14 126-01	1		1		1	1	1		1	1	1	Kylarlock, Radiator lock	
	8	15 17 090-04	4		4		4	4	4		4	4	4	Vibrationsdämpare, Damper	
	9	15 13 706-01	8		8		8	8	8		8	8	8	Mutter M6, Nut	
	10	15 17 090-05	2		2		2	2	2		2	2	2	Vibrationsdämpare, Damper	
	11	72 95 414-01 72 31 366-01	6		6		6	6	6		6	6	6	Skruv, Screw Skruv, Screw	
	12	73 44 926-01	6		6		6	6	6		6	6	6	Bricka, Washer	
N	14	15 13 907-01 15 14 129-01	6		6		6	6	6		6	6	6	Snabbmutter, Nut Snabbmutter, Nut	
	15	16 17 965-01					1	1	1		1	1	1	Kylarslang, Hose	
	16	15 14 149-01	2		2		2	2	2		2	2	2	Förgrening, Y-branch	
	17	15 13 740-01	12		12		12	12	12		12	12	12	Slangklämma, Hose clamp	
	18	15 13 916-01 15 13 916-02 15 13 916-03					1	1	1		1	1	1	Kylarslang, Hose Kylarslang, Hose Kylarslang, Hose	
	19	15 13 914-01 15 13 917-01	1		1		1	1	1		1	1	1	Kylarslang, Hose Kylarslang, Hose	
	20	15 13 915-01 15 13 916-04	1		1		1	1	1		1	1	1	Kylarslang, Hose Kylarslang, Hose	
	21	15 13 918-01 15 13 919-01	1		1		1	1	1		1	1	1	Kylarslang, Hose Kylarslang, Hose	
	22	15 13 913-01	1		1		1	1	1		1	1	1	Kylarslang, Hose	
	23	15 13 913-02	1		1		1	1	1		1	1	1	Kylarslang, Hose	

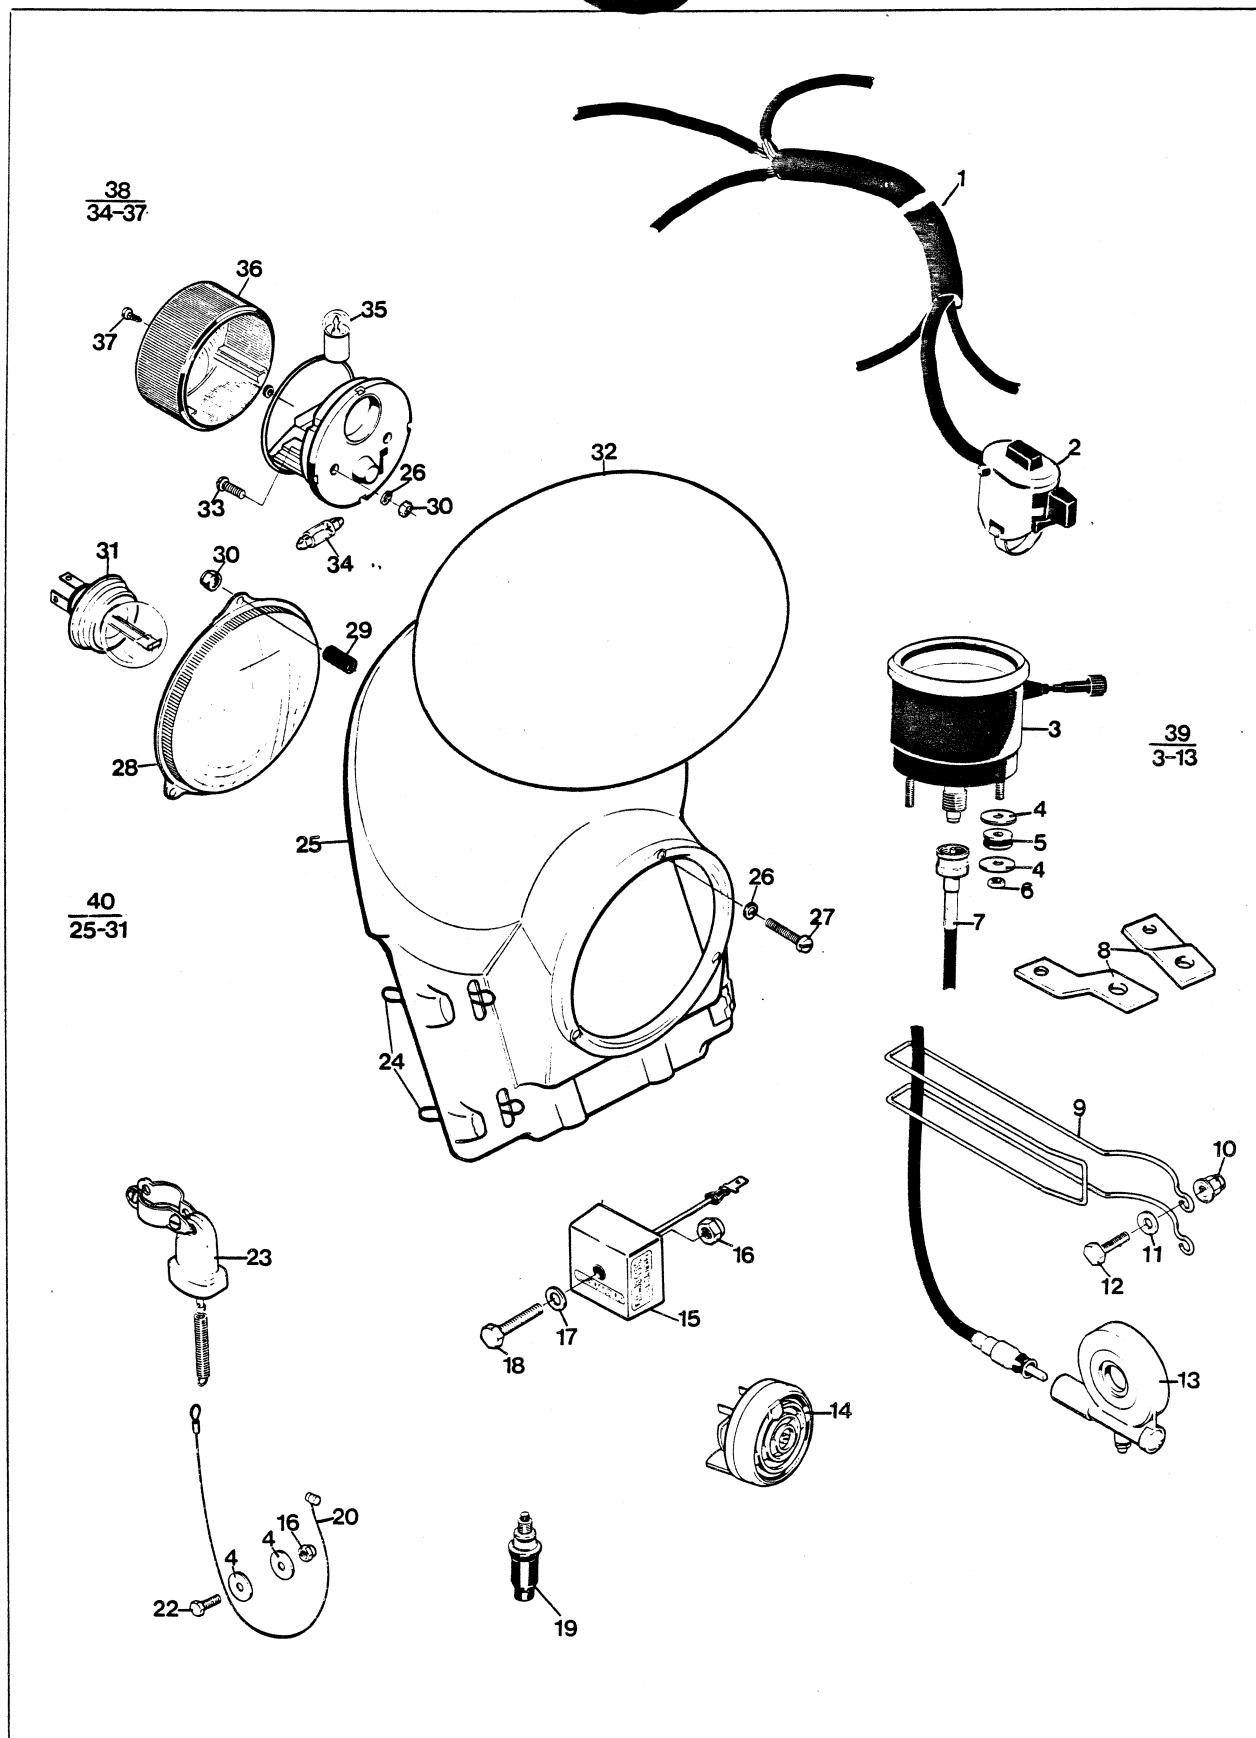
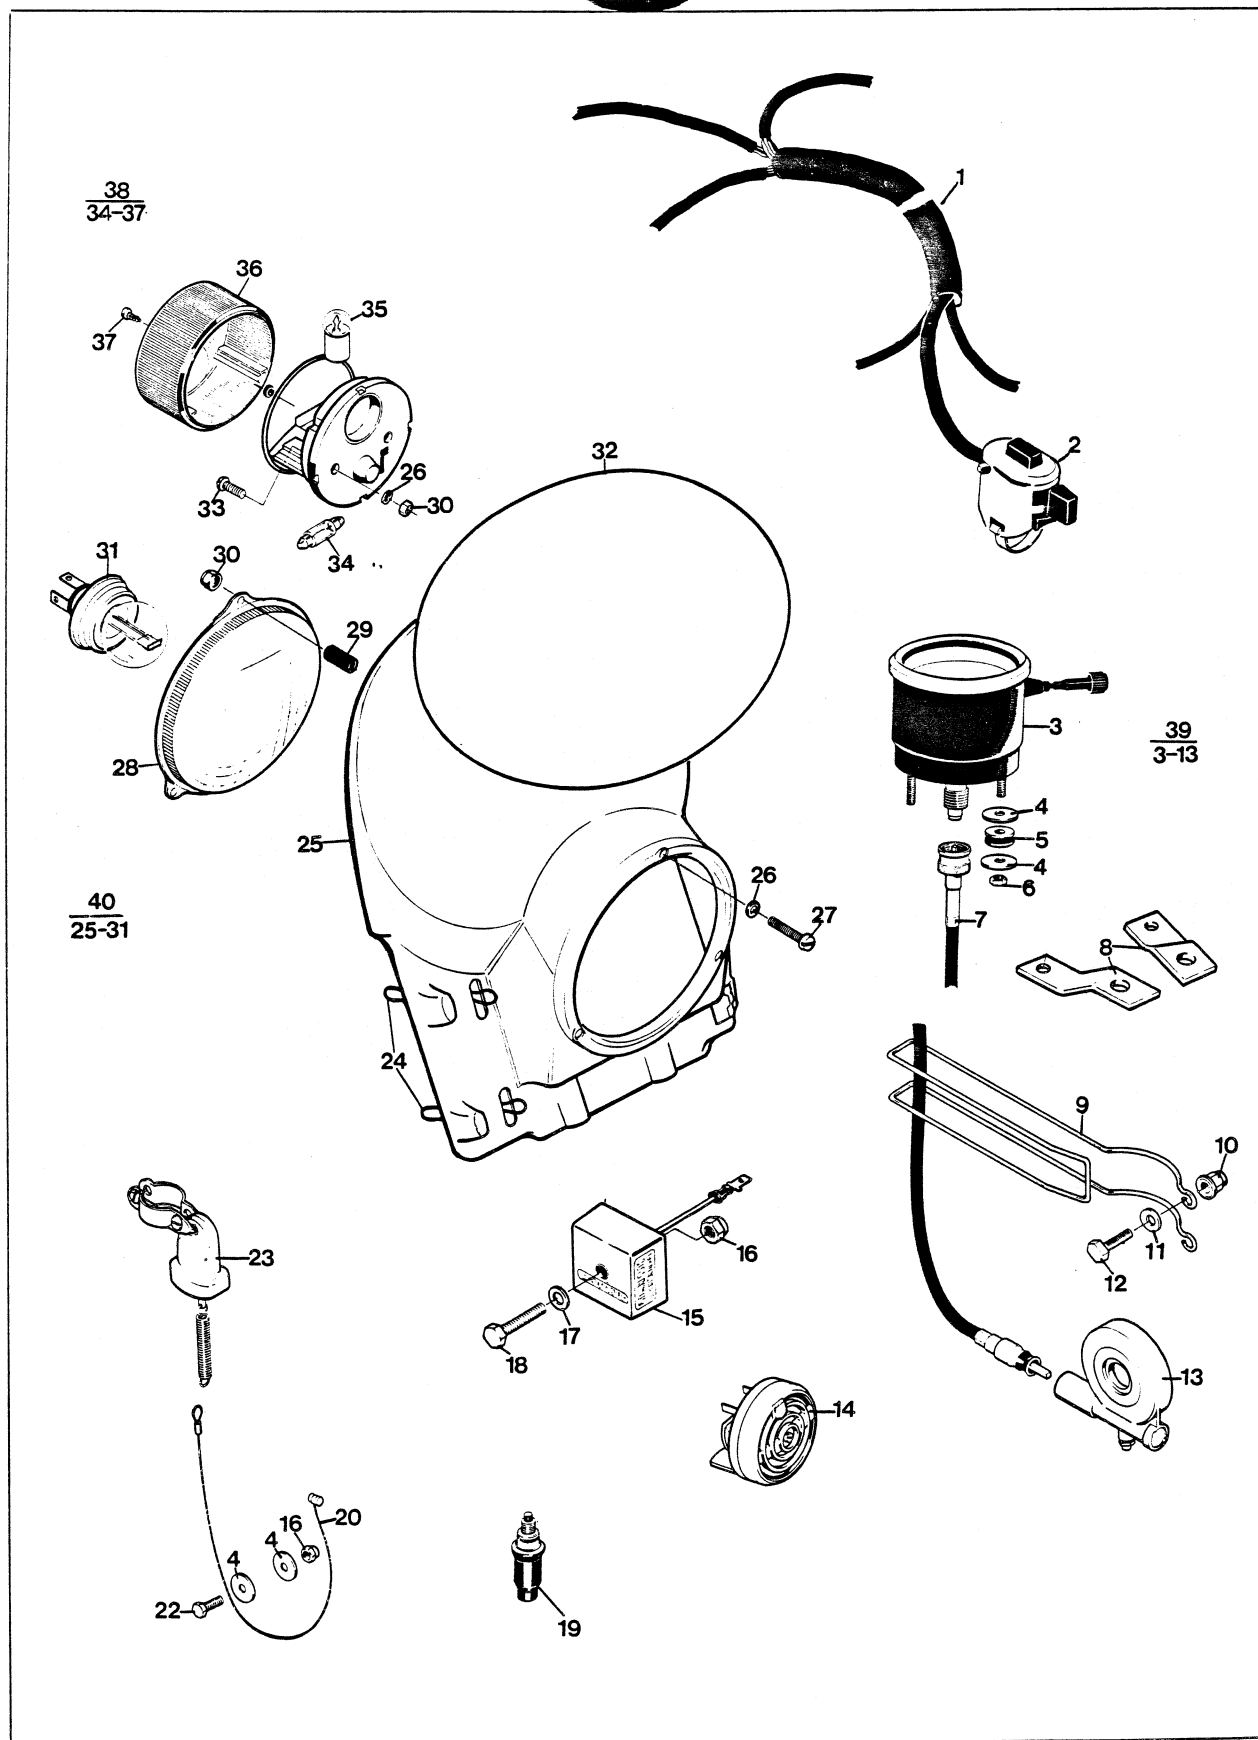
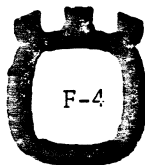


Fig.	Part Number Detaljnummer	Quantity/Antal										Description Benämning				
		125		250			400	500								
		CR		XC			CR	WRX	XC		WRX			CR	XC	
1	15 17 419-01 15 17 416-01														Kabelmatta Harness	
2	15 17 292-01														Omkopplare Switch	
3	15 19 877-01 15 17 493-03							1		1					Hastighetsmätare MPH Speedometer	
4	15 13 709-01							4		4					Bricka 6.5 × 22 Washer	
5	50 15 495-01							2		2					Bussning Bushing	
6	73 22 114-01							2		2					Mutter M5 Nut	
7	15 17 495-01							1		1					Hastighetsmätarwire Speedometer wire	
8	15 17 418-01							2		2					Fäste Attachment	
9	15 17 306-01							1		1					Bygel Wire protector	
10	73 22 116-01							2		2					Mutter M6 Nut	
11	73 41 153-01							2		2					Bricka Washer	
12	72 52 371-51							2		2					Skruv M6 × 22 Screw	
13	15 17 494-01							1		1					Vinkelväxel Drive	
14	15 17 420-01														Signal Horn	
15	16 14 757-01							1		1					Spänningsregulator Voltage regulator	
16	73 22 116-01							2		2					Mutter M6 Nut	
17	73 41 153-01							2		2					Bricka 6.4 × 14 Washer	
18	72 52 376-51							1		1					Skruv M6 × 35 Screw	
19	15 17 328-01														Bromsljuskontakt Brake light switch	
20	15 17 364-02														Wire	
22	72 52 368-51														S; Skruv M6 × 16 Screw	
23	15 17 313-01														Bromsljuskontakt Brake light switch	
24	15 17 516-01							3		3					O-ring 84.5 × 3	
25	15 17 511-01							1		1					Kåpa Head light	
26	73 41 146-01							3		3					Bricka 5.3 × 10 Washer	
27	72 32 33-31							3		3					Skruv M5 × 25 Screw	
28	15 17 428-01 15 17 488-01							1		1					Reflektor Reflector	
29	15 14 078-04							3		3					Slang Hose	
30	72 22 114-01							3		3					Mutter M5 Nut	
31	15 17 409-01 15 19 615-01							1		1					Glödlampa 12V – 45/40W Bulb	
32								1		1					Nummer oval, gul Number oval, yellow	
33	72 31 327-51							2		2					Skruv M5 × 10 Screw	
34	15 19 617-01							1		1					Glödlampa 12V – 5W Bulb	
35	15 19 616-01														Glödlampa 12V – 10W Bulb	
36	15 17 389-01							1		1					Lyktglas Lens	
38	15 17 355-01							1		1					Baklykta Tail light	



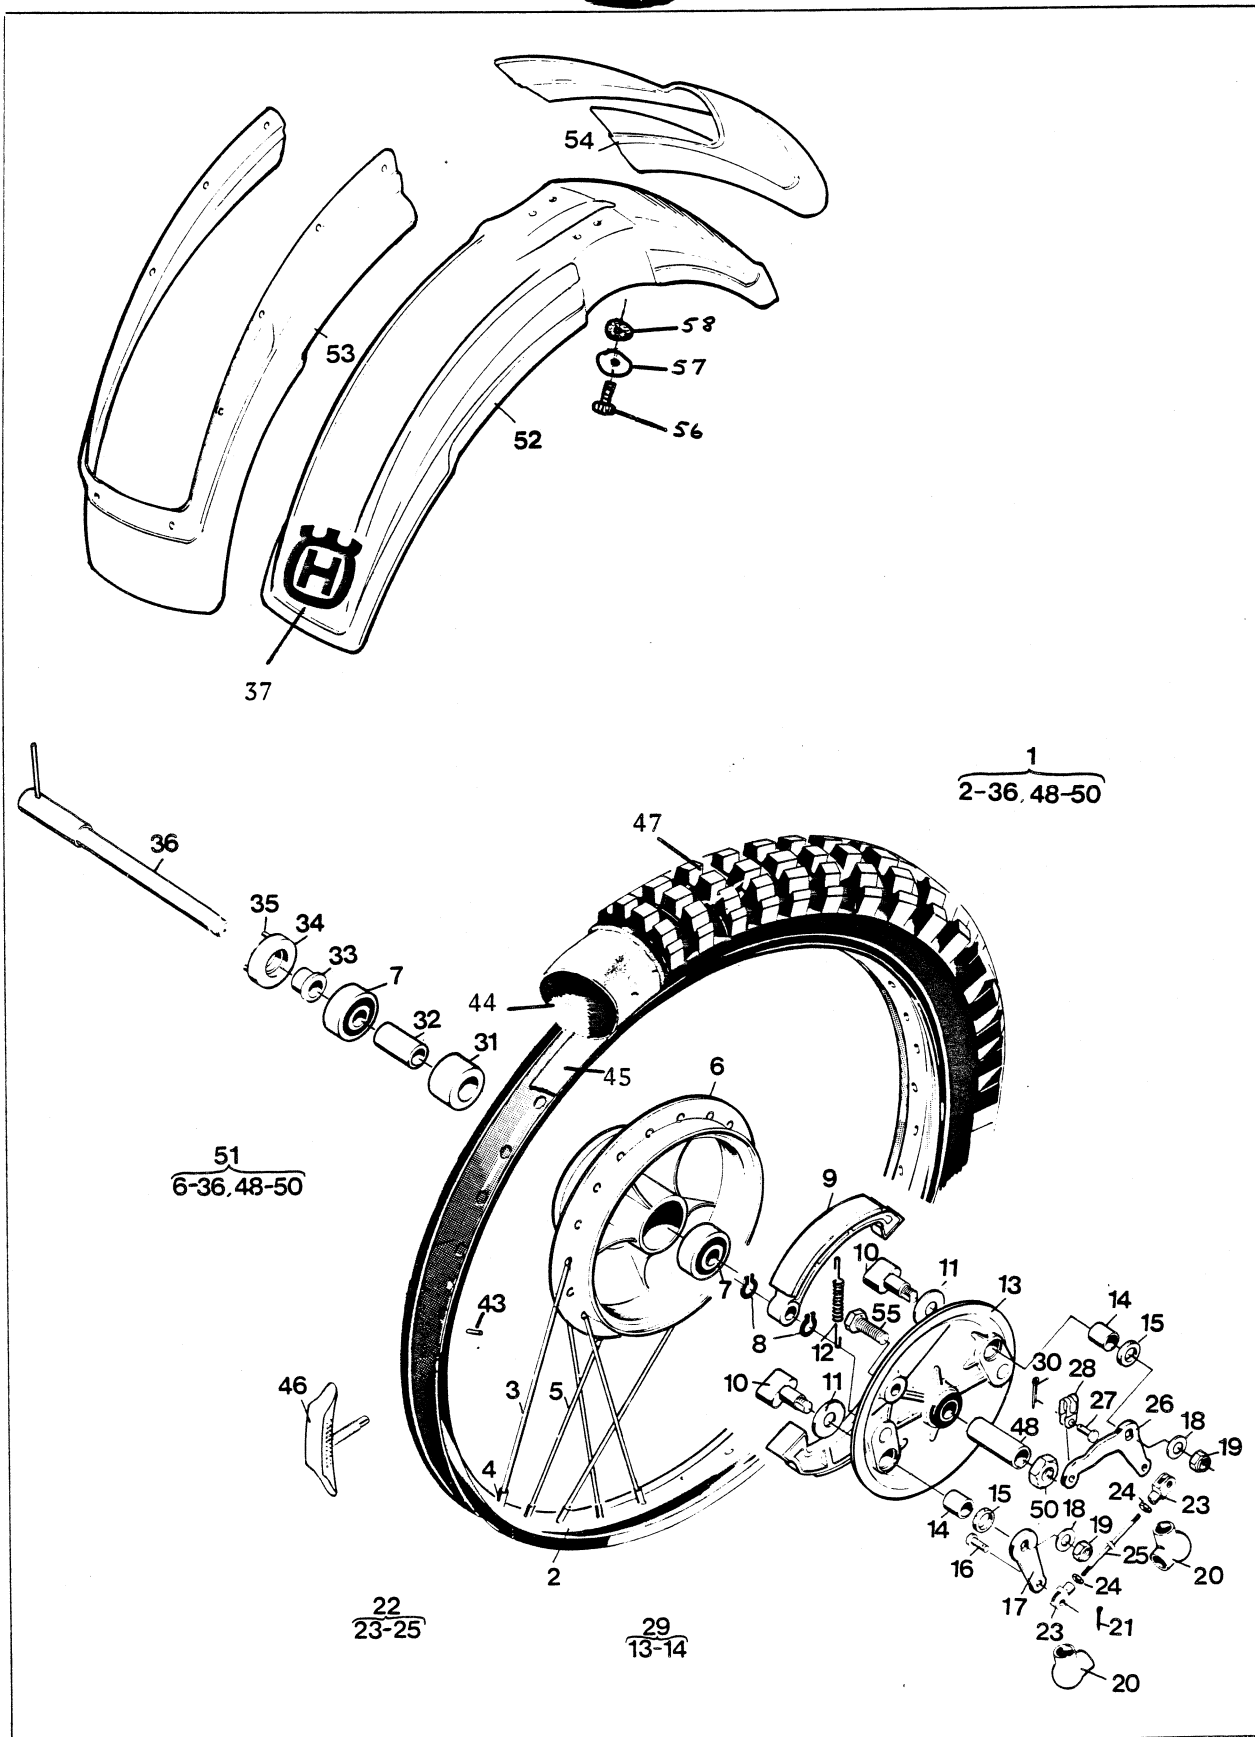


Fig.	Part Number Detaljnummer	Quantity/Antal										Description Benämning			
		125			250			400			500				
		CR		XC		CR	WRX	XC		WRX	CR			XC	
1	15 16 244-01						1			1				Framhjul, kpl. utan gummi Front wheel without rubber	
2	15 16 273-01						1			1				Fälg 1.60 x 21" Rim	
3	15 16 218-03						18			18				Eker L = 227. Spoke	
4	15 16 219-01						36			36				Nippel Nipple	
5	15 16 218-05						18			18				Eker L = 240 Spoke	
6	15 16 301-01						1			1				Navhylsa Hub	
7	73 82 302-34						2			2				Lager 6302 - 2 RS Bearing	
8	73 53 114-00						4			4				Spårring SGA 12 Circlip	
9	15 16 278-01						2			2				Bromsback Brake shoe	
10	15 16 283-01						2			2				Excenter	
11	15 16 836-01						2			2				Bricka Washer	
12	15 16 547-01						2			2				Fjäder Spring	
14	15 16 281-01						2			2				Bussning Bushing	
15	15 16 299-01						2			2				Tätning Seal	
16	15 16 289-01						2			2				Bult Bolt	
17	15 16 288-01						1			1				Hävarm Lever	
18	73 41 164-01						2			2				Bricka 8.4 x 17 Washer	
19	73 22 118-01						2			2				Mutter M8 Nut	
20	15 16 298-01						2			2				Dammskydd Cover	
21	72 16 150-01						2			2				Pinne SP2 x 10 Pin	
22	15 16 285-01						1			1				Gaffellänk, kpl. Link compl.	
26	15 16 284-01						1			1				Hävarm Lever	
27	12 25 258-01						1			1				Bult Bolt	
28	15 16 194-01						1			1				Bygel Strop	
29	15 16 275-01						1			1				Bromssköld, kpl. Brake plate, compl.	
30	72 16 150-01						1			1				Pinne SP2 x 12 Pin	
31	15 16 215-01						1			1				Distanshållare Spacer holder	
32	15 16 228-01						1			1				Distans Spacer	
33	15 16 212-01						1			1				Distans Spacer	
34	15 16 213-01						1			1				Medbringare Drive	
35	72 14 207-00						2			2				Pinne FRP 3 x 14 Pin	
36	15 16 255-02						1			1				Axel, kpl. Shaft, compl.	
37	15 14 117-01						1			1				Decal	


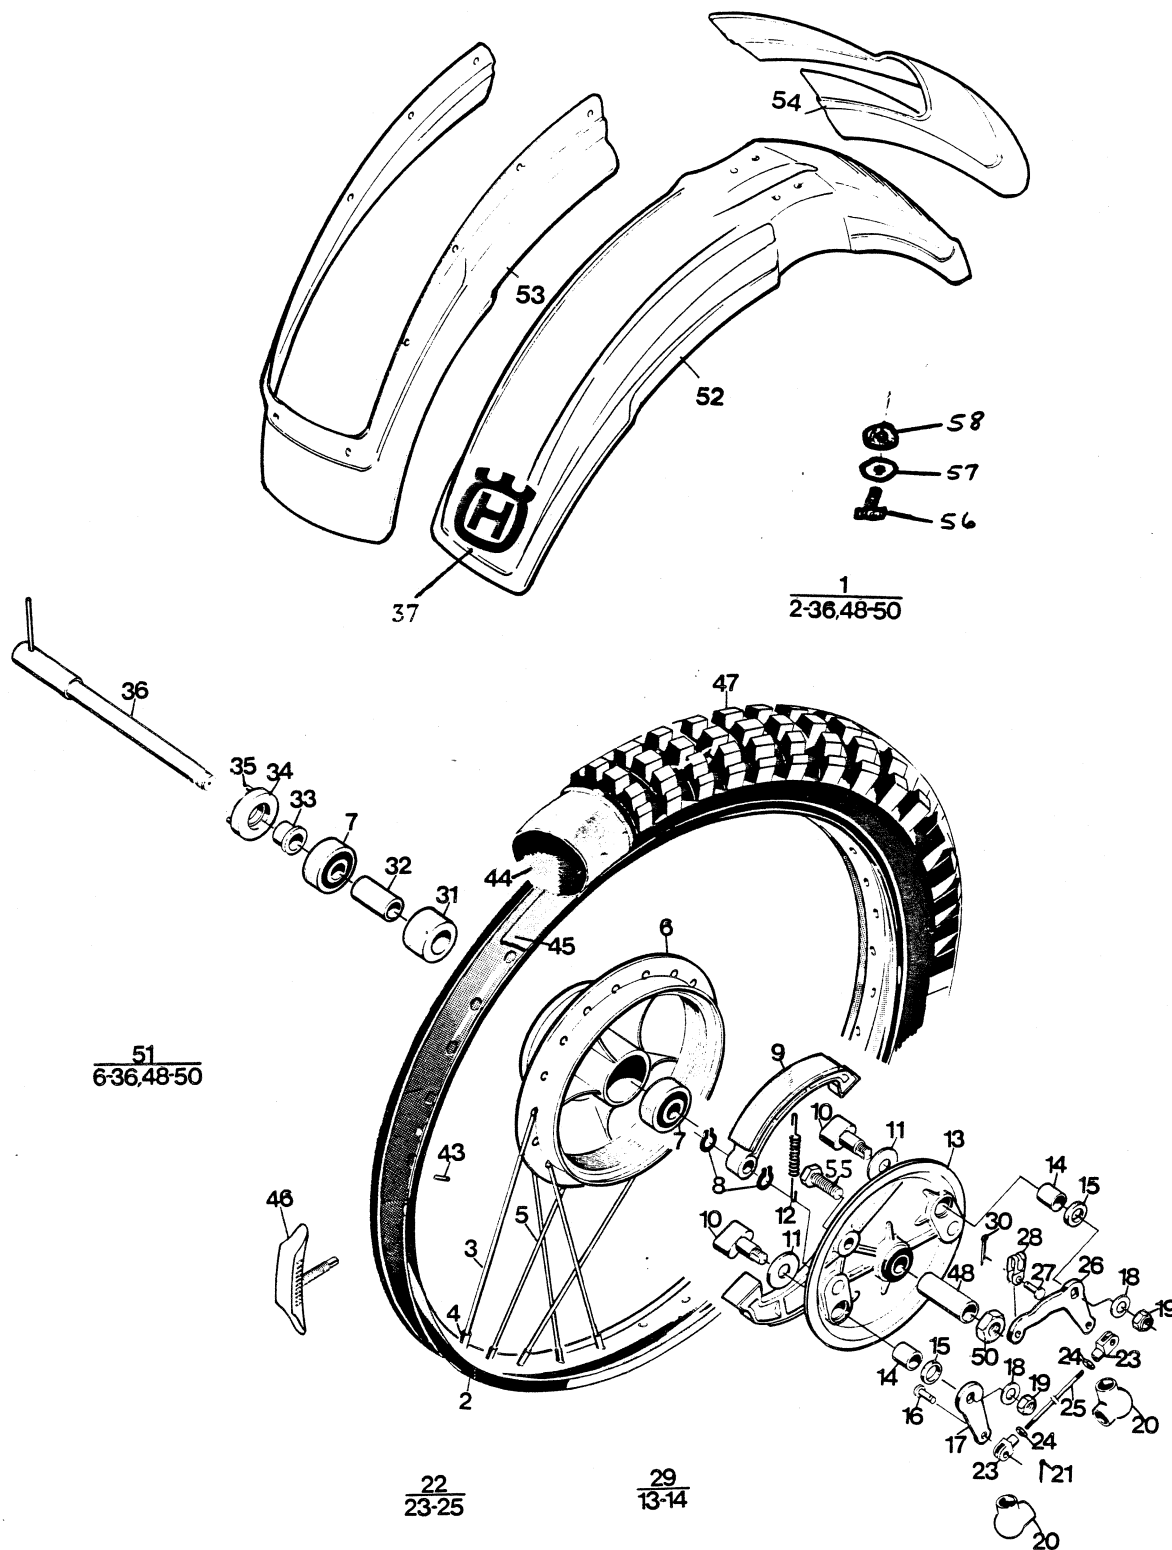


Fig.	Part Number Detaljnummer	Quantity/Antal												Description Benämning		
		125			250			400		500						
		CR		XC			CR	WRX	XC		WRX	CR	XC			
43	72 01 232-00							18			18				Pinne CP 3 × 8 Pin	
44	15 16 028-01							1			1				Innerslang Tube	
45	15 16 029-01							1			1				Fälgband Rimband	
46	15 16 144-01														Däcklås Rim lock	
47	15 16 257-01							1			1				Däck Trelleborg 3.00 × 21 Deep grip	
48	15 16 249-01							1			1				Distans Spacer	
50	15 16 238-01							1			1				Mutter Nut	
51	15 16 270-01							1			1				Framnav. kpl. Front hub. compl.	
N 52	15 18 047-02							1			1				Framskärm Fender	
55	72 52 493-51							1			1				Skruv M 10 × 25 Screw	
56	72 52 372-01							4			4					
57	15 13 709-01							8			8				WASHER	
58	15 18 121-01							8			8				RUBBER WASHER	
Tillbehör/Accessories																
N 53	15 18 050-01														Skärmbreddare Widener	
N 54	15 18 049-01														Skärmlängare Lengthener	
	15 19 644-01														Ekersats Spokekit	
	15 19 902-01														Nippelsats Nipple kit	

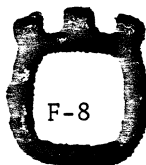